

# Mitsubishi Serial Driver

© 2017 PTC Inc. All Rights Reserved.

# Table of Contents

<b>Mitsubishi Serial Driver</b> .....	<b>1</b>
<b>Table of Contents</b> .....	<b>2</b>
Mitsubishi Serial Driver .....	4
Overview .....	4
<b>Setup</b> .....	<b>5</b>
Channel Properties .....	5
Channel Properties - General .....	5
Channel Properties - Serial Communications .....	6
Channel Properties - Write Optimizations .....	9
Channel Properties - Advanced .....	10
Driver Device Properties .....	11
Device Properties - General .....	11
Device Properties - Scan Mode .....	12
Device Properties - Timing .....	13
Device Properties - Auto-Demotion .....	14
Device Properties - Bridging .....	14
Device Properties - 32-Bit Data .....	15
Device Properties - Redundancy .....	15
Multi-Level Networks .....	16
<b>Data Types Description</b> .....	<b>18</b>
<b>Address Descriptions</b> .....	<b>19</b>
Mitsubishi A Series Address Descriptions .....	19
Mitsubishi Q Series Address Descriptions .....	23
<b>Event Log Messages</b> .....	<b>29</b>
Device reported an invalid address or error. Block deactivated.   Block address range = '<address>' to '<address>'. .....	29
Received block length does not match expected length.   Received block length = <number> (bytes), Expected block length = <number> (bytes). .....	29
Error code received from device.   Error code = <code>h. ....	29
Possible network number problem with device. ....	29
Possible PC number problem with device. ....	30
Error Mask Definitions .....	30
<b>Appendix: PLC Setup</b> .....	<b>31</b>
A1SJ71C24-R2 Settings and Diagrams .....	32
A1SJ71C24-R4 Settings and Diagrams .....	33
AJ71C24-S8 Setting and Diagrams .....	34

QJ71C24N Configuration .....35

**Index** ..... **39**

---

## Mitsubishi Serial Driver

---

Help version 1.037

### CONTENTS

#### [Overview](#)

What is the Mitsubishi Serial Driver?

#### [Device Setup](#)

How do I configure a device for use with this driver?

#### [Data Types Description](#)

What data types does this driver support?

#### [Address Descriptions](#)

How do I address a data location on a Mitsubishi Serial device?

#### [Event Log Messages](#)

What error messages does the Mitsubishi Serial Driver produce?

#### [Appendix: PLC Setup](#)

---

### Overview

---

The Mitsubishi Serial Driver provides a reliable way to connect Mitsubishi Serial devices to client applications; including HMI, SCADA, Historian, MES, ERP, and countless custom applications. It is intended for use with Mitsubishi A and Q Series devices communicating via the AJ71C24 and QJ71C24N communications cards (among other communication cards that support the specified communication protocols). *For more information, refer to [Setup](#).*

## Setup

---

### Supported Devices

A-Series PLCs  
Q-Series PLCs

### Communication Protocol

Format 1 with Checksum Enabled for A Series  
Format 5 with Checksum Enabled for Q Series

### Supported Communication Parameters

Baud Rate: 300, 600, 1200, 2400, 9600, 19200 or 38400  
Parity: None, Even or Odd  
Data Bits: 5, 6, 7 or 8  
Stop Bits: 1 or 2

### Ethernet Encapsulation

This driver supports Ethernet Encapsulation, which allows the driver to communicate with serial devices attached to an Ethernet network using a serial-to-Ethernet terminal server. Ethernet Encapsulation can be enabled through the channel properties. For more information, refer to the server help file.

[Channel Properties](#)

[Device Properties](#)

[Appendix: PLC Setup](#)

## Channel Properties

---

This server supports the use of simultaneous multiple communications drivers. Each protocol or driver used in a server project is called a channel. A server project may consist of many channels with the same communications driver or with unique communications drivers. A channel acts as the basic building block of an OPC link.

The properties associated with a channel are broken in to logical groupings. While some groups are specific to a given driver or protocol, the following are the common groups:

[General](#)

[Ethernet or Serial Communications](#)

[Write Optimization](#)

[Advanced](#)

### Channel Properties - General

---

This server supports the use of simultaneous multiple communications drivers. Each protocol or driver used in a server project is called a channel. A server project may consist of many channels with the same communications driver or with unique communications drivers. A channel acts as the basic building block of an OPC link. This group is used to specify general channel properties, such as the identification attributes and operating mode.

Property Groups	[-] <b>Identification</b>	
<b>General</b>	Name	
Write Optimizations	Description	
Advanced	Driver	
	[-] <b>Diagnostics</b>	
	Diagnostics Capture	Disable

## Identification

**Name:** User-defined identity of this channel. In each server project, each channel name must be unique. Although names can be up to 256 characters, some client applications have a limited display window when browsing the OPC server's tag space. The channel name is part of the OPC browser information.

• For information on reserved characters, refer to "How To... Properly Name a Channel, Device, Tag, and Tag Group" in the server help.

**Description:** User-defined information about this channel.

• Many of these properties, including Description, have an associated system tag.

**Driver:** Selected protocol / driver for this channel. This property specifies the device driver that was selected during channel creation. It is a disabled setting in the channel properties.

• **Note:** With the server's online full-time operation, these properties can be changed at any time. This includes changing the channel name to prevent clients from registering data with the server. If a client has already acquired an item from the server before the channel name is changed, the items are unaffected. If, after the channel name has been changed, the client application releases the item and attempts to re-acquire using the old channel name, the item is not accepted. With this in mind, changes to the properties should not be made once a large client application has been developed. Utilize the User Manager to prevent operators from changing properties and restrict access rights to server features.

## Diagnostics

**Diagnostics Capture:** When enabled, this option makes the channel's diagnostic information available to OPC applications. Because the server's diagnostic features require a minimal amount of overhead processing, it is recommended that they be utilized when needed and disabled when not. The default is disabled.

• **Note:** This property is disabled if the driver does not support diagnostics.

• For more information, refer to "Communication Diagnostics" in the server help.

## Channel Properties - Serial Communications

Serial communication properties are available to serial drivers and vary depending on the driver, connection type, and options selected. Below is a superset of the possible properties.

Click to jump to one of the sections: [Connection Type](#), [Serial Port Settings](#) or [Ethernet Settings](#), and [Operational Behavior](#).

• **Note:** With the server's online full-time operation, these properties can be changed at any time. Utilize the User Manager to restrict access rights to server features, as changes made to these properties can temporarily disrupt communications.

Property Groups	<input type="checkbox"/> <b>Connection Type</b>	
General	Physical Medium	COM Port
<b>Serial Communications</b>	Shared	No
Write Optimizations	<input type="checkbox"/> <b>Serial Port Settings</b>	
Advanced	COM ID	6
Communication Serialization	Baud Rate	9600
	Data Bits	8
	Parity	Even
	Stop Bits	1
	Flow Control	None
	<input type="checkbox"/> <b>Operational Behavior</b>	
	Report Comm. Errors	Enable
	Close Idle Connection	Enable
	Idle Time to Close (s)	15

## Connection Type

**Physical Medium:** Choose the type of hardware device for data communications. Options include COM Port, None, Modem, and Ethernet Encapsulation. The default is COM Port.

- **None:** Select None to indicate there is no physical connection, which displays the [Operation with no Communications](#) section.
- **COM Port:** Select Com Port to display and configure the [Serial Port Settings](#) section.
- **Modem:** Select Modem if phone lines are used for communications, which are configured in the [Modem Settings](#) section.
- **Ethernet Encap.:** Select if Ethernet Encapsulation is used for communications, which displays the [Ethernet Settings](#) section.
- **Shared:** Verify the connection is correctly identified as sharing the current configuration with another channel. This is a read-only property.

## Serial Port Settings

**COM ID:** Specify the Communications ID to be used when communicating with devices assigned to the channel. The valid range is 1 to 9991 to 16. The default is 1.

**Baud Rate:** Specify the baud rate to be used to configure the selected communications port.

**Data Bits:** Specify the number of data bits per data word. Options include 5, 6, 7, or 8.

**Parity:** Specify the type of parity for the data. Options include Odd, Even, or None.

**Stop Bits:** Specify the number of stop bits per data word. Options include 1 or 2.


**Flow Control:** Select how the RTS and DTR control lines are utilized. Flow control is required to communicate with some serial devices. Options are:

- **None:** This option does not toggle or assert control lines.
- **DTR:** This option asserts the DTR line when the communications port is opened and remains on.

- **RTS:** This option specifies that the RTS line is high if bytes are available for transmission. After all buffered bytes have been sent, the RTS line is low. This is normally used with RS232/RS485 converter hardware.
- **RTS, DTR:** This option is a combination of DTR and RTS.
- **RTS Always:** This option asserts the RTS line when the communication port is opened and remains on.
- **RTS Manual:** This option asserts the RTS line based on the timing properties entered for RTS Line Control. It is only available when the driver supports manual RTS line control (or when the properties are shared and at least one of the channels belongs to a driver that provides this support).

RTS Manual adds an **RTS Line Control** property with options as follows:

- **Raise:** This property specifies the amount of time that the RTS line is raised prior to data transmission. The valid range is 0 to 9999 milliseconds. The default is 10 milliseconds.
- **Drop:** This property specifies the amount of time that the RTS line remains high after data transmission. The valid range is 0 to 9999 milliseconds. The default is 10 milliseconds.
- **Poll Delay:** This property specifies the amount of time that polling for communications is delayed. The valid range is 0 to 9999. The default is 10 milliseconds.


 **Tip:** When using two-wire RS-485, "echoes" may occur on the communication lines. Since this communication does not support echo suppression, it is recommended that echoes be disabled or a RS-485 converter be used.

## Operational Behavior

- **Report Comm. Errors:** Enable or disable reporting of low-level communications errors. When enabled, low-level errors are posted to the Event Log as they occur. When disabled, these same errors are not posted even though normal request failures are. The default is Enable.
- **Close Idle Connection:** Choose to close the connection when there are no longer any tags being referenced by a client on the channel. The default is Enable.
- **Idle Time to Close:** Specify the amount of time that the server waits once all tags have been removed before closing the COM port. The default is 15 seconds.

## Ethernet Settings

Ethernet Encapsulation provides communication with serial devices connected to terminal servers on the Ethernet network. A terminal server is essentially a virtual serial port that converts TCP/IP messages on the Ethernet network to serial data. Once the message has been converted, users can connect standard devices that support serial communications to the terminal server. The terminal server's serial port must be properly configured to match the requirements of the serial device to which it is attached. *For more information, refer to "How To... Use Ethernet Encapsulation" in the server help.*

- **Network Adapter:** Indicate a network adapter to bind for Ethernet devices in this channel. Choose a network adapter to bind to or allow the OS to select the default.
  -  *Specific drivers may display additional Ethernet Encapsulation properties. For more information, refer to Channel Properties - Ethernet Encapsulation.*

## Modem Settings

- **Modem:** Specify the installed modem to be used for communications.
- **Connect Timeout:** Specify the amount of time to wait for connections to be established before failing a read or write. The default is 60 seconds.



- **Modem Properties:** Configure the modem hardware. When clicked, it opens vendor-specific modem properties.
- **Auto-Dial:** Enables the automatic dialing of entries in the Phonebook. The default is Disable. *For more information, refer to "Modem Auto-Dial" in the server help.*
- **Report Comm. Errors:** Enable or disable reporting of low-level communications errors. When enabled, low-level errors are posted to the Event Log as they occur. When disabled, these same errors are not posted even though normal request failures are. The default is Enable.
- **Close Idle Connection:** Choose to close the modem connection when there are no longer any tags being referenced by a client on the channel. The default is Enable.
- **Idle Time to Close:** Specify the amount of time that the server waits once all tags have been removed before closing the modem connection. The default is 15 seconds.

## Operation with no Communications

- **Read Processing:** Select the action to be taken when an explicit device read is requested. Options include Ignore and Fail. Ignore does nothing; Fail provides the client with an update that indicates failure. The default setting is Ignore.

## Channel Properties - Write Optimizations

As with any OPC server, writing data to the device may be the application's most important aspect. The server intends to ensure that the data written from the client application gets to the device on time. Given this goal, the server provides optimization properties that can be used to meet specific needs or improve application responsiveness.

Property Groups	<input type="checkbox"/> <b>Write Optimizations</b>	
General	Optimization Method	Write Only Latest Value for All Tags
<b>Write Optimizations</b>	Duty Cycle	10

## Write Optimizations

**Optimization Method:** controls how write data is passed to the underlying communications driver. The options are:

- **Write All Values for All Tags:** This option forces the server to attempt to write every value to the controller. In this mode, the server continues to gather write requests and add them to the server's internal write queue. The server processes the write queue and attempts to empty it by writing data to the device as quickly as possible. This mode ensures that everything written from the client applications is sent to the target device. This mode should be selected if the write operation order or the write item's content must uniquely be seen at the target device.
- **Write Only Latest Value for Non-Boolean Tags:** Many consecutive writes to the same value can accumulate in the write queue due to the time required to actually send the data to the device. If the server updates a write value that has already been placed in the write queue, far fewer writes are needed to reach the same final output value. In this way, no extra writes accumulate in the server's queue. When the user stops moving the slide switch, the value in the device is at the correct value at virtually the same time. As the mode states, any value that is not a Boolean value is updated in the server's internal write queue and sent to the device at the next possible opportunity. This can greatly improve the application performance.

- **Note:** This option does not attempt to optimize writes to Boolean values. It allows users to optimize the operation of HMI data without causing problems with Boolean operations, such as a momentary push button.
- **Write Only Latest Value for All Tags:** This option takes the theory behind the second optimization mode and applies it to all tags. It is especially useful if the application only needs to send the latest value to the device. This mode optimizes all writes by updating the tags currently in the write queue before they are sent. This is the default mode.

**Duty Cycle:** is used to control the ratio of write to read operations. The ratio is always based on one read for every one to ten writes. The duty cycle is set to ten by default, meaning that ten writes occur for each read operation. Although the application is performing a large number of continuous writes, it must be ensured that read data is still given time to process. A setting of one results in one read operation for every write operation. If there are no write operations to perform, reads are processed continuously. This allows optimization for applications with continuous writes versus a more balanced back and forth data flow.

● **Note:** It is recommended that the application be characterized for compatibility with the write optimization enhancements before being used in a production environment.

## Channel Properties - Advanced

This group is used to specify advanced channel properties. Not all drivers support all properties; so the Advanced group does not appear for those devices.

Property Groups	[-] <b>Non-Normalized Float Handling</b>	
General	Floating-Point Values	Replace with Zero
Write Optimizations	[-] <b>Inter-Device Delay</b>	
<b>Advanced</b>	Inter-Device Delay (ms)	0

**Non-Normalized Float Handling:** Non-normalized float handling allows users to specify how a driver handles non-normalized IEEE-754 floating point data. A non-normalized value is defined as Infinity, Not-a-Number (NaN), or as a Denormalized Number. The default is Replace with Zero. Drivers that have native float handling may default to Unmodified. Descriptions of the options are as follows:

- **Replace with Zero:** This option allows a driver to replace non-normalized IEEE-754 floating point values with zero before being transferred to clients.
- **Unmodified:** This option allows a driver to transfer IEEE-754 denormalized, normalized, non-number, and infinity values to clients without any conversion or changes.

● **Note:** This property is disabled if the driver does not support floating point values or if it only supports the option that is displayed. According to the channel's float normalization setting, only real-time driver tags (such as values and arrays) are subject to float normalization. For example, EFM data is not affected by this setting.

● *For more information on the floating point values, refer to "How To ... Work with Non-Normalized Floating Point Values" in the server help.*

**Inter-Device Delay:** Specify the amount of time the communications channel waits to send new requests to the next device after data is received from the current device on the same channel. Zero (0) disables the delay.

● **Note:** This property is not available for all drivers, models, and dependent settings.

## Driver Device Properties

---

The maximum number of channels supported by this driver is 100. The maximum number of devices supported is 32 per channel.

Device properties are organized into the following groups. Click on a link below for details about the settings in that group.

[General](#)

[Scan Mode](#)

[Timing](#)

[Auto-Demotion](#)

[Bridging](#)

[32-Bit Data](#)

[Redundancy](#)

### Device Properties - General

---

Property Groups	Identification	
<b>General</b>	Name	A Series
Scan Mode	Description	
Timing	Channel Assignment	Mitsubishi Serial
Auto-Demotion	Driver	Mitsubishi Serial
Bridging	Model	A Series
32-Bit Data	ID Format	Decimal
Redundancy	ID	0
	Operating Mode	
	Data Collection	Enable
	Simulated	No

#### Identification

**Name:** User-defined identity of this device.

**Description:** User-defined information about this device.

**Channel Assignment:** User-defined name of the channel to which this device currently belongs.

**Driver:** Selected protocol driver for this device.

**Model:** The specific version of the device, the C64 CNC Controller.

**ID Format:** Select how the device identity is formatted. Options include Decimal, Octal, and Hex.

**ID:** the station number of the device for communication with the driver. This may be the ultimate destination device for read and write commands or act as the bridge device to another network. The ID number can range from 0 to 31.

#### Operating Mode

**Data Collection:** This property controls the device's active state. Although device communications are enabled by default, this property can be used to disable a physical device. Communications are not attempted when a device is disabled. From a client standpoint, the data is marked as invalid and write operations are not accepted. This property can be changed at any time through this property or the device system tags.

**Simulated:** This option places the device into Simulation Mode. In this mode, the driver does not attempt to communicate with the physical device, but the server continues to return valid OPC data. Simulated stops physical communications with the device, but allows OPC data to be returned to the OPC client as valid data. While in Simulation Mode, the server treats all device data as reflective: whatever is written to the simulated device is read back and each OPC item is treated individually. The item's memory map is based on the group Update Rate. The data is not saved if the server removes the item (such as when the server is reinitialized). The default is No.

● **Notes:**

1. This System tag (\_Simulated) is read only and cannot be written to for runtime protection. The System tag allows this property to be monitored from the client.
2. In Simulation mode, the item's memory map is based on client update rate(s) (Group Update Rate for OPC clients or Scan Rate for native and DDE interfaces). This means that two clients that reference the same item with different update rates return different data.

● Simulation Mode is for test and simulation purposes only. It should never be used in a production environment.

## Device Properties - Scan Mode

The Scan Mode specifies the subscribed-client requested scan rate for tags that require device communications. Synchronous and asynchronous device reads and writes are processed as soon as possible; unaffected by the Scan Mode properties.

Property Groups	☐ <b>Scan Mode</b>	
General	Scan Mode	Respect Client-Specified Scan Rate ▾
Scan Mode	Initial Updates from Cache	Disable

**Scan Mode:** specifies how tags in the device are scanned for updates sent to subscribed clients.

Descriptions of the options are:

- **Respect Client-Specified Scan Rate:** This mode uses the scan rate requested by the client.
- **Request Data No Faster than Scan Rate:** This mode specifies the maximum scan rate to be used. The valid range is 10 to 99999990 milliseconds. The default is 1000 milliseconds.
  - **Note:** When the server has an active client and items for the device and the scan rate value is increased, the changes take effect immediately. When the scan rate value is decreased, the changes do not take effect until all client applications have been disconnected.
- **Request All Data at Scan Rate:** This mode forces tags to be scanned at the specified rate for subscribed clients. The valid range is 10 to 99999990 milliseconds. The default is 1000 milliseconds.
- **Do Not Scan, Demand Poll Only:** This mode does not periodically poll tags that belong to the device nor perform a read to get an item's initial value once it becomes active. It is the client's responsibility to poll for updates, either by writing to the \_DemandPoll tag or by issuing explicit device reads for individual items. *For more information, refer to "Device Demand Poll" in server help.*

- **Respect Tag-Specified Scan Rate:** This mode forces static tags to be scanned at the rate specified in their static configuration tag properties. Dynamic tags are scanned at the client-specified scan rate.

**Initial Updates from Cache:** When enabled, this option allows the server to provide the first updates for newly activated tag references from stored (cached) data. Cache updates can only be provided when the new item reference shares the same address, scan rate, data type, client access, and scaling properties. A device read is used for the initial update for the first client reference only. The default is disabled; any time a client activates a tag reference the server attempts to read the initial value from the device.

## Device Properties - Timing

The device Timing properties allow the driver's response to error conditions to be tailored to fit the application's needs. In many cases, the environment requires changes to these properties for optimum performance. Factors such as electrically generated noise, modem delays, and poor physical connections can influence how many errors or timeouts a communications driver encounters. Timing properties are specific to each configured device.

Property Groups	<input type="checkbox"/> <b>Communication Timeouts</b>	
General	Connect Timeout (s)	3
Scan Mode	Request Timeout (ms)	5000
<b>Timing</b>	Retry Attempts	3
Auto-Demotion	<input type="checkbox"/> <b>Timing</b>	
	Inter-Request Delay (ms)	0

## Communications Timeouts

**Connect Timeout:** This property (which is used primarily by Ethernet based drivers) controls the amount of time required to establish a socket connection to a remote device. The device's connection time often takes longer than normal communications requests to that same device. The valid range is 1 to 30 seconds. The default is typically 3 seconds, but can vary depending on the driver's specific nature. If this setting is not supported by the driver, it is disabled.

● **Note:** Due to the nature of UDP connections, the connection timeout setting is not applicable when communicating via UDP.

**Request Timeout:** This property specifies an interval used by all drivers to determine how long the driver waits for a response from the target device to complete. The valid range is 50 to 9,999,999 milliseconds (167.6667 minutes). The default is usually 1000 milliseconds, but can vary depending on the driver. The default timeout for most serial drivers is based on a baud rate of 9600 baud or better. When using a driver at lower baud rates, increase the timeout to compensate for the increased time required to acquire data.

**Retry Attempts:** This property specifies how many times the driver retries a communications request before considering the request to have failed and the device to be in error. The valid range is 1 to 10. The default is typically 3, but can vary depending on the driver's specific nature. The number of retries configured for an application depends largely on the communications environment.

## Timing

**Inter-Request Delay:** This property specifies how long the driver waits before sending the next request to the target device. It overrides the normal polling frequency of tags associated with the device, as well as

one-time reads and writes. This delay can be useful when dealing with devices with slow turnaround times and in cases where network load is a concern. Configuring a delay for a device affects communications with all other devices on the channel. It is recommended that users separate any device that requires an inter-request delay to a separate channel if possible. Other communication properties (such as communication serialization) can extend this delay. The valid range is 0 to 300,000 milliseconds; however, some drivers may limit the maximum value due to a function of their particular design. The default is 0, which indicates no delay between requests with the target device.

● **Note:** Not all drivers support Inter-Request Delay. This setting does not appear if it is not available.

## Device Properties - Auto-Demotion

The Auto-Demotion properties can temporarily place a device off-scan in the event that a device is not responding. By placing a non-responsive device offline for a specific time period, the driver can continue to optimize its communications with other devices on the same channel. After the time period has been reached, the driver re-attempts to communicate with the non-responsive device. If the device is responsive, the device is placed on-scan; otherwise, it restarts its off-scan time period.

Property Groups	[-] <b>Auto-Demotion</b>	
General	Demote on Failure	Enable
Scan Mode	Timeouts to Demote	3
Timing	Demotion Period (ms)	10000
<b>Auto-Demotion</b>	Discard Requests when Demoted	Disable

**Demote on Failure:** When enabled, the device is automatically taken off-scan until it is responding again.

● **Tip:** Determine when a device is off-scan by monitoring its demoted state using the `_AutoDemoted` system tag.

**Timeouts to Demote:** Specify how many successive cycles of request timeouts and retries occur before the device is placed off-scan. The valid range is 1 to 30 successive failures. The default is 3.

**Demotion Period:** Indicate how long the device should be placed off-scan when the timeouts value is reached. During this period, no read requests are sent to the device and all data associated with the read requests are set to bad quality. When this period expires, the driver places the device on-scan and allows for another attempt at communications. The valid range is 100 to 3600000 milliseconds. The default is 10000 milliseconds.

**Discard Requests when Demoted:** Select whether or not write requests should be attempted during the off-scan period. Disable to always send write requests regardless of the demotion period. Enable to discard writes; the server automatically fails any write request received from a client and does not post a message to the Event Log.

## Device Properties - Bridging

The Bridging properties are used to specify the desired routing path.

Property Groups	[-] <b>Bridging</b>	
General	Network Number	0
Scan Mode	PC Number	255
Timing		
Auto-Demotion		
<b>Bridging</b>		
32-Bit Data		
Redundancy		

**Network Number:** This parameter specifies the Network Number of the target device. The valid range is 0 to 255, with 0 being used for local connections. The default setting is 0.

● **Note:** This setting only applies to the Q Series model.

**PC Number:** This parameter specifies the PC Number of the target device. The valid range is 0 to 64, with 255 being used for local connection. The default setting is 255.

● If this device communicates with devices on remote networks, refer to [Appendix: Multi-Level Networks](#).

## Device Properties - 32-Bit Data

Property Groups	[-] <b>32-Bit Data</b>	
General	First Word Low	Enable
Bridging		
<b>32-Bit Data</b>		

In a Mitsubishi A-Series device, the addresses of two consecutive registers are used for 32-bit data types.

**First Word Low:** Set to Enable for the driver to assume the first word is low for the 32-bit value. Set to Disable for the driver to assume that the first word is high for the 32-bit value. The default is Enable.

● **Note:** This property can't be changed while there are active references on the device.

## Device Properties - Redundancy


Property Groups	[-] <b>Redundancy</b>	
General	Secondary Path	...
Scan Mode	Operating Mode	Switch On Failure
Timing	Monitor Item	
<b>Redundancy</b>	Monitor Interval (s)	300
	Return to Primary ASAP	Yes

Redundancy is available with the Media-Level Redundancy Plug-In.

● Consult the website, a sales representative, or the user manual for more information.

## Multi-Level Networks

The Q Series model can be used to communicate with devices on remote networks. In the example shown below, PLC 1, PLC 2, and PLC 3 are on the local serial network. PLC 4, PLC 5, and PLC 6 are on a remote NET/H network. PLC 3 serves as a relay device connecting the two networks.

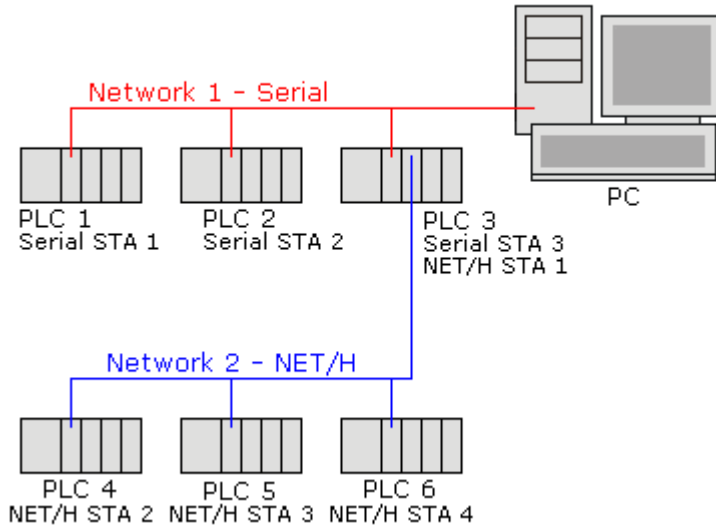

• For more information, refer to [Setup](#).

For example, imagine that PLC 1, PLC 2, and PLC 3 have QJ71C24N serial communication modules configured as serial stations 1, 2, and 3 respectively. In addition to the serial module, PLC 3 also has a QJ71BR11 NET/H module configured as NET/H station 1. PLC 4, PLC 5, and PLC 6 have NET/H modules configured as NET/H stations 2, 3, and 4 respectively.

To communicate with all 6 PLCs, 6 devices must be created in the server project. The device IDs and network settings should be as shown below.

PLC	Device ID	Network Number	PC Number	Comment
1	1	0	255	Local network, local PC
2	2	0	255	Local network, local PC
3	3	0	255	Local network, local PC
4	3	2	2	Network 2, PC 2 (NET/H STA 2), via PLC 3 (serial STA 3)
5	3	2	3	Network 2, PC 3 (NET/H STA 3), via PLC 3 (serial STA 3)
6	3	2	4	Network 2, PC 4 (NET/H STA 4), via PLC 3 (serial STA 3)

• For more information, refer to [Bridging](#).

• **Note:** A relay device may take 5 or more seconds to report a failed Read and Write to a remote device. It is recommended that the request timeout for remote devices be set accordingly. For more information, refer to [Device Setup](#).





## Data Types Description

The Mitsubishi Serial Driver supports the following data types.

Data Type	Description
Boolean	Single bit
Word	Unsigned 16-bit value bit 0 is the low bit bit 15 is the high bit
Short	Signed 16-bit value bit 0 is the low bit bit 14 is the high bit bit 15 is the sign bit
BCD	Two byte packed BCD Value range is 0-9999. Behavior is undefined for values beyond this range.
DWord	Unsigned 32-bit value bit 0 is the low bit bit 31 is the high bit
Long	Signed 32-bit value bit 0 is the low bit bit 30 is the high bit bit 31 is the sign bit
Float	32-bit floating point value
String	Null terminated ASCII string Support, includes HiLo LoHi byte order selection and string lengths up to 128 bytes.
LBCD	Four byte packed BCD Value range is 0 - 99999999. Behavior is undefined for values beyond this range.

## Address Descriptions

Address specifications vary depending on the model in use. Select a link from the following list to obtain specific address information for the model of interest.

[A Series](#)

[Q Series](#)

### Mitsubishi A Series Address Descriptions

Address specifications vary depending on the model in use. The default data types for dynamically defined tags are shown in **bold**.

Device Type	Range	Data Type	Access
Inputs*	X0000-X1FFF (hex)	<b>Boolean</b>	Read/Write
	X0000-X1FF0 (hex)	Short, Word, BCD	
	X0000-X1FE0 (hex)	Long, DWord, LBCD	
Outputs*	Y0000-Y1FFF (hex)	<b>Boolean</b>	Read/Write
	Y0000-Y1FF0 (hex)	Short, Word, BCD	
	Y0000-Y1FE0 (hex)	Long, DWord, LBCD	
Link Relays*	B0000-B1FFF (hex)	<b>Boolean</b>	Read/Write
	B0000-B1FF0 (hex)	Short, Word, BCD	
	BCD B0000-B1FE0 (hex)	Long, DWord, LBCD	
Internal Relays*	M0000-M8191	<b>Boolean</b>	Read/Write
	M0000-M8176	Short, Word, BCD	
	M0000-M8160	Long, DWord, LBCD	
Special Int. Relays *	M9000-M9255	<b>Boolean</b>	Read Only
	M9000-M9240	Short, Word, BCD	
	M9000-M9224	Long, DWord, LBCD	
Latch Relays*	L0000-L8191	<b>Boolean</b>	Read/Write
	L0000-L8176	Short, Word, BCD	
	L0000-L8160	Long, DWord, LBCD	
Annunciator Relays*	F0000-F2047	<b>Boolean</b>	Read/Write
	F0000-F2032	Short, Word, BCD	
	F0000-F2016	Long, DWord, LBCD	

Device Type	Range	Data Type	Access
Step Relays*	S0000-S8191	<b>Boolean</b>	Read/Write
	S0000-S8176	Short, Word, BCD	
	S0000-S8160	Long, DWord, LBCD	
Timer Contacts*	TS0000-TS2047	<b>Boolean</b>	Read/Write
	TS0000-TS2032	Short, Word, BCD	
	TS0000-TS2016	Long, DWord, LBCD	
Timer Coils*	TC0000-TC2047	<b>Boolean</b>	Read/Write
	TC0000-TC2032	Short, Word, BCD	
	TC0000-TC2016	Long, DWord, LBCD	
Counter Contacts*	CS0000-CS1023	<b>Boolean</b>	Read/Write
	CS0000-CS1008	Short, Word, BCD	
	CS0000-CS0992	Long, DWord, LBCD	
Counter Coils*	CC0000-CC1023	<b>Boolean</b>	Read/Write
	CC0000-CC1008	Short, Word, BCD	
	CC0000-CC0992	Long, DWord, LBCD	

\*Users can specify a Long data type by appending a space and an "L" to the address. For example, "D00000" would be entered as "D00000 L". This does not apply to arrays or bit accessed registers.

● **Notes:**

1. In a typical A-series PLC memory configuration, L, S and M addresses all map to the same M memory in the PLC.
2. All Boolean device types can be accessed as Short, Word, BCD, Long, DWord and LBCD. However, the device must be addressed on a 16-bit boundary.

Device Type	Range	Data Type	Access
Timer Value	TN0000-TN2047	Boolean	Read/Write
	TN0000-TN2047	<b>Short</b> , Word, BCD	
Counter Value	CN0000-CN1023	Boolean	Read/Write
	CN0000-CN1023	Short, <b>Word</b> , BCD	
Data	D0000-D8191	<b>Short</b> , Word,	Read/Write

Device Type	Range	Data Type	Access
Registers***	D0000-D8190	BCD Long, DWord, LBCD, Float	
Data Register Bit Access	D0000.00-D8191.15* D0000.00-D8190.31*	<b>Short</b> , Word, BCD, Boolean**  Long, DWord, LBCD	Read/Write
Data Registers String Access HiLo Byte Ordering	DSH00000.002-DSH08190.002 DSH00000.128-DSH08127.128  The string length may also be specified using a colon. The string length must be between 2-128 bytes and even.	<b>String</b>	Read/Write
Data Registers String Access LoHi Byte Ordering	DSL00000.002-DSL08190.002 DSL00000.128-DSL08127.128  The string length may also be specified using a colon. The string length must be between 2-128 bytes and even.	<b>String</b>	Read/Write
Special Data Registers***	D90000-D9255 D9000-D9254	<b>Short</b> , Word, BCD  Long, DWord, LBCD, Float	Read Only
Data Register Bit Access	D90000.00-D9255.15* D90000.00-D9254.31*	<b>Short</b> , Word, BCD, Boolean**  Long, DWord, LBCD	Read Only
Link Registers***	W0000-W1FFF (hex) W0000-W1FFE (hex)	<b>Short</b> , Word, BCD  Long, DWord, Float, LBCD	Read/Write
Link Register Bit Access	W0000.00-W1FFF.15* W0000.00-W1FFE.31*	<b>Short</b> , Word, BCD, Boolean**  Long, DWord, LBCD	Read/Write
Link Registers String Access HiLo Byte	WSH0000.002-WSH1FFE.002 WSH0000.128-WSH1FBF.128	<b>String</b>	Read/Write

Device Type	Range	Data Type	Access
Ordering	The string length may also be specified using a colon. The string length must be between 2-128 bytes and even.		
Link Registers String Access LoHi Byte Ordering	WSL0000.002-WSL1FFE.002 WSL0000.128-WSL1FBF.128  The string length may also be specified using a colon. The string length must be between 2-128 bytes and even.	<b>String</b>	Read/Write
File Register***	R0000-R8191  R0000-R8190	<b>Short</b> , Word, BCD  Long, DWord, Float, LBCD	Read/Write
File Register Bit Access	R0000.00-R8191.15*  R0000.00-R8190.31*	<b>Short</b> , Word, BCD, Boolean**  Long, DWord, LBCD	Read/Write
File Registers String Access HiLo Byte Ordering	RSH00000.002-RSH08190.002 RSH00000.128-RSH08127.128  The string length may also be specified using a colon. The string length must be between 2-128 bytes and even.	<b>String</b>	Read/Write
File Registers String Access LoHi Byte Ordering	RSL00000.002-RSL08190.002 RSL00000.128-RSL08127.128  The string length may also be specified using a colon. The string length must be between 2-128 bytes and even.	<b>String</b>	Read/Write

\*For register memory, the data types Short, Word, BCD, DWord, Long, Boolean and LBCD can append an optional ".bb" (dot bit) or a ":bb" (colon bit) to the address in order to reference a bit in a particular value. The valid ranges for the optional bit is 0-15 for Short, Word, BCD, and Boolean; and 0-31 for Long, DWord and LBCD. Strings use the bit number to specify length. The valid length of a string in D memory is 2 to 128 bytes. The string length must be even numbers. Float types do not support bit operations. The bit number is always in decimal notation.

\*\*When accessing register memory as Boolean, a bit number is required.

\*\*\*Users can specify a Long data type by appending a space and an "L" to the address. For example, "D00000" would be entered as "D00000 L". This does not apply to arrays or bit accessed registers.

### Array Access

Device types can be accessed as arrays of Short, Word, BCD, Long, DWord, LBCD or Float. The default setting is Word. The maximum allowed array size depends on the data type and device type. The maximum array size for register device types is 32 for Long, DWord, Float and LBCD data type and 64 for Word, Short, and BCD data types. The maximum array size for bit device types except TC, TS, CC, CS is 16 for Long,

DWord and LBCD data types and 32 for Word, Short, and BCD data types. For TC, TS, CC, CS device types the maximum array size is 15 for Word data types and 7 for DWord data types. Arrays can be either 1 dimension or 2. Regardless of the dimensions, the array size must not exceed the limits already stated.

Due to protocol limitation, the largest bit device type array that can be successfully written to is 10 Words (5 DWords).

### Array Examples

1. D100 [4] Single dimension includes the following register addresses: D100, D101, D102, D103.
2. M016 [3][4] Two Dimensions includes the following device addresses as words: M016, M032, M048, M064, M080, M096, M112, M128, M144, M160, M176, M192 3 rows x 4 columns = 12 words 12 x 16 (word) = 192 total bits.

### Additional Device Examples

1. Access X device memory as Word : X??? where the ??? is a hex number on 16-bit boundaries such as 010, 020, 030 and so forth.
2. Access M device memory as Long : M???? where the ??? is a decimal number on 16-bit boundaries such as 0, 16, 32, 48 and so forth.

### Mitsubishi Q Series Address Descriptions

Address specifications vary depending on the model in use. The default data types for dynamically defined tags are shown in **bold**.

Device Type	Range	Data Type	Access
Inputs*	X0000-X3FFF (Hex)	<b>Boolean</b>	Read/Write
	X0000-X3FF0 (Hex)	Short, Word, BCD	
	X0000-X3FE0 (Hex)	Long, DWord, LBCD	
Direct Inputs*	DX0000-DX3FFF (Hex)	<b>Boolean</b>	Read/Write
	DX0000-DX3FF0 (Hex)	Short, Word, BCD	
	DX0000-DX3FE0 (Hex)	Long, DWord, LBCD	
Outputs	Y0000-Y3FFF (Hex)	<b>Boolean</b>	Read/Write
	Y0000-Y3FFF (Hex)	Short, Word, BCD	
	Y0000-Y3FF0 (Hex)		
Direct Outputs*	DY0000-DY3FFF (Hex)	<b>Boolean</b>	Read/Write
	DY0000-DY3FF0 (Hex)	Short, Word, BCD	
	DY0000-DY3FE0 (Hex)	Long, DWord, LBCD	
Link Relays*	B0000-B3FFF (Hex)	<b>Boolean</b>	Read/Write

Device Type	Range	Data Type	Access
	B0000-B3FF0 (Hex)	Short, Word, BCD	
	B0000-B3FE0 (Hex)	Long, DWord, LBCD	
Special Link Relays	SB0000-SB07FF (Hex)	<b>Boolean</b>	Read/Write
	SB0000-SB07F0 (Hex)	Short, Word, BCD	
	SB0000-SB07E0 (Hex)	Short, Word, BCD	
Internal Relays*	M0000-M16383	<b>Boolean</b>	Read/Write
	M0000-M16368	Short, Word, BCD	
	M0000-M16352	Long, DWord, LBCD	
Special Int. Relays*	SM0000-SM2047	<b>Boolean</b>	Read/Write
	SM0000-SM2032	Short, Word, BCD	
	SM0000-SM2016	Long, DWord, LBCD	
Latch Relays*	L0000-L16383	<b>Boolean</b>	Read/Write
	L0000-L16368	Short, Word, BCD	
	L0000-L16352	Long, DWord, LBCD	
Annunciator Relays*	F0000-F2047	<b>Boolean</b>	Read/Write
	F0000-F2032	Short, Word, BCD	
	F0000-F2016	Long, DWord, LBCD	
Edge Relays*	V0000-V2047	<b>Boolean</b>	Read/Write
	V0000-V2032	Short, Word, BCD	
	V0000-V2016	Long, DWord, LBCD	
Step Relays*	S0000-S16383	<b>Boolean</b>	Read/Write
	S0000-S16368	Short, Word, BCD	
	S0000-S16352	Long, DWord, LBCD	
Timer Contacts*	TS0000-TS2047	<b>Boolean</b>	Read/Write
	TS0000-TS2032	Short, Word, BCD	
	TS0000-TS2016	Long, DWord, LBCD	
Timer Coils*	TC0000-TC2047	<b>Boolean</b>	Read/Write
	TC0000-TC2032	Short, Word, BCD	



Device Type	Range	Data Type	Access
	TC0000-TC2016	Long, DWord, LBCD	
Integrating Timer Contacts*	SS0000-SS2047	<b>Boolean</b>	Read/Write
	SS0000-SS2032	Short, Word, BCD	
	SS0000-SS2016	Long, DWord, LBCD	
Integrating Timer Coils*	SC0000-SC2047	<b>Boolean</b>	Read/Write
	SC0000-SC2032	Short, Word, BCD	
	SC0000-SC2016	Long, DWord, LBCD	
Counter Contacts*	CS0000-CS1023	<b>Boolean</b>	Read/Write
	CS0000-CS1008	Short, Word, BCD	
	CS0000-CS0992	Long, DWord, LBCD	
Counter Coils*	CC0000-CC1023	<b>Boolean</b>	Read/Write
	CC0000-CC1008	Short, Word, BCD	
	CC0000-CC0992	Long, DWord, LBCD	

\*Users can specify a Long data type by appending a space and an "L" to the address. For example, "D00000" would be entered as "D00000 L". This does not apply to arrays or bit accessed registers.

● **Note:** All Boolean device types can be accessed as Short, Word, BCD, Long, DWord, and LBCD. However, the device must be addressed on a 16-bit boundary.

Device Type	Range	Data Type	Access
Timer Value	TN0000-TN2047	<b>Short</b> , Word, BCD	Read/Write
Integrating Timer Value	SN0000-SN2047	<b>Short</b> , Word, BCD	Read/Write
Counter Value	CN0000-CN1023	Short, <b>Word</b> , BCD	Read/Write
Data Registers***	D00000-D12287	<b>Short</b> , Word, BCD	Read/Write
	D00000-D12286	Long, DWord, Float, LBCD	
Data Register Bit Access	D00000.00 D12287.15* D00000.00 D12286.31*	<b>Short</b> , Word, BCD, Boolean** Long, DWord, LBCD	Read/Write

Data Registers String Access HiLo Byte Ordering	DSH00000.002-DSH12286.002 DSH00000.128-DSH12223.128  The string length may also be specified using a colon. The string length must be between 2-128 bytes and even.	<b>String</b>	Read/Write
Data Registers String Access LoHi Byte Ordering	DSL00000.002-DSL12286.002 DSL00000.128-DSL12223.128  The string length may also be specified using a colon. The string length must be between 2-128 bytes and even.	<b>String</b>	Read/Write
Special Data Registers***	SD0000-SD2047  SD0000-SD2046	<b>Short</b> , Word, BCD  Long, DWord, Float, LBCD	Read/Write
Data Register Bit Access	SD0000.00-SD2047.15*  SD0000.00-SD2046.31*	<b>Short</b> , Word, BCD, Boolean**  Long, DWord, LBCD	Read/Write
Link Registers***	W0000-W3FFF (Hex)  W0000-W3FFE (Hex)	<b>Short</b> , Word, BCD  Long, DWord, Float, LBCD	Read/Write
Link Register Bit Access	W0000.00-W3FFF.15*  W0000.00-W3FFE.31*	<b>Short</b> , Word, BCD, Boolean**  Long, DWord, LBCD	Read/Write
Link Registers String Access HiLo Byte Ordering	WSH0000.002-WSH3FFE.002 WSH0000.128-WSH3FBF.128  The string length may also be specified using a colon. The string length must be between 2-128 bytes and even.	<b>String</b>	Read/Write
Link Registers String Access LoHi Byte Ordering	WSL0000.002-WSL3FFE.002 WSL0000.128-WSL3FBF.128  The string length may also be specified using a colon. The string length must be between 2-128 bytes and even.	<b>String</b>	Read/Write
Special Link Registers***	SW0000-SW07FF (Hex)  SW0000-SW07FE (Hex)	<b>Short</b> , Word, BCD  Long, DWord, Float, LBCD	Read/Write
Link Register	SW0000.00-SW07FF.15*	<b>Short</b> , Word,	Read/Write

Bit Access	SW0000.00-SW07FE.31*	BCD, Boolean**  Long, DWord, LBCD	
File Register***	R00000-R32767  R00000-R32766	<b>Short</b> , Word, BCD  Long, DWord, Float, LBCD	Read/Write
File Register Bit Access	R00000.00-R32767.15*  R00000.00-R32766.31*	<b>Short</b> , Word, BCD, Boolean**  Long, DWord, LBCD	Read/Write
File Registers String Access HiLo Byte Ordering	RSH00000.002-RSH32766.002 RSH00000.128-RSH32703.128  The string length may also be specified using a colon. The string length must be between 2-128 bytes and even.	<b>String</b>	Read/Write
File Registers String Access LoHi Byte Ordering	RSL00000.002-RSL32766.002 RSL00000.128-RSL32703.128  The string length may also be specified using a colon. The string length must be between 2-128 bytes and even.	<b>String</b>	Read/Write
Index Registers***	Z00-Z15  Z00-Z14	<b>Short</b> , Word, BCD  Long, DWord, Float, LBCD	Read/Write
Index Register Bit Access	Z00.00-Z15.15*  Z00.00-Z14.31*	<b>Short</b> , Word, BCD, Boolean**  Long, DWord, LBCD	Read/Write

\*For register memory, the data types Short, Word, BCD, DWord, Long, Boolean and LBCD can append an optional ".bb" (dot bit) or ":bb" (colon bit) to the address in order to reference a bit in a particular value. The valid ranges for the optional bit is 0-15 for Short, Word, Boolean and BCD; and 0-31 for Long, DWord and LBCD. Strings use the bit number to specify length. The valid length of a string in D memory is 2 to 128 bytes. The string length must also be even numbers. Float types do not support bit operations. The bit number is always in decimal notation.

\*\*When accessing register memory as Boolean, a bit number is required.

\*\*\*Users can specify a Long data type by appending a space and an "L" to the address. For example, "D00000" would be entered as "D00000 L". This does not apply to arrays or bit accessed registers.

## Array Access

All device types can be accessed in arrays of Short, Word, BCD, Long, DWord, Float or LBCD format. The default data type is Word. The size of the array depends on the data type and device type. All Register device types can access up to 64 elements for Short, Word and BCD; and 32 elements for Long, DWord, Float, and LBCD. All Bit memory types can be accessed with up to 32 elements for Short, Word, and BCD; and 16 elements for Long, DWord, Float and LBCD. Arrays can either 1 dimension or 2. Regardless of the dimensions, the array size must not exceed the limits already stated. Appending array notation onto a normal device reference enters arrays.

## Array Examples

1. D100 [4] Single dimension includes the following register addresses: D100, D101, D102, D103.
2. M016 [3][4] Two Dimensions includes the following device addresses as words: M016, M032, M048, M064, M080, M096, M112, M128, M144, M160, M176, M192 3 rows x 4 columns = 12 words 12 x 16 (word) = 192 total bits.

## Additional Device Examples

1. Access X device memory as Word : X??? where the ??? is a hex number on 16-bit boundaries such as 010, 020, 030, and so forth.
2. Access M device memory as Long : M???? where the ???? is a decimal number on 16-bit boundaries such as 0, 16, 32, 48, and so forth.

## Event Log Messages

The following information concerns messages posted to the Event Log pane in the main user interface. Consult the server help on filtering and sorting the Event Log detail view. Server help contains many common messages, so should also be searched. Generally, the type of message (informational, warning) and troubleshooting information is provided whenever possible.

---

### **Device reported an invalid address or error. Block deactivated. | Block address range = '<address>' to '<address>'.**

**Error Type:**

Error

**Possible Cause:**

An attempt has been made to reference a non-existent location in the specified device.

**Possible Solution:**

Verify the tags assigned to addresses in the specified range on the device and eliminate any that reference invalid locations.

---

### **Received block length does not match expected length. | Received block length = <number> (bytes), Expected block length = <number> (bytes).**

**Error Type:**

Warning

**Possible Cause:**

The data type maximum length or the length dictated in the address definition set a range that the results do not fit.

**Possible Solution:**

Verify the data type is correct and check the address definition for a length definition and correct or update.

---

### **Error code received from device. | Error code = <code>h.**

**Error Type:**

Warning

**Possible Cause:**

Communication with the device succeeded, but the device reported a problem.

**Possible Solution:**

Consult the device documentation for information about the error code provided.

---

### **Possible network number problem with device.**

**Error Type:**

Warning

**Possible Cause:**

The bridge device could not route a message to the destination network specified.

**Possible Solution:**

Verify the network number setting and hardware configuration. Use zero (0) to indicate a local connection.

**See Also:**

1. PLC Setup
2. Bridging

**Possible PC number problem with device.**

---

**Error Type:**

Warning

**Possible Cause:**

The bridge device could not route a message to the destination PC specified.

**Possible Solution:**

Verify the PC number setting and hardware configuration. Use 255 to indicate a local connection.

**See Also:**

1. PLC Setup
2. Bridging

**Error Mask Definitions**

---

**B** = Hardware break detected

**F** = Framing error

**E** = I/O error

**O** = Character buffer overrun

**R** = RX buffer overrun

**P** = Received byte parity error

**T** = TX buffer full

## Appendix: PLC Setup

*Provided for reference only. Please refer to the manufacturer documentation.*

For more information on a specific PLC, click a link from the list below.

[A1SJ71C24-R2](#)

[A1SJ71C24-R4](#)

[AJ71C24-S8](#)

[QJ71C24N](#)

● **Note:** The AJ71C24 and QJ71C24N family of communications modules occupy ranges of X and Y memory. Writing to this memory with the Mitsubishi Serial Driver may disable the module causing a loss of communications. For more information, refer to the communications module manual.

## A1SJ71C24-R2 Settings and Diagrams


Provided for reference only. Please refer to the manufacturer documentation.

### Switch Settings for the A1SJ71C24-R2

The switch positions shown match the driver defaults.

SW	ON ←	SW Item	ON	OFF
03	<input type="checkbox"/>	03 Unused	--	--
04	<input type="checkbox"/>	04 Write During Run	Enable	Disable
05	<input type="checkbox"/>	05 Transmission	See Table Below	
06	<input type="checkbox"/>	06 Speed Setting		
07	<input type="checkbox"/>	07		
08	<input type="checkbox"/>	08 Data bit setting	8	7
09	<input type="checkbox"/>	09 Parity bit setting	Set	Not Set
10	<input type="checkbox"/>	10 Parity Even/Odd	Even	Odd
11	<input type="checkbox"/>	11 Stop bit setting	2 Bits	1 Bit
12	<input type="checkbox"/>	12 Sum Check setting	Set	Not Set

Baud Rate	300	600	1200	2400	4800	9600	19200
SW05	OFF	ON	OFF	ON	OFF	ON	OFF
SW06	OFF	OFF	ON	ON	OFF	OFF	ON
SW07	OFF	OFF	OFF	OFF	ON	ON	ON

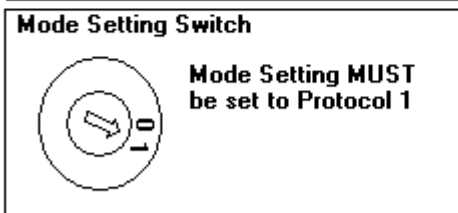

For models of the AJ71C24 which support multidrop operation, the Station Number must be set between 0 and 31. The A1SJ71C24-R2 uses a set station number of 0.



## A1SJ71C24-R4 Settings and Diagrams

Provided for reference only. Please refer to the manufacturer documentation.


### Switch Settings for the AJ71C24-R4

The switch positions shown match the driver defaults.

SW	ON ←	SW Item	ON	OFF
01	<input type="checkbox"/>	SW1 Unused	----	----
02	<input type="checkbox"/>	SW2 ComputerLink/Multi	CompL	Multi
03	<input type="checkbox"/>	SW3 Unused	----	----
04	<input type="checkbox"/>	SW4 Write During Run	Enable	Disable
05	<input checked="" type="checkbox"/>	SW5 Transmission	See Table Below	
06	<input type="checkbox"/>	SW6 Speed Setting		
07	<input type="checkbox"/>	SW8 Data bit setting		
08	<input type="checkbox"/>	SW9 Parity bit setting	Set	Not Set
09	<input type="checkbox"/>	SW10 Parity Even/Odd	Even	Odd
10	<input type="checkbox"/>	SW11 Stop bit setting	2 Bits	1 Bit
11	<input type="checkbox"/>	SW12 Sum Check setting	Set	Not Set
12	<input type="checkbox"/>			

Baud Rate	300	600	1200	2400	4800	9600	19200
SW05	OFF	ON	OFF	ON	OFF	ON	OFF
SW06	OFF	OFF	ON	ON	OFF	OFF	ON
SW07	OFF	OFF	OFF	OFF	ON	ON	ON

**Mode Setting Switch**



The AJ71C24R4 **MUST** be set for Protocol 1. This means the Mode switch must be set to position 5.

For models of the AJ71C24 which support multidrop operation, the Station Number must be set between 0 and 31.

The Dip switch positions shown here are for Computer Link operation with Writes enabled, Protocol 1, 19200, 7,E,2, and check sum enabled.

## AJ71C24-S8 Setting and Diagrams

Provided for reference only. Please refer to the manufacturer documentation.


### Switch Settings for the AJ71C24-S8

The switch positions shown match the driver defaults.

SW	ON ←	SW Item	ON	OFF
11		11 Main Channel	RS-422	RS-232
12		12 Data bit setting	8	7
13		13 Transmission 14 Speed Setting	See Table Below	
14				
15				
16		16 Parity bit setting	Set	Not Set
17		17 Parity Even/Odd	Even	Odd
18		18 Stop bit setting	2 Bits	1 Bit
	ON ←	21 Sum Check setting	Set	Not Set
21		22 Write During Run	Enable	Disable
22		23 Send Terminator	Present	Absent
23		24 Receive Terminator	Present	Absent
24				

Baud Rate	300	600	1200	2400	4800	9600	19200
SW13	OFF	ON	OFF	ON	OFF	ON	OFF
SW14	OFF	OFF	ON	ON	OFF	OFF	ON
SW15	OFF	OFF	OFF	OFF	ON	ON	ON

**Mode Setting Switch**



The AJ71C24 **MUST** be set for Protocol 1. This means the mode switch can be set to Mode 1, 5, and A.


For models of the AJ71C24 which support multidrop operation, the Station Number must be set between 0 and 31.

## QJ71C24N Configuration


*Provided for reference only. Please refer to the manufacturer documentation.*

The QJ71C24N communications module is configured with the GX Developer programming software, which is available from Mitsubishi PLC dealers.


1. To begin configuring the PLC to work with this driver, open an existing **GX Developer** project. Alternatively, read the current **PLC Parameter** configuration from the device.
2. Next, edit the **PLC Parameter** settings.

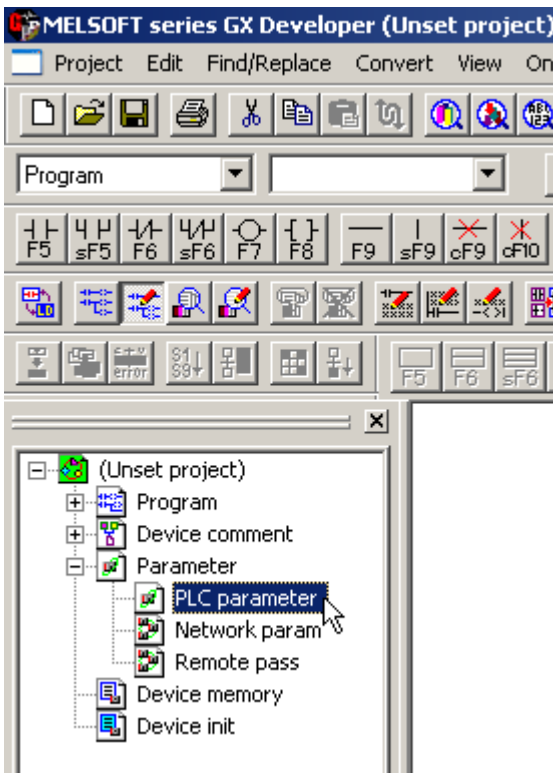

3. Open the **I/O Assignment** tab and then click **Switch Setting** to configure the QJ71C24N module. In the example shown below, the PLC has a QJ71E71-100 Ethernet communications module in slot 0 and a QJ71C24N serial communications module in slot 1.

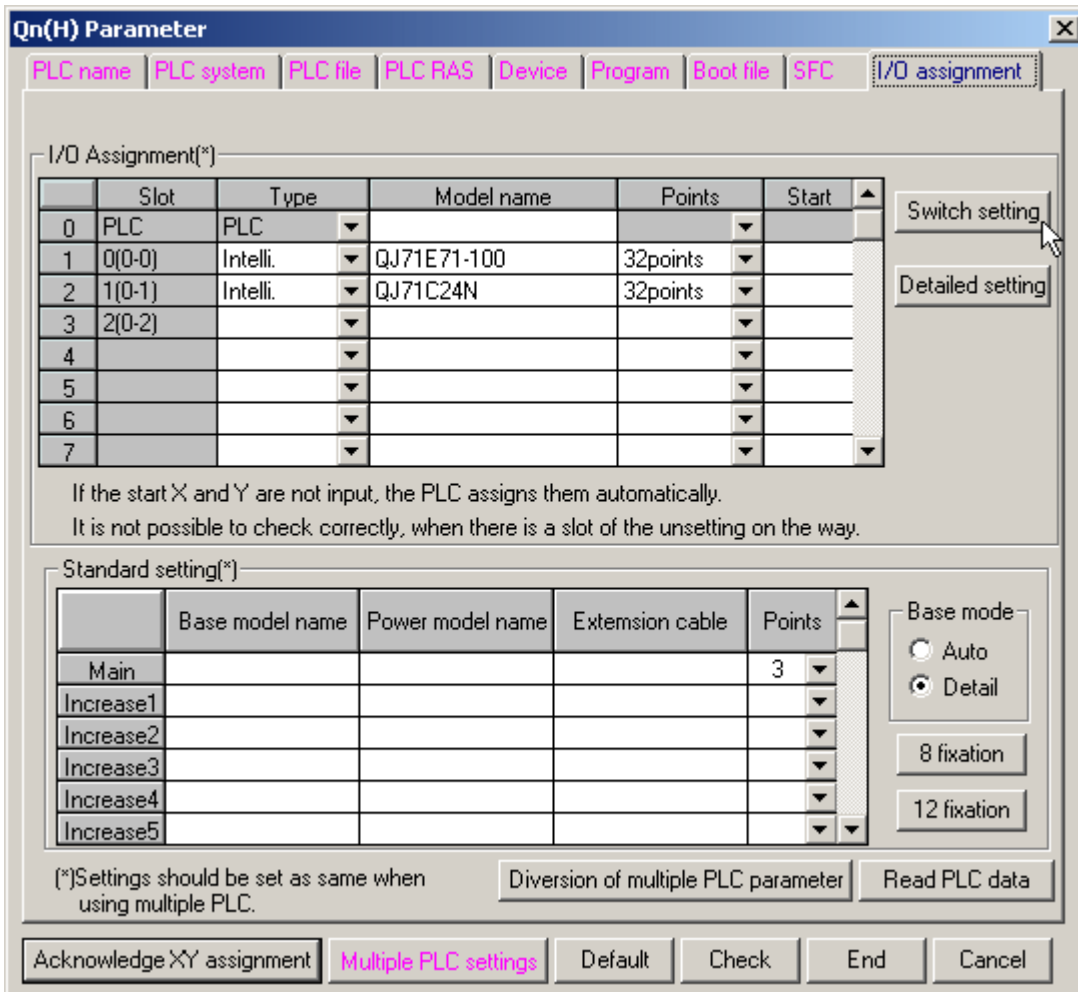

● **Note:** The recommended software switch settings are shown below.

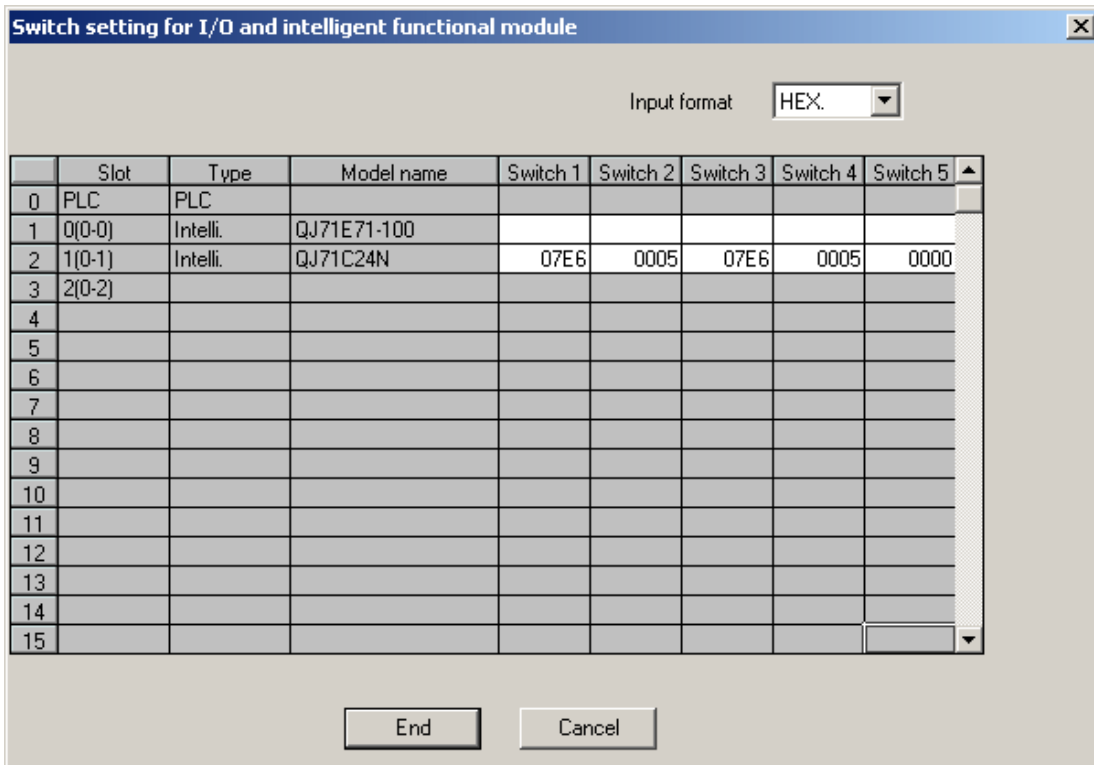

4. Entries for switch settings can be calculated from the following tables. Switches 1 and 2 are for channel 1 and switches 3 and 4 are for channel 2. For more information, refer to the tables and examples below.

**Switch 1/ Switch 3 Transmission Setting**

Bit	Description	OFF (0)	ON (1)	Remark
0	Operational	Independent	Link	Must be OFF on channel 1
1	Data bits	7	8	
2	Parity bit	No	Yes	
3	Even/Odd Parity	Odd	Even	
4	Stop bit	1	2	
5	Check Sum	No	Yes	Must be ON for use with this driver
6	Write during RUN	Prohibited	Allowed	ON to write data externally
7	Setting modifications	Prohibited	Allowed	

**Note:** To use this driver with its default communications settings (8 data bits, odd parity, 1 stop bit, check sum) and to allow writes during RUN and setting modification, set bits 0 through 7 to 01100111 (0xE6).

**Switch 1/ Switch 3 Communications Setting**

Baud	Bits 8 to 15
300	0x00
600	0x01
1200	0x02
0x03	2400
0x04	4800

Baud	Bits 8 to 15
9600	0x05
14400	0x06
19200	0x07
28800	0x08
38400	0x09
57600	0x0A
115200	0x0B

● **Note:** To use this driver with its default baud rate of 19200, set bits 8 through 15 to 0x07.

#### Switch 2/ Switch 4 Protocol Setting

Setting	Description
0x00	GX Developer
0x01	Mode 1*
0x02	Mode 2
0x03	Mode 3
0x04	Mode 4
0x05	Mode 5**
0x06	Non-procedure
0x07	Bidirectional
0x08	For linked operation
0x09 - 0x0D	Prohibited
0x0E	ROM/RAM/switch test
0x0F	Loop back test

\*Must be used with A Series driver model.

\*\*Must be used with Q Series driver model.

● **Note:** To use this driver with the Q Series model selected, set switch 2 (or 4) to 0x05. This driver can also be used with the A Series model selected if switch 2 (or 4) is set to 0x01.

#### Switch 5 Channel Setting

Set communication objects as channels between 0 and 31 when multi-drop connection is selected. Set to 0 if 1:1 connection is selected.

● **Note:** Set switch 5 to 0x0000 to assign the station number 0 to the PLC.

5. Once the switch settings are entered, write the PLC Parameters back to the device.

6. Then, cycle the power on the PLC to make the new settings active.

# Index

## A

- A1S71C24-R2 Settings and Diagrams 32
- A1S71C24-R4 Settings and Diagrams 33
- Address Descriptions 19
- Advanced Channel Properties 10
- AJ71C24-S8 Setting and Diagrams 34
- AJ71C24 and QJ71C24N communications cards 4
- Auto Dial 9

## B

- Baud Rate 5, 7
- BCD 18
- Boolean 18
- Bridging 14

## C

- Channel Assignment 11
- Channel Properties 5
- Channel Properties - General 5
- Channel Properties - Write Optimizations 9
- Close Idle Connection 8-9
- COM ID 7
- Communication Protocol 5
- Communications Timeouts 13
- Connect Timeout 13
- Connection Type 7

## D

- Data Bits 5, 7
- Data Collection 12
- Data Types Description 18
- Demote on Failure 14

Demotion Period 14  
Device Properties 11  
Device Properties - Auto-Demotion 14  
Device reported an invalid address or error. Block deactivated. | Block address range = '<address>' to '<address>'. 29  
Diagnostics 6  
Discard Requests when Demoted 14  
Do Not Scan, Demand Poll Only 12  
Driver 6, 11  
Duty Cycle 10  
DWord 18

## **E**

Error code received from device. | Error code = <code>h. 29  
Error Mask Definitions 30  
Ethernet Encapsulation 5  
Event Log Messages 29

## **F**

First Word Low 15  
Float 18  
Flow Control 7  
Framing 30

## **H**

Hardware 30

## **I**

I/O error 30  
ID 11  
ID Format 11  
Identification 11  
Idle Time to Close 8-9  
IEEE-754 floating point 10



Initial Updates from Cache 13

Inter-Request Delay 13

## **L**

LBCD 18

Long 18

## **M**

Mitsubishi A Series Address Descriptions 19

Mitsubishi Q Series Address Descriptions 23

Mitsubishi Serial devices 4

Model 11

Modem 9

Multi-Level Networks 16

## **N**

Network Adapter 8

Network Number 15

Non-Normalized Float Handling 10

## **O**

Operational Behavior 8

Optimization Method 9

Overrun 30

Overview 4

## **P**

Parity 5, 7, 30

PC Number 15

Physical Medium 7

PLC Setup 31

Possible network number problem with device. 29

Possible PC number problem with device. 30

**Q**

QJ71C24N 35

**R**

Read Processing 9

Received block length does not match expected length. | Received block length = <number> (bytes),  
Expected block length = <number> (bytes). 29

Redundancy 15

Report Comm. Errors 8-9

Request All Data at Scan Rate 12

Request Data No Faster than Scan Rate 12

Request Timeout 13

Respect Client-Specified Scan Rate 12

Respect Tag-Specified Scan Rate 13

Retry Attempts 13

RX buffer overrun 30

**S**

Scan Mode 12

Serial Communications 6

Serial Port Settings 7

Setup 5

Short 18

Simulated 12

Station number 11

Stop Bits 5, 7

String 18

Supported Devices 5

**T**

Timeouts to Demote 14

TX buffer full 30

**W**

Word 18

Write All Values for All Tags 9

Write Only Latest Value for All Tags 10

Write Only Latest Value for Non-Boolean Tags 9

Write Optimizations 9