

# **Yokogawa Darwin Ethernet Driver Help**

**© 2012 Kepware Technologies**

# Table of Contents

<b>Table of Contents</b> .....	<b>2</b>
<b>Yokogawa Darwin Ethernet Driver Help</b> .....	<b>3</b>
<b>Overview</b> .....	<b>3</b>
<b>Device Setup</b> .....	<b>4</b>
<b>Communications Parameters</b> .....	<b>5</b>
<b>Optimizing Ethernet Communications</b> .....	<b>7</b>
<b>Data Types Description</b> .....	<b>8</b>
<b>Address Descriptions</b> .....	<b>9</b>
<b>DA100-1 Addressing</b> .....	<b>9</b>
<b>DA100-2 Addressing</b> .....	<b>11</b>
<b>DR231 Addressing</b> .....	<b>13</b>
<b>DR232 Addressing</b> .....	<b>16</b>
<b>DR241 Addressing</b> .....	<b>18</b>
<b>DR242 Addressing</b> .....	<b>20</b>
<b>DR130 Addressing</b> .....	<b>22</b>
<b>DC100-1 Addressing</b> .....	<b>25</b>
<b>DC100-2 Addressing</b> .....	<b>27</b>
<b>Automatic Tag Database Generation</b> .....	<b>30</b>
<b>Error Descriptions</b> .....	<b>33</b>
<b>Address Validation</b> .....	<b>33</b>
Address '<address>' is out of range for the specified device or register.....	<b>33</b>
Data Type '<type>' is not valid for device address '<address>'.....	<b>33</b>
Device address '<address>' contains a syntax error.....	<b>33</b>
Device address '<address>' is Read Only.....	<b>34</b>
Missing address.....	<b>34</b>
<b>Device Status Messages</b> .....	<b>34</b>
Device '<device name>' is not responding.....	<b>34</b>
Unable to write to '<address>' on device '<device name>'.....	<b>34</b>
<b>Driver Error Messages</b> .....	<b>34</b>
Winsock initialization failed (OS Error = n).....	<b>35</b>
Winsock V1.1 or higher must be installed to use the Yokogawa Darwin Ethernet device driver.....	<b>35</b>
<b>Index</b> .....	<b>36</b>

## Yokogawa Darwin Ethernet Driver Help

---

Help version 1.018

### CONTENTS

#### [Overview](#)

What is the Yokogawa Darwin Ethernet Driver?

#### [Device Setup](#)

How do I configure a device for use with this driver?

#### [Optimizing Your Ethernet Communications](#)

How do I get the best performance from the Yokogawa Darwin Ethernet Driver?

#### [Data Types Description](#)

What data types does this driver support?

#### [Address Descriptions](#)

How do I address a data location on a Yokogawa Darwin device?

#### [Automatic Tag Database Generation](#)

How can I easily configure tags for the Yokogawa Darwin Ethernet Driver?

#### [Error Descriptions](#)

What error messages does the Yokogawa Darwin Ethernet Driver produce?

### Overview

---

The Yokogawa Darwin Ethernet Driver provides an easy and reliable way to connect Yokogawa Darwin Ethernet devices to OPC Client applications, including HMI, SCADA, Historian, MES, ERP and countless custom applications. It is intended for use with Yokogawa Data Acquisition and Data Recorder devices that support Ethernet TCP communications.

**Device Setup**

**Supported Yokogawa Devices**

DA100-1, DA100-2  
 DR131  
 DR231, DR232  
 DR241, DR242  
 DC100-1, DC100-2

**Connection Timeout**

This parameter specifies the time that the driver will wait for a connection to be made with a device. Depending on network load, the connect time may vary with each connection attempt. The valid range is 1 to 30 seconds. The default setting is 3 seconds.

**Request Timeout**

This parameter specifies the amount of time that the driver will wait for a response from the device before giving up and going on to the next request. Long timeouts will only affect performance if a device is not responding. The valid range is 100 to 30000 milliseconds. The default setting is 1000 milliseconds.

**Retry Attempts**

This parameter specifies the number of times that the driver will retry a message before giving up and going on to the next message. The valid range is 1 to 10. The default setting is 3.


**Note:** For more information on timeouts and retries, refer to the server help file.

**Device ID**


Yokogawa devices are networked using standard IP addressing. In general, the Device ID has the following format: *YYY.YYY.YYY.YYY*, where *YYY* designates the device's IP address. Each *YYY* byte should be in the range of 0 to 255.

**Cable Diagrams**


**Patch Cable (Straight Through)**

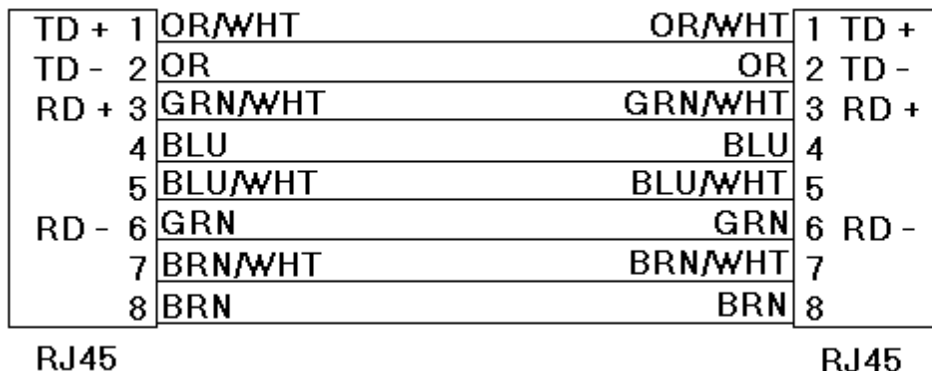

**10 BaseT**

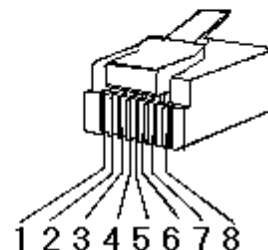

**Crossover Cable**

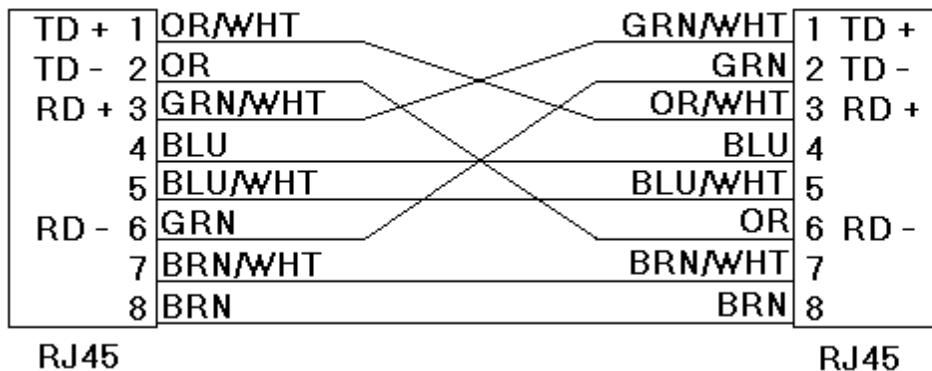

**8-pin RJ45**

## DIP Switch Settings

Set the DIP switch settings on the Ethernet module as shown below.

For configuring the module:



For normal operation:



Switch Position 3 enables the keep alive function of the Ethernet port. This feature must be enabled for reliable operation.

## Communications Parameters

Descriptions of the parameters are as follows:

- Port:** This parameter specifies the port number that the remote device will use. Options include Ethernet Exclusive Port and Ethernet Shared Port. The default setting is Ethernet Exclusive Port. Descriptions of the parameters are as follows:
  - Ethernet Exclusive Port:** When selected, this port does not allow any other machines or host to connect to the Darwin system. Port number 34150 only supports a single connected host (such as this driver) or the DAQ32 software. If a host is attached to the 34150 port when the Ethernet Exclusive port is selected, the Darwin system cannot be communicated with until the connected host releases the port.
  - Ethernet Shared Port:** When selected, this port allows more than one OPC server to connect to the Darwin system. Port number 34151 supports up to four simultaneous connections. This driver must be able to communicate with the Ethernet Exclusive Port at least once when establishing basic driver initialization in order to use this port. The DAQ32 software must be taken off-line to allow this driver to initialize during OPC server start. In an ideal system, this driver would be configured to use the Ethernet Shared Port so that the Ethernet Exclusive Port is available for the DAQ32 software.

**Note:** This driver requires Winsock V1.1 or higher.

- **Special Data Handling:** This parameter allows the driver to be configured to return specific data values for the numerical out of range and error conditions returned from the device. Options include None, +INF, and -INF. The default setting is None. For more information, refer to [Special Data Handling](#).
- **Polling Interval:** This parameter specifies a fixed time interval for all communications with a device. It can be used to prevent the driver from making excessive requests to the device, and to prevent the OPC client from forcing the driver to run at its maximum update rate. The default setting is 1000 milliseconds.
- **Start math when start:** When checked, this option will inform the driver to send a command to the device at communication startup that will start the math computation. The default setting is unchecked.
- **Date & Time:** This parameter specifies the origin of the data value of the Date and Time data types (which represent the date and time of the latest data). Options include Device Time and System Time. The default setting is Device Time. Descriptions of the options are as follows:
  - **Device Time:** When selected, the Date and Time tags will return the date and time read from the device. This date and time represents the date and time that the latest data was measured or computed based on the internal device clock.
  - **System Time:** When selected, the Date and Time tags will return the date and time that the requested data was returned from the device based on the PC system clock.
- **Date Format:** This parameter specifies the format of the return string for the Date data type. Options include MM/DD/YY (month/day/year), YY/MM/DD (year/month/day), or DD/MM/YY (day/month/year). The default setting is MM/DD/YY.
- **Set clock when start:** When checked, this option informs the driver to send a command to the device at communication startup that will set the device clock to the date and time settings of the system clock. The default setting is unchecked.
- **Generate tag database using:** This parameter specifies the origin of the tag name used when automatically generating a tag database. Options include Physical Channel Number and Device Tag Name. The default setting is Physical Channel Number. Descriptions of the options are as follows:
  - **Physical Channel Number:** When selected, the driver will generate tag names based on the channel number of an item. For example, "CH001" or "CH001\_alarm1".
  - **Device Tag Name:** When selected, the driver will generate tag names using the tag name returned by the device for a channel. For example, "Flow" or "Flow\_alarm1".

### Special Data Handling


Special Data Handling specifies how to return specific data values for the numerical out of range and error conditions that are returned from the device. Options include None, +INF, and -INF. Descriptions of the options are as follows:

- **None:** When selected, special data values will be returned with the actual data value received from the device. For example, the data value of a measuring channel Over Range would be returned as 32,767 and the data value of a math channel Over Range would be returned as 2,147,450,879.
- **+INF:** When selected, special data values will be returned as a numerical representation of positive infinity (#INF). The exception is an Under Range condition that is always returned as negative infinity.
- **-INF:** When selected, special data values will be returned as a numerical representation of negative infinity (-#INF). The exception is an Over Range condition that is always returned as positive infinity.

## Optimizing Ethernet Communications


The Yokogawa Darwin Ethernet Driver has been designed to provide the best performance with the least amount of impact on the system's overall performance. While the Yokogawa Darwin Ethernet Driver is fast, there are a couple of guidelines that can be used in order to control and optimize the application and gain maximum performance.

This server refers to communications protocols like Yokogawa Darwin Ethernet as a channel. Each channel defined in the application represents a separate path of execution in the server. Once a channel has been defined, a series of devices must then be defined under that channel. Each of these devices represents a single Ethernet device from which data will be collected. While this approach to defining the application will provide a high level of performance, it won't take full advantage of the Yokogawa Darwin Ethernet Driver or the network. An example of how the application may appear when configured using a single channel is shown below.

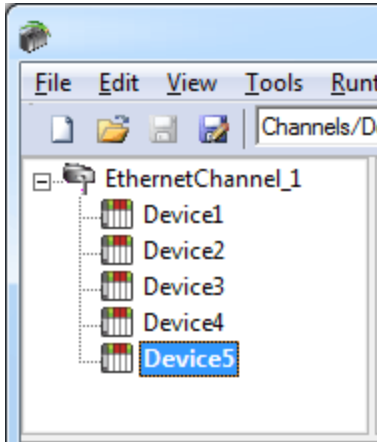

Each device appears under a single Yokogawa Darwin Ethernet channel. In this configuration, the driver must move from one device to the next as quickly as possible in order to gather information at an effective rate. As more devices are added or more information is requested from a single device, the overall update rate begins to suffer.

If the Yokogawa Darwin Ethernet Driver could only define one single channel, then the example shown above would be the only option available; however, the Yokogawa Darwin Ethernet Driver can define up to 16 channels. Using multiple channels distributes the data collection workload by simultaneously issuing multiple requests to the network. An example of how the same application may appear when configured using multiple channels to improve performance is shown below.

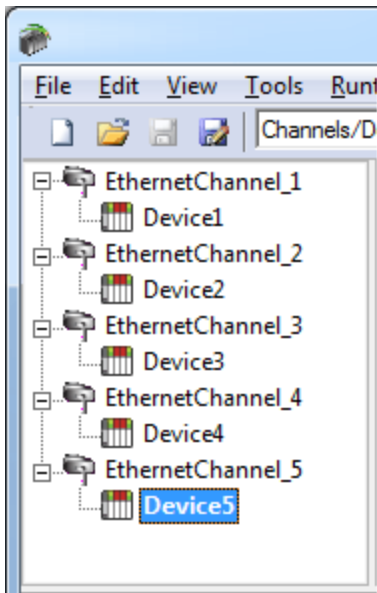

Each device has now been defined under its own channel. In this new configuration, a single path of execution is dedicated to the task of gathering data from each device. If the application has 16 or fewer devices, it can be optimized exactly how it is shown here.

The performance will improve even if the application has more than 16 devices. While 16 or fewer devices may be ideal, the application will still benefit from additional channels. Although by spreading the device load across all 16 channels will cause the server to move from device to device again, it can now do so with far less devices to process on a single channel.

## Data Types Description

---

Data Type	Description
Boolean	Single bit
Byte	Unsigned 8 bit value bit 0 is the low bit bit 7 is the high bit
Word	Unsigned 16 bit value bit 0 is the low bit bit 15 is the high bit
Short	Signed 16 bit value bit 0 is the low bit bit 14 is the high bit bit 15 is the sign bit
Float	32 bit floating point value bit 0 is the low bit bit 31 is the high bit
Double	64 bit floating point value bit 0 is the low bit bit 63 is the high bit
String	Null terminated ASCII string



## Address Descriptions

Address specifications vary depending on the model in use. Select a link from the following list to obtain specific address information for the model of interest.

[DA100-1 Addressing](#)

[DA100-2 Addressing](#)

[DR231 Addressing](#)

[DR232 Addressing](#)

[DR241 Addressing](#)

[DR242 Addressing](#)

[DR130 Addressing](#)

[DC100-1 Addressing](#)

[DC100-2 Addressing](#)

## DA100-1 Addressing

The driver supports the following addresses for this device. The default data type is shown in **bold**.

### Measured Channels

Address Type	Format	Range	Data Types	Access
Process Value of Channel	CHxxx or CHxxx.PV	001-060	<b>Double</b> , Float	Read Only
Alarm Summary of Channel	CHxxx.Alarm	001-060	<b>Short</b> , Word, Byte	Read Only
Alarm Level1 Status of Channel	CHxxx.Alarm1	001-060	<b>Short</b> , Word, Byte	Read Only
Alarm Level2 Status of Channel	CHxxx.Alarm2	001-060	<b>Short</b> , Word, Byte	Read Only
Alarm Level3 Status of Channel	CHxxx.Alarm3	001-060	<b>Short</b> , Word, Byte	Read Only
Alarm Level4 Status of Channel	CHxxx.Alarm4	001-060	<b>Short</b> , Word, Byte	Read Only
Alarm Type Level1 of Channel* (numeric, ex. 0 = Off)	CHxxx.AlarmType1.Num	001-060	<b>Short</b> , Word, Byte	Read Only
Alarm Type Level2 of Channel* (numeric)	CHxxx.AlarmType2.Num	001-060	<b>Short</b> , Word, Byte	Read Only
Alarm Type Level3 of Channel* (numeric)	CHxxx.AlarmType3.Num	001-060	<b>Short</b> , Word, Byte	Read Only
Alarm Type Level4 of Channel* (numeric)	CHxxx.AlarmType4.Num	001-060	<b>Short</b> , Word, Byte	Read Only
Alarm Type Level1 of Channel* (string, ex. "OFF")	CHxxx.AlarmType1.String	001-060	<b>String</b>	Read Only
Alarm Type Level2 of Channel* (string)	CHxxx.AlarmType2.String	001-060	<b>String</b>	Read Only
Alarm Type Level3 of Channel* (string)	CHxxx.AlarmType3.String	001-060	<b>String</b>	Read Only
Alarm Type Level4 of Channel* (string)	CHxxx.AlarmType4.String	001-060	<b>String</b>	Read Only
Set and Read Level1 Alarm Setpoint	CHxxx.ASP1	001-060	<b>Double</b> , Float	Read/Write
Set and Read Level2 Alarm Setpoint	CHxxx.ASP2	001-060	<b>Double</b> , Float	Read/Write
Set and Read Level3 Alarm Setpoint	CHxxx.ASP3	001-060	<b>Double</b> , Float	Read/Write
Set and Read Level4 Alarm Setpoint	CHxxx.ASP4	001-060	<b>Double</b> , Float	Read/Write
Upper Scale Value of Channel*	CHxxx.scale_Hi	001-060	<b>Double</b> , Float	Read Only
Lower Scale Value of Channel*	CHxxx.scale_Lo	001-060	<b>Double</b> , Float	Read Only
Unit String of Channel*	CHxxx.unit	001-060	<b>String</b>	Read Only
Tagname of Channel*	CHxxx.tag	001-060	<b>String</b>	Read Only
Status of Channel*	CHxxx.status	001-060	<b>String</b>	Read Only

Lowest Measuring Channel*	CH.Low		<b>Short</b> , Word, Byte	Read Only
Highest Measuring Channel*	CH.High		<b>Short</b> , Word, Byte	Read Only

### Math Channels

Address Type	Format	Range	Data Types	Access
Process Value of Math Channel	CHAx.x.PV	01-30	<b>Double</b> , Float	Read Only
Alarm Summary of Math Channel	CHAx.x.Alarm	01-30	<b>Short</b> , Word, Byte	Read Only
Alarm Level1 Status of Math Channel	CHAx.x.Alarm1	01-30	<b>Short</b> , Word, Byte	Read Only
Alarm Level2 Status of Math Channel	CHAx.x.Alarm2	01-30	<b>Short</b> , Word, Byte	Read Only
Alarm Level3 Status of Math Channel	CHAx.x.Alarm3	01-30	<b>Short</b> , Word, Byte	Read Only
Alarm Level4 Status of Math Channel	CHAx.x.Alarm4	01-30	<b>Short</b> , Word, Byte	Read Only
Set and Read Level1 Alarm Setpoint	CHAx.x.ASP1	01-30	<b>Double</b> , Float	Read/Write
Set and Read Level2 Alarm Setpoint	CHAx.x.ASP2	01-30	<b>Double</b> , Float	Read/Write
Set and Read Level3 Alarm Setpoint	CHAx.x.ASP3	01-30	<b>Double</b> , Float	Read/Write
Set and Read Level4 Alarm Setpoint	CHAx.x.ASP4	01-30	<b>Double</b> , Float	Read/Write
Upper Scale Value of Math Channel*	CHAx.x.scale_Hi	01-30	<b>Double</b> , Float	Read Only
Lower Scale Value of Math Channel*	CHAx.x.scale_Lo	01-30	<b>Double</b> , Float	Read Only
Unit String of Math Channel*	CHAx.x.unit	01-30	<b>String</b>	Read Only
Tagname of Math Channel*	CHAx.x.tag	01-30	<b>String</b>	Read Only
Status of Math Channel*	CHAx.x.status	01-30	<b>String</b>	Read Only
Lowest Math Channel*	CHA.Low		<b>Short</b> , Word, Byte	Read Only
Highest Math Channel*	CHA.High		<b>Short</b> , Word, Byte	Read Only

\*Data associated with these addresses are only read at the device at the start of a communications session. Once read, the values will not be refreshed until the server has been restarted or the "Reset" tag has been invoked. To invoke a reset, a non-zero value must be written to the Reset tag. Once the Reset tag has been invoked, the driver will reinitialize all startup data from the device.

### Alarm Setpoints

Data values for Alarm Setpoints that are undefined in the device will be returned as +INF. Data values can only be written to Alarm Setpoints that are defined in the device. Write operations to undefined Alarm Setpoints will return an error.

### Scales

Data values for Scale\_Hi and Scale\_Lo for channels that are skipped will be returned as +INF.

### Tag Names

For devices that do not support tag names and channels that have unspecified tag names, the driver will construct an internal tag name based on the channel number. For example, the tag name of address 'CH001' will be returned as 'CH001'.

### General Device Data

Address Type	Format	Range	Data Types	Access
Date of Last Data	Date		<b>String</b>	Read Only
Time of Last Data	Time		<b>String</b>	Read Only
Model Name of Device*	Model		<b>String</b>	Read Only
Digital Output (Main Unit)	DOxxx	001-060	<b>Boolean</b>	Read/Write
Digital Output (Internal Switch)	DOSxx	01-60	<b>Boolean</b>	Read/Write
Math Communication Data*	CDxx	01-30	<b>Short</b> , Word, Byte	Write Only
Control Math Execution	MathControl		<b>Short</b> , Word, Byte	Write Only
Reset Alarms	AlarmReset		<b>Boolean</b>	Write Only
Control Command and Response	Command		<b>String</b>	Read/Write
Direct Reloading of Configuration	Reset		<b>Boolean</b>	Write Only
SetTime*	Tag		<b>Boolean</b>	Write Only

\*The SetTime tag will cause the device time to be updated. Writing 0 or 1 to the tag will update the Device Date and Time which can be verified from the Date tag and the Time tag. The SetTime tag will always display 0 because it is a Write Only tag. After a successful update, the following message will be posted: "Device Clock set to system time [Device <device\_name>]."

**Note:** The SetTime tag requires that the device's Port parameter be set to Ethernet Exclusive Port. For more information, refer to [Communications Parameters](#).

### Math Communication Data

The CD address type is only valid for devices equipped with the math option and write operations to CD addresses for non-math equipped devices will return an error. The range of valid data for addresses 'CDxx' is -32000 to 32000. CD data values are converted in the device from a whole number to a real number based on the decimal point placement specified for the associated math channel. For example, a data value of 32000 written to a CD address location with a decimal point placement of .000 would be interpreted by the device as 32.000

### Model Name of Device

The Model address type that returns the model name of the device may return 'DR231' for models of type DR241 and 'DR232' for models of type DR242.

### Control Math Execution

The MathControl address type is only available for devices equipped with the math option and write operations to the MathControl tag for non-math equipped devices will return an error.

### Control Command and Response

The Command address allows the user to send a string command and receive a string response to and from the device. This allows the user to send any command to the device, including commands not directly supported by the driver.

**Caution:** Write operations using the Command address should be performed with care.

**Note 1:** The actual number of addresses available for of each type depends on the configuration of the Yokogawa device. If at runtime the driver finds that an address is not present in the device, the driver will post an error message and remove the tag from its scan list.

**Note 2:** Addresses that have Write Only access are assigned a default access of Read/Write. However, data values are unreadable for these addresses and the associated tags are not included in the scan list. The current data value for these tags will always be 0 for numeric data types and null string for string data types.

## DA100-2 Addressing

The driver supports the following addresses for this device. The default data type is shown in **bold**.

### Measured Channels

Address Type	Format	Range	Data Types	Access
Process Value of Channel	CHxxx or CHxxx.PV	001-560	<b>Double</b> , Float	Read Only
Alarm Summary of Channel	CHxxx.Alarm	001-560	<b>Short</b> , Word, Byte	Read Only
Alarm Level1 Status of Channel	CHxxx.Alarm1	001-560	<b>Short</b> , Word, Byte	Read Only
Alarm Level2 Status of Channel	CHxxx.Alarm2	001-560	<b>Short</b> , Word, Byte	Read Only
Alarm Level3 Status of Channel	CHxxx.Alarm3	001-560	<b>Short</b> , Word, Byte	Read Only
Alarm Level4 Status of Channel	CHxxx.Alarm4	001-560	<b>Short</b> , Word, Byte	Read Only
Alarm Type Level1 of Channel* (numeric, ex. 0 = Off)	CHxxx.AlarmType1.Num	001-560	<b>Short</b> , Word, Byte	Read Only
Alarm Type Level2 of Channel* (numeric)	CHxxx.AlarmType2.Num	001-560	<b>Short</b> , Word, Byte	Read Only
Alarm Type Level3 of Channel* (numeric)	CHxxx.AlarmType3.Num	001-560	<b>Short</b> , Word, Byte	Read Only
Alarm Type Level4 of Channel* (numeric)	CHxxx.AlarmType4.Num	001-560	<b>Short</b> , Word, Byte	Read Only
Alarm Type Level1 of Channel* (string, ex. "OFF")	CHxxx.AlarmType1.String	001-560	<b>String</b>	Read Only

Alarm Type Level2 of Channel* (string)	CHxxx.AlarmType2.String	001-560	<b>String</b>	Read Only
Alarm Type Level3 of Channel* (string)	CHxxx.AlarmType3.String	001-560	<b>String</b>	Read Only
Alarm Type Level4 of Channel* (string)	CHxxx.AlarmType4.String	001-560	<b>String</b>	Read Only
Set and Read Level1 Alarm Setpoint	CHxxx.ASP1	001-560	<b>Double</b> , Float	Read/Write
Set and Read Level2 Alarm Setpoint	CHxxx.ASP2	001-560	<b>Double</b> , Float	Read/Write
Set and Read Level3 Alarm Setpoint	CHxxx.ASP3	001-560	<b>Double</b> , Float	Read/Write
Set and Read Level4 Alarm Setpoint	CHxxx.ASP4	001-560	<b>Double</b> , Float	Read/Write
Upper Scale Value of Channel*	CHxxx.scale_Hi	001-560	<b>Double</b> , Float	Read Only
Lower Scale Value of Channel*	CHxxx.scale_Lo	001-560	<b>Double</b> , Float	Read Only
Unit String of Channel*	CHxxx.unit	001-560	<b>String</b>	Read Only
Tagname of Channel*	CHxxx.tag	001-560	<b>String</b>	Read Only
Status of Channel*	CHxxx.status	001-560	<b>String</b>	Read Only
Lowest Measuring Channel*	CH.Low		<b>Short</b> , Word, Byte	Read Only
Highest Measuring Channel*	CH.High		<b>Short</b> , Word, Byte	Read Only

### Math Channels

Address Type	Format	Range	Data Types	Access
Process Value of Math Channel	CHAxX or CHAxX.PV	01-60	<b>Double</b> , Float	Read Only
Alarm Summary of Math Channel	CHAxX.Alarm	01-60	<b>Short</b> , Word, Byte	Read Only
Alarm Level1 Status of Math Channel	CHAxX.Alarm1	01-60	<b>Short</b> , Word, Byte	Read Only
Alarm Level2 Status of Math Channel	CHAxX.Alarm2	01-60	<b>Short</b> , Word, Byte	Read Only
Alarm Level3 Status of Math Channel	CHAxX.Alarm3	01-60	<b>Short</b> , Word, Byte	Read Only
Alarm Level4 Status of Math Channel	CHAxX.Alarm4	01-60	<b>Short</b> , Word, Byte	Read Only
Set and Read Level1 Alarm Setpoint	CHAxX.ASP1	01-60	<b>Double</b> , Float	Read/Write
Set and Read Level2 Alarm Setpoint	CHAxX.ASP2	01-60	<b>Double</b> , Float	Read/Write
Set and Read Level3 Alarm Setpoint	CHAxX.ASP3	01-60	<b>Double</b> , Float	Read/Write
Set and Read Level4 Alarm Setpoint	CHAxX.ASP4	01-60	<b>Double</b> , Float	Read/Write
Upper Scale Value of Math Channel*	CHAxX.scale_Hi	01-60	<b>Double</b> , Float	Read Only
Lower Scale Value of Math Channel*	CHAxX.scale_Lo	01-60	<b>Double</b> , Float	Read Only
Unit String of Math Channel*	CHAxX.unit	01-60	<b>String</b>	Read Only
Tagname of Math Channel*	CHAxX.tag	01-60	<b>String</b>	Read Only
Status of Math Channel*	CHAxX.status	01-60	<b>String</b>	Read Only
Lowest Math Channel*	CHA.Low		<b>Short</b> , Word, Byte	Read Only
Highest Math Channel*	CHA.High		<b>Short</b> , Word, Byte	Read Only

\*Data associated with these addresses are only read at the device at the start of a communications session. Once read, the values will not be refreshed until the server has been restarted or the "Reset" tag has been invoked. To invoke a reset, a non zero value must be written to the Reset tag. Once the Reset tag has been invoked, the driver will reinitialize all startup data from the device.

### Alarm Setpoints

Data values for Alarm Setpoints that are undefined in the device will be returned as +INF. Data values can only be written to Alarm Setpoints that are defined in the device. Write operations to undefined Alarm Setpoints will return an error.

### Scales

Data values for Scale\_Hi and Scale\_Lo for channels that are skipped will be returned as +INF.

### Tag Names

For devices that do not support tag names and channels that have unspecified tag names, the driver will construct an internal tag name based on the channel number. For example, the tag name of address 'CH001' will be returned as 'CH001'.

### General Device Data

Address Type	Format	Range	Data Types	Access
Date of Last Data	Date		<b>String</b>	Read Only
Time of Last Data	Time		<b>String</b>	Read Only
Model Name of Device*	Model		<b>String</b>	Read Only
Digital Output (Main Unit)	DOIxx	01-60	<b>Boolean</b>	Read/Write
Digital Output (Internal Switch)	DOSxx	01-60	<b>Boolean</b>	Read/Write
Digital Output (Sub Units)	DOxxx	001-560	<b>Boolean</b>	Read/Write
Math Communication Data*	CDxx	01-60	<b>Short, Word, Byte</b>	Write Only
Control Math Execution	MathControl		<b>Short, Word, Byte</b>	Write Only
Reset Alarms	AlarmReset		<b>Boolean</b>	Write Only
Control Command and Response	Command		<b>String</b>	Read/Write
Direct Reloading of Configuration	Reset		<b>Boolean</b>	Write Only
SetTime*	Tag		<b>Boolean</b>	Write Only

\*The SetTime tag will cause the device time to be updated. Writing 0 or 1 to the tag will update the Device Date and Time which can be verified from the Date tag and the Time tag. The SetTime tag will always display 0 because it is a Write Only tag. After a successful update, the following message will be posted: "Device Clock set to system time [Device <device\_name>]."

**Note:** The SetTime tag requires that the device's Port parameter be set to Ethernet Exclusive Port. For more information, refer to [Communications Parameters](#).

### Math Communication Data

The CD address type is only valid for devices equipped with the math option and write operations to CD addresses for non-math equipped devices will return an error. The range of valid data for addresses 'CDxx' is -32000 to 32000. CD data values are converted in the device from a whole number to a real number based on the decimal point placement specified for the associated math channel. For example, a data value of 32000 written to a CD address location with a decimal point placement of .000 would be interpreted by the device as 32.000

### Model Name of Device

The Model address type that returns the model name of the device may return 'DR231' for models of type DR241 and 'DR232' for models of type DR242.

### Control Math Execution

The MathControl address type is only available for devices equipped with the math option and write operations to the MathControl tag for non-math equipped devices will return an error.

### Control Command and Response

The Command address allows the user to send a string command and receive a string response to and from the device. This allows the user to send any command to the device, including commands not directly supported by the driver.

**Caution:** Write operations using the Command address should be performed with care.

**Note 1:** The actual number of addresses available for of each type depends on the configuration of the Yokogawa device. If at runtime the driver finds that an address is not present in the device, the driver will post an error message and remove the tag from its scan list.

**Note 2:** Addresses that have Write Only access are assigned a default access of Read/Write. However, data values are unreadable for these addresses and the associated tags are not included in the scan list. The current data value for these tags will always be 0 for numeric data types and null string for string data types.

### DR231 Addressing

The driver supports the following addresses for this device. The default data type is shown in **bold**.

### Measured Channels

Address Type	Format	Range	Data Types	Access
Process Value of Channel	CHxxx or CHxxx.PV	001-040	<b>Double</b> , Float	Read Only
Alarm Summary of Channel	CHxxx.Alarm	001-040	<b>Short</b> , Word, Byte	Read Only
Alarm Level1 Status of Channel	CHxxx.Alarm1	001-040	<b>Short</b> , Word, Byte	Read Only

Alarm Level2 Status of Channel	CHxxx.Alarm2	001-040	<b>Short</b> , Word, Byte	Read Only
Alarm Level3 Status of Channel	CHxxx.Alarm3	001-040	<b>Short</b> , Word, Byte	Read Only
Alarm Level4 Status of Channel	CHxxx.Alarm4	001-040	<b>Short</b> , Word, Byte	Read Only
Alarm Type Level1 of Channel* (numeric, ex. 0 = Off)	CHxxx.AlarmType1.Num	001-040	<b>Short</b> , Word, Byte	Read Only
Alarm Type Level2 of Channel* (numeric)	CHxxx.AlarmType2.Num	001-040	<b>Short</b> , Word, Byte	Read Only
Alarm Type Level3 of Channel* (numeric)	CHxxx.AlarmType3.Num	001-040	<b>Short</b> , Word, Byte	Read Only
Alarm Type Level4 of Channel* (numeric)	CHxxx.AlarmType4.Num	001-040	<b>Short</b> , Word, Byte	Read Only
Alarm Type Level1 of Channel* (string, ex. "OFF")	CHxxx.AlarmType1.String	001-040	<b>String</b>	Read Only
Alarm Type Level2 of Channel* (string)	CHxxx.AlarmType2.String	001-040	<b>String</b>	Read Only
Alarm Type Level3 of Channel* (string)	CHxxx.AlarmType3.String	001-040	<b>String</b>	Read Only
Alarm Type Level4 of Channel* (string)	CHxxx.AlarmType4.String	001-040	<b>String</b>	Read Only
Set and Read Level1 Alarm Setpoint	CHxxx.ASP1	001-040	<b>Double</b> , Float	Read/Write
Set and Read Level2 Alarm Setpoint	CHxxx.ASP2	001-040	<b>Double</b> , Float	Read/Write
Set and Read Level3 Alarm Setpoint	CHxxx.ASP3	001-040	<b>Double</b> , Float	Read/Write
Set and Read Level4 Alarm Setpoint	CHxxx.ASP4	001-040	<b>Double</b> , Float	Read/Write
Upper Scale Value of Channel*	CHxxx.scale_Hi	001-040	<b>Double</b> , Float	Read Only
Lower Scale Value of Channel*	CHxxx.scale_Lo	001-040	<b>Double</b> , Float	Read Only
Unit String of Channel*	CHxxx.unit	001-040	<b>String</b>	Read Only
Tagname of Channel*	CHxxx.tag	001-040	<b>String</b>	Read Only
Status of Channel*	CHxxx.status	001-040	<b>String</b>	Read Only
Lowest Measuring Channel*	CH.Low		<b>Short</b> , Word, Byte	Read Only
Highest Measuring Channel*	CH.High		<b>Short</b> , Word, Byte	Read Only

### Math Channels

Address Type	Format	Range	Data Types	Access
Process Value of Math Channel	CHAxX or CHAxX.PV	01-30	<b>Double</b> , Float	Read Only
Alarm Summary of Math Channel	CHAxX.Alarm	01-30	<b>Short</b> , Word, Byte	Read Only
Alarm Level1 Status of Math Channel	CHAxX.Alarm1	01-30	<b>Short</b> , Word, Byte	Read Only
Alarm Level2 Status of Math Channel	CHAxX.Alarm2	01-30	<b>Short</b> , Word, Byte	Read Only
Alarm Level3 Status of Math Channel	CHAxX.Alarm3	01-30	<b>Short</b> , Word, Byte	Read Only
Alarm Level4 Status of Math Channel	CHAxX.Alarm4	01-30	<b>Short</b> , Word, Byte	Read Only
Set and Read Level1 Alarm Setpoint	CHAxX.ASP1	01-30	<b>Double</b> , Float	Read/Write
Set and Read Level2 Alarm Setpoint	CHAxX.ASP2	01-30	<b>Double</b> , Float	Read/Write
Set and Read Level3 Alarm Setpoint	CHAxX.ASP3	01-30	<b>Double</b> , Float	Read/Write
Set and Read Level4 Alarm Setpoint	CHAxX.ASP4	01-30	<b>Double</b> , Float	Read/Write
Upper Scale Value of Math Channel*	CHAxX.scale_Hi	01-30	<b>Double</b> , Float	Read Only
Lower Scale Value of Math Channel*	CHAxX.scale_Lo	01-30	<b>Double</b> , Float	Read Only
Unit String of Math Channel*	CHAxX.unit	01-30	<b>String</b>	Read Only
Tagname of Math Channel*	CHAxX.tag	01-30	<b>String</b>	Read Only
Status of Math Channel*	CHAxX.status	01-30	<b>String</b>	Read Only
Lowest Math Channel*	CHA.Low		<b>Short</b> , Word, Byte	Read Only
Highest Math Channel*	CHA.High		<b>Short</b> , Word, Byte	Read Only

\*Data associated with these addresses are only read at the device at the start of a communications session. Once read, the values will not be refreshed until the server has been restarted or the "Reset" tag has been invoked. To invoke a reset, a non-zero value must be written to the Reset tag. Once the Reset tag has been invoked, the driver will reinitialize all startup data from the device.

### Alarm Setpoints

Data values for Alarm Setpoints that are undefined in the device will be returned as +INF. Data values can only be written to Alarm Setpoints that are defined in the device. Write operations to undefined Alarm Setpoints will return an error.

### Scales

Data values for Scale\_Hi and Scale\_Lo for channels that are skipped will be returned as +INF.

### Tag Names

For devices that do not support tag names and channels that have unspecified tag names, the driver will construct an internal tag name based on the channel number. For example, the tag name of address 'CH001' will be returned as 'CH001'.

### General Device Data

Address Type	Format	Range	Data Types	Access
Date of Last Data	Date		<b>String</b>	Read Only
Time of Last Data	Time		<b>String</b>	Read Only
Model Name of Device*	Model		<b>String</b>	Read Only
Math Communication Data*	CDxx	01-30	<b>Short, Word, Byte</b>	Write Only
Control Math Execution	MathControl		<b>Short, Word, Byte</b>	Write Only
Reset Alarms	AlarmReset		<b>Boolean</b>	Write Only
Control Command and Response	Command		<b>String</b>	Read/Write
Direct Reloading of Configuration	Reset		<b>Boolean</b>	Write Only
SetTime*	Tag		<b>Boolean</b>	Write Only

\*The SetTime tag will cause the device time to be updated. Writing 0 or 1 to the tag will update the Device Date and Time which can be verified from the Date tag and the Time tag. The SetTime tag will always display 0 because it is a Write Only tag. After a successful update, the following message will be posted: "Device Clock set to system time [Device <device\_name>]."

**Note:** The SetTime tag requires that the device's Port parameter be set to Ethernet Exclusive Port. For more information, refer to [Communications Parameters](#).

### Math Communication Data

The CD address type is only valid for devices equipped with the math option and write operations to CD addresses for non-math equipped devices will return an error. The range of valid data for addresses 'CDxx' is -32000 to 32000. CD data values are converted in the device from a whole number to a real number based on the decimal point placement specified for the associated math channel. For example, the device would interpret a data value of 32000 written to a CD address location with a decimal point placement of .000 as 32.000

### Model Name of Device

The Model address type that returns the model name of the device may return 'DR231' for models of type DR241 and 'DR232' for models of type DR242.

### Control Math Execution

The MathControl address type is only available for devices equipped with the math option and write operations to the MathControl tag for non-math equipped devices will return an error.

### Control Command and Response

The Command address allows the user to send a string command and receive a string response to and from the device. This allows the user to send any command to the device, including commands not directly supported by the driver.

**Caution:** Write operations using the Command address should be performed with care.

**Note 1:** The actual number of addresses available for of each type depends on the configuration of the Yokogawa device. If at runtime the driver finds that an address is not present in the device, the driver will post an error message and remove the tag from its scan list.

**Note 2:** Addresses that have Write Only access are assigned a default access of Read/Write. However, data values are unreadable for these addresses and the associated tags are not included in the scan list. The current data value for these tags will always be 0 for numeric data types and null string for string data types.

## DR232 Addressing

The driver supports the following addresses for this device. The default data type is shown in **bold**.

### Measured Channels

Address Type	Format	Range	Data Types	Access
Process Value of Channel	CHxxx or CHxxx.PV	001-560	<b>Double</b> , Float	Read Only
Alarm Summary of Channel	CHxxx.Alarm	001-560	<b>Short</b> , Word, Byte	Read Only
Alarm Level1 Status of Channel	CHxxx.Alarm1	001-560	<b>Short</b> , Word, Byte	Read Only
Alarm Level2 Status of Channel	CHxxx.Alarm2	001-560	<b>Short</b> , Word, Byte	Read Only
Alarm Level3 Status of Channel	CHxxx.Alarm3	001-560	<b>Short</b> , Word, Byte	Read Only
Alarm Level4 Status of Channel	CHxxx.Alarm4	001-560	<b>Short</b> , Word, Byte	Read Only
Alarm Type Level1 of Channel* (numeric, ex. 0 = Off)	CHxxx.AlarmType1.Num	001-560	<b>Short</b> , Word, Byte	Read Only
Alarm Type Level2 of Channel* (numeric)	CHxxx.AlarmType2.Num	001-560	<b>Short</b> , Word, Byte	Read Only
Alarm Type Level3 of Channel* (numeric)	CHxxx.AlarmType3.Num	001-560	<b>Short</b> , Word, Byte	Read Only
Alarm Type Level4 of Channel* (numeric)	CHxxx.AlarmType4.Num	001-560	<b>Short</b> , Word, Byte	Read Only
Alarm Type Level1 of Channel* (string, ex. "OFF")	CHxxx.AlarmType1.String	001-560	<b>String</b>	Read Only
Alarm Type Level2 of Channel* (string)	CHxxx.AlarmType2.String	001-560	<b>String</b>	Read Only
Alarm Type Level3 of Channel* (string)	CHxxx.AlarmType3.String	001-560	<b>String</b>	Read Only
Alarm Type Level4 of Channel* (string)	CHxxx.AlarmType4.String	001-560	<b>String</b>	Read Only
Set and Read Level1 Alarm Setpoint	CHxxx.ASP1	001-560	<b>Double</b> , Float	Read/Write
Set and Read Level2 Alarm Setpoint	CHxxx.ASP2	001-560	<b>Double</b> , Float	Read/Write
Set and Read Level3 Alarm Setpoint	CHxxx.ASP3	001-560	<b>Double</b> , Float	Read/Write
Set and Read Level4 Alarm Setpoint	CHxxx.ASP4	001-560	<b>Double</b> , Float	Read/Write
Upper Scale Value of Channel*	CHxxx.scale_Hi	001-560	<b>Double</b> , Float	Read Only
Lower Scale Value of Channel*	CHxxx.scale_Lo	001-560	<b>Double</b> , Float	Read Only
Unit String of Channel*	CHxxx.unit	001-560	<b>String</b>	Read Only
Tagname of Channel*	CHxxx.tag	001-560	<b>String</b>	Read Only
Status of Channel*	CHxxx.status	001-560	<b>String</b>	Read Only
Lowest Measuring Channel*	CH.Low		<b>Short</b> , Word, Byte	Read Only
Highest Measuring Channel*	CH.High		<b>Short</b> , Word, Byte	Read Only

### Math Channels

Address Type	Format	Range	Data Types	Access
Process Value of Math Channel	CHAxX or CHAxX.PV	01-60	<b>Double</b> , Float	Read Only
Alarm Summary of Math Channel	CHAxX.Alarm	01-60	<b>Short</b> , Word, Byte	Read Only
Alarm Level1 Status of Math Channel	CHAxX.Alarm1	01-60	<b>Short</b> , Word, Byte	Read Only
Alarm Level2 Status of Math Channel	CHAxX.Alarm2	01-60	<b>Short</b> , Word, Byte	Read Only



Alarm Level3 Status of Math Channel	CHAx.x.Alarm3	01-60	<b>Short</b> , Word, Byte	Read Only
Alarm Level4 Status of Math Channel	CHAx.x.Alarm4	01-60	<b>Short</b> , Word, Byte	Read Only
Set and Read Level1 Alarm Setpoint	CHAx.x.ASP1	01-60	<b>Double</b> , Float	Read/Write
Set and Read Level2 Alarm Setpoint	CHAx.x.ASP2	01-60	<b>Double</b> , Float	Read/Write
Set and Read Level3 Alarm Setpoint	CHAx.x.ASP3	01-60	<b>Double</b> , Float	Read/Write
Set and Read Level4 Alarm Setpoint	CHAx.x.ASP4	01-60	<b>Double</b> , Float	Read/Write
Upper Scale Value of Math Channel*	CHAx.x.scale_Hi	01-60	<b>Double</b> , Float	Read Only
Lower Scale Value of Math Channel*	CHAx.x.scale_Lo	01-60	<b>Double</b> , Float	Read Only
Unit String of Math Channel*	CHAx.x.unit	01-60	<b>String</b>	Read Only
Tagname of Math Channel*	CHAx.x.tag	01-60	<b>String</b>	Read Only
Status of Math Channel*	CHAx.x.status	01-60	<b>String</b>	Read Only
Lowest Math Channel*	CHA.Low		<b>Short</b> , Word, Byte	Read Only
Highest Math Channel*	CHA.High		<b>Short</b> , Word, Byte	Read Only

\*Data associated with these addresses are only read at the device at the start of a communications session. Once read, the values will not be refreshed until the server has been restarted or the "Reset" tag has been invoked. To invoke a reset, a non-zero value must be written to the Reset tag. Once the Reset tag has been invoked, the driver will reinitialize all startup data from the device.

### Alarm Setpoints

Data values for Alarm Setpoints that are undefined in the device will be returned as +INF. Data values can only be written to Alarm Setpoints that are defined in the device. Write operations to undefined Alarm Setpoints will return an error.

### Scales

Data values for Scale\_Hi and Scale\_Lo for channels that are skipped will be returned as +INF.

### Tag Names

For devices that do not support tag names and channels that have unspecified tag names, the driver will construct an internal tag name based on the channel number. For example, the tag name of address 'CH001' will be returned as 'CH001'.

### General Device Data

Address Type	Format	Range	Data Types	Access
Date of Last Data	Date		<b>String</b>	Read Only
Time of Last Data	Time		<b>String</b>	Read Only
Model Name of Device*	Model		<b>String</b>	Read Only
Math Communication Data*	CDxx	01-60	<b>Short</b> , Word, Byte	Write Only
Control Math Execution	MathControl		<b>Short</b> , Word, Byte	Write Only
Reset Alarms	AlarmReset		<b>Boolean</b>	Write Only
Control Command and Response	Command		<b>String</b>	Read/Write
Direct Reloading of Configuration	Reset		<b>Boolean</b>	Write Only
SetTime*	Tag		<b>Boolean</b>	Write Only

\*The SetTime tag will cause the device time to be updated. Writing 0 or 1 to the tag will update the Device Date and Time which can be verified from the Date tag and the Time tag. The SetTime tag will always display 0 because it is a Write Only tag. After a successful update, the following message will be posted: "Device Clock set to system time [Device <device\_name>]."

**Note:** The SetTime tag requires that the device's Port parameter be set to Ethernet Exclusive Port. For more information, refer to [Communications Parameters](#).

### Math Communication Data

The CD address type is only valid for devices equipped with the math option and write operations to CD addresses for non-math equipped devices will return an error. The range of valid data for addresses 'CDxx' is -32000 to 32000. CD data values are converted in the device from a whole number to a real number based on the decimal point placement specified for the associated math channel. For example, the device would interpret a data value of 32000 written to a CD address location with a decimal point placement of .000 as 32.000

### Model Name of Device

The Model address type that returns the model name of the device may return 'DR231' for models of type DR241 and 'DR232' for models of type DR242.

### Control Math Execution

The MathControl address type is only available for devices equipped with the math option and write operations to the MathControl tag for non-math equipped devices will return an error.

### Control Command and Response

The Command address allows the user to send a string command and receive a string response to and from the device. This allows the user to send any command to the device, including commands not directly supported by the driver.

**Caution:** Write operations using the Command address should be performed with care.

**Note 1:** The actual number of addresses available for of each type depends on the configuration of the Yokogawa device. If at runtime the driver finds that an address is not present in the device, the driver will post an error message and remove the tag from its scan list.

**Note 2:** Addresses that have Write Only access are assigned a default access of Read/Write. However, data values are unreadable for these addresses and the associated tags are not included in the scan list. The current data value for these tags will always be 0 for numeric data types and null string for string data types.

## DR241 Addressing

The driver supports the following addresses for this device. The default data type is shown in **bold**.

### Measured Channels

Address Type	Format	Range	Data Types	Access
Process Value of Channel	CHxxx or CHxxx.PV	001-040	<b>Double</b> , Float	Read Only
Alarm Summary of Channel	CHxxx.Alarm	001-040	<b>Short</b> , Word, Byte	Read Only
Alarm Level1 Status of Channel	CHxxx.Alarm1	001-040	<b>Short</b> , Word, Byte	Read Only
Alarm Level2 Status of Channel	CHxxx.Alarm2	001-040	<b>Short</b> , Word, Byte	Read Only
Alarm Level3 Status of Channel	CHxxx.Alarm3	001-040	<b>Short</b> , Word, Byte	Read Only
Alarm Level4 Status of Channel	CHxxx.Alarm4	001-040	<b>Short</b> , Word, Byte	Read Only
Alarm Type Level1 of Channel* (numeric, ex. 0 = Off)	CHxxx.AlarmType1.Num	001-040	<b>Short</b> , Word, Byte	Read Only
Alarm Type Level2 of Channel* (numeric)	CHxxx.AlarmType2.Num	001-040	<b>Short</b> , Word, Byte	Read Only
Alarm Type Level3 of Channel* (numeric)	CHxxx.AlarmType3.Num	001-040	<b>Short</b> , Word, Byte	Read Only
Alarm Type Level4 of Channel* (numeric)	CHxxx.AlarmType4.Num	001-040	<b>Short</b> , Word, Byte	Read Only
Alarm Type Level1 of Channel* (string, ex. "OFF")	CHxxx.AlarmType1.String	001-040	<b>String</b>	Read Only
Alarm Type Level2 of Channel* (string)	CHxxx.AlarmType2.String	001-040	<b>String</b>	Read Only
Alarm Type Level3 of Channel* (string)	CHxxx.AlarmType3.String	001-040	<b>String</b>	Read Only
Alarm Type Level4 of Channel* (string)	CHxxx.AlarmType4.String	001-040	<b>String</b>	Read Only
Set and Read Level1 Alarm Setpoint	CHxxx.ASP1	001-040	<b>Double</b> , Float	Read/Write
Set and Read Level2 Alarm Setpoint	CHxxx.ASP2	001-040	<b>Double</b> , Float	Read/Write
Set and Read Level3 Alarm Setpoint	CHxxx.ASP3	001-040	<b>Double</b> , Float	Read/Write
Set and Read Level4 Alarm Setpoint	CHxxx.ASP4	001-040	<b>Double</b> , Float	Read/Write
Upper Scale Value of Channel*	CHxxx.scale_Hi	001-040	<b>Double</b> , Float	Read Only
Lower Scale Value of Channel*	CHxxx.scale_Lo	001-040	<b>Double</b> , Float	Read Only

Unit String of Channel*	CHxxx.unit	001-040	<b>String</b>	Read Only
Tagname of Channel*	CHxxx.tag	001-040	<b>String</b>	Read Only
Status of Channel*	CHxxx.status	001-040	<b>String</b>	Read Only
Lowest Measuring Channel*	CH.Low		<b>Short, Word, Byte</b>	Read Only
Highest Measuring Channel*	CH.High		<b>Short, Word, Byte</b>	Read Only

### Math Channels

Address Type	Format	Range	Data Types	Access
Process Value of Math Channel	CHAx.x.PV	01-30	<b>Double, Float</b>	Read Only
Alarm Summary of Math Channel	CHAx.x.Alarm	01-30	<b>Short, Word, Byte</b>	Read Only
Alarm Level1 Status of Math Channel	CHAx.x.Alarm1	01-30	<b>Short, Word, Byte</b>	Read Only
Alarm Level2 Status of Math Channel	CHAx.x.Alarm2	01-30	<b>Short, Word, Byte</b>	Read Only
Alarm Level3 Status of Math Channel	CHAx.x.Alarm3	01-30	<b>Short, Word, Byte</b>	Read Only
Alarm Level4 Status of Math Channel	CHAx.x.Alarm4	01-30	<b>Short, Word, Byte</b>	Read Only
Set and Read Level1 Alarm Setpoint	CHAx.x.ASP1	01-30	<b>Double, Float</b>	Read/Write
Set and Read Level2 Alarm Setpoint	CHAx.x.ASP2	01-30	<b>Double, Float</b>	Read/Write
Set and Read Level3 Alarm Setpoint	CHAx.x.ASP3	01-30	<b>Double, Float</b>	Read/Write
Set and Read Level4 Alarm Setpoint	CHAx.x.ASP4	01-30	<b>Double, Float</b>	Read/Write
Upper Scale Value of Math Channel*	CHAx.x.scale_Hi	01-30	<b>Double, Float</b>	Read Only
Lower Scale Value of Math Channel*	CHAx.x.scale_Lo	01-30	<b>Double, Float</b>	Read Only
Unit String of Math Channel*	CHAx.x.unit	01-30	<b>String</b>	Read Only
Tagname of Math Channel*	CHAx.x.tag	01-30	<b>String</b>	Read Only
Status of Math Channel*	CHAx.x.status	01-30	<b>String</b>	Read Only
Lowest Math Channel*	CHA.Low		<b>Short, Word, Byte</b>	Read Only
Highest Math Channel*	CHA.High		<b>Short, Word, Byte</b>	Read Only

\*Data associated with these addresses are only read at the device at the start of a communications session. Once read, the values will not be refreshed until the server has been restarted or the "Reset" tag has been invoked. To invoke a reset, a non-zero value must be written to the Reset tag. Once the Reset tag has been invoked, the driver will reinitialize all startup data from the device.

### Alarm Setpoints

Data values for Alarm Setpoints that are undefined in the device will be returned as +INF. Data values can only be written to Alarm Setpoints that are defined in the device. Write operations to undefined Alarm Setpoints will return an error.

### Scales

Data values for Scale\_Hi and Scale\_Lo for channels that are skipped will be returned as +INF.

### Tag Names

For devices that do not support tag names and channels that have unspecified tag names, the driver will construct an internal tag name based on the channel number. For example, the tag name of address 'CH001' will be returned as 'CH001'.

### General Device Data

Address Type	Format	Range	Data Types	Access
Date of Last Data	Date		<b>String</b>	Read Only
Time of Last Data	Time		<b>String</b>	Read Only
Model Name of Device*	Model		<b>String</b>	Read Only
Math Communication Data*	CDxx	01-30	<b>Short, Word, Byte</b>	Write Only
Control Math Execution	MathControl		<b>Short, Word, Byte</b>	Write Only
Reset Alarms	AlarmReset		<b>Boolean</b>	Write Only
Control Command and Response	Command		<b>String</b>	Read/Write
Direct Reloading of Configuration	Reset		<b>Boolean</b>	Write Only
SetTime*	Tag		<b>Boolean</b>	Write Only

\*The SetTime tag will cause the device time to be updated. Writing 0 or 1 to the tag will update the Device Date and Time which can be verified from the Date tag and the Time tag. The SetTime tag will always display 0

because it is a Write Only tag. After a successful update, the following message will be posted: "Device Clock set to system time [Device <device\_name>]."

**Note:** The SetTime tag requires that the device's Port parameter be set to Ethernet Exclusive Port. For more information, refer to [Communications Parameters](#).

### Math Communication Data

The CD address type is only valid for devices equipped with the math option and write operations to CD addresses for non-math equipped devices will return an error. The range of valid data for addresses 'CDxx' is -32000 to 32000. CD data values are converted in the device from a whole number to a real number based on the decimal point placement specified for the associated math channel. For example, the device would interpret a data value of 32000 written to a CD address location with a decimal point placement of .000 as 32.000

### Model Name of Device

The Model address type that returns the model name of the device may return 'DR231' for models of type DR241 and 'DR232' for models of type DR242.

### Control Math Execution

The MathControl address type is only available for devices equipped with the math option and write operations to the MathControl tag for non-math equipped devices will return an error.

### Control Command and Response

The Command address allows the user to send a string command and receive a string response to and from the device. This allows the user to send any command to the device, including commands not directly supported by the driver.

**Caution:** Write operations using the Command address should be performed with care.

**Note 1:** The actual number of addresses available for of each type depends on the configuration of the Yokogawa device. If at runtime the driver finds that an address is not present in the device, the driver will post an error message and remove the tag from its scan list.

**Note 2:** Addresses that have Write Only access are assigned a default access of Read/Write. However, data values are unreadable for these addresses and the associated tags are not included in the scan list. The current data value for these tags will always be 0 for numeric data types and null string for string data types.

## DR242 Addressing

The driver supports the following addresses for this device. The default data type is shown in **bold**.

### Measured Channels

Address Type	Format	Range	Data Types	Access
Process Value of Channel	CHxxx or CHxxx.PV	001-560	<b>Double</b> , Float	Read Only
Alarm Summary of Channel	CHxxx.Alarm	001-560	<b>Short</b> , Word, Byte	Read Only
Alarm Level1 Status of Channel	CHxxx.Alarm1	001-560	<b>Short</b> , Word, Byte	Read Only
Alarm Level2 Status of Channel	CHxxx.Alarm2	001-560	<b>Short</b> , Word, Byte	Read Only
Alarm Level3 Status of Channel	CHxxx.Alarm3	001-560	<b>Short</b> , Word, Byte	Read Only
Alarm Level4 Status of Channel	CHxxx.Alarm4	001-560	<b>Short</b> , Word, Byte	Read Only
Alarm Type Level1 of Channel* (numeric, ex. 0 = Off)	CHxxx.AlarmType1.Num	001-560	<b>Short</b> , Word, Byte	Read Only
Alarm Type Level2 of Channel* (numeric)	CHxxx.AlarmType2.Num	001-560	<b>Short</b> , Word, Byte	Read Only
Alarm Type Level3 of Channel* (numeric)	CHxxx.AlarmType3.Num	001-560	<b>Short</b> , Word, Byte	Read Only
Alarm Type Level4 of Channel* (numeric)	CHxxx.AlarmType4.Num	001-560	<b>Short</b> , Word, Byte	Read Only
Alarm Type Level1 of Channel* (string, ex. "OFF")	CHxxx.AlarmType1.String	001-560	<b>Short</b> , Word, Byte	Read Only
Alarm Type Level2 of Channel*	CHxxx.AlarmType2.String	001-560	<b>Short</b> , Word, Byte	Read Only

(string)				
Alarm Type Level3 of Channel*	CHxxx.AlarmType3.String	001-560	<b>Short</b> , Word, Byte	Read Only
(string)				
Alarm Type Level4 of Channel*	CHxxx.AlarmType4.String	001-560	<b>Short</b> , Word, Byte	Read Only
(string)				
Set and Read Level1 Alarm Setpoint	CHxxx.ASP1	001-560	<b>Double</b> , Float	Read/Write
Set and Read Level2 Alarm Setpoint	CHxxx.ASP2	001-560	<b>Double</b> , Float	Read/Write
Set and Read Level3 Alarm Setpoint	CHxxx.ASP3	001-560	<b>Double</b> , Float	Read/Write
Set and Read Level4 Alarm Setpoint	CHxxx.ASP4	001-560	<b>Double</b> , Float	Read/Write
Upper Scale Value of Channel*	CHxxx.scale_Hi	001-560	<b>Double</b> , Float	Read Only
Lower Scale Value of Channel*	CHxxx.scale_Lo	001-560	<b>Double</b> , Float	Read Only
Unit String of Channel*	CHxxx.unit	001-560	<b>String</b>	Read Only
Tagname of Channel*	CHxxx.tag	001-560	<b>String</b>	Read Only
Status of Channel*	CHxxx.status	001-560	<b>String</b>	Read Only
Lowest Measuring Channel*	CH.Low		<b>Short</b> , Word, Byte	Read Only
Highest Measuring Channel*	CH.High		<b>Short</b> , Word, Byte	Read Only

### Math Channels

Address Type	Format	Range	Data Types	Access
Process Value of Math Channel	CHAxX or CHAxX.PV	01-60	<b>Double</b> , Float	Read Only
Alarm Summary of Math Channel	CHAxX.Alarm	01-60	<b>Short</b> , Word, Byte	Read Only
Alarm Level1 Status of Math Channel	CHAxX.Alarm1	01-60	<b>Short</b> , Word, Byte	Read Only
Alarm Level2 Status of Math Channel	CHAxX.Alarm2	01-60	<b>Short</b> , Word, Byte	Read Only
Alarm Level3 Status of Math Channel	CHAxX.Alarm3	01-60	<b>Short</b> , Word, Byte	Read Only
Alarm Level4 Status of Math Channel	CHAxX.Alarm4	01-60	<b>Short</b> , Word, Byte	Read Only
Set and Read Level1 Alarm Setpoint	CHAxX.ASP1	01-60	<b>Double</b> , Float	Read/Write
Set and Read Level2 Alarm Setpoint	CHAxX.ASP2	01-60	<b>Double</b> , Float	Read/Write
Set and Read Level3 Alarm Setpoint	CHAxX.ASP3	01-60	<b>Double</b> , Float	Read/Write
Set and Read Level4 Alarm Setpoint	CHAxX.ASP4	01-60	<b>Double</b> , Float	Read/Write
Upper Scale Value of Math Channel*	CHAxX.scale_Hi	01-60	<b>Double</b> , Float	Read Only
Lower Scale Value of Math Channel*	CHAxX.scale_Lo	01-60	<b>Double</b> , Float	Read Only
Unit String of Math Channel*	CHAxX.unit	01-60	<b>String</b>	Read Only
Tagname of Math Channel*	CHAxX.tag	01-60	<b>String</b>	Read Only
Status of Math Channel*	CHAxX.status	01-60	<b>String</b>	Read Only
Lowest Math Channel*	CHA.Low		<b>Short</b> , Word, Byte	Read Only
Highest Math Channel*	CHA.High		<b>Short</b> , Word, Byte	Read Only

\*Data associated with these addresses are only read at the device at the start of a communications session. Once read, the values will not be refreshed until the server has been restarted or the "Reset" tag has been invoked. To invoke a reset, a non-zero value must be written to the Reset tag. Once the Reset tag has been invoked, the driver will reinitialize all startup data from the device.

### Alarm Setpoints

Data values for Alarm Setpoints that are undefined in the device will be returned as +INF. Data values can only be written to Alarm Setpoints that are defined in the device. Write operations to undefined Alarm Setpoints will return an error.

### Scales

Data values for Scale\_Hi and Scale\_Lo for channels that are skipped will be returned as +INF.

### Tag Names

For devices that do not support tag names and channels that have unspecified tag names, the driver will construct an internal tag name based on the channel number. For example, the tag name of address 'CH001' will be returned as 'CH001'.

### General Device Data

Address Type	Format	Range	Data Types	Access
Date of Last Data	Date		<b>String</b>	Read Only
Time of Last Data	Time		<b>String</b>	Read Only
Model Name of Device*	Model		<b>String</b>	Read Only
Math Communication Data*	CDxx	01-60	<b>Short</b> , Word, Byte	Write Only
Control Math Execution	MathControl		<b>Short</b> , Word, Byte	Write Only
Reset Alarms	AlarmReset		<b>Boolean</b>	Write Only
Control Command and Response	Command		<b>String</b>	Read/Write
Direct Reloading of Configuration	Reset		<b>Boolean</b>	Write Only
SetTime*	Tag		<b>Boolean</b>	Write Only

\*The SetTime tag will cause the device time to be updated. Writing 0 or 1 to the tag will update the Device Date and Time which can be verified from the Date tag and the Time tag. The SetTime tag will always display 0, because it is a Write Only tag. After a successful update, the following message will be posted: "Device Clock set to system time [Device <device\_name>]."

**Note:** The SetTime tag requires that the device's Port parameter be set to Ethernet Exclusive Port. For more information, refer to [Communications Parameters](#).

### Math Communication Data

The CD address type is only valid for devices equipped with the math option and write operations to CD addresses for non-math equipped devices will return an error. The range of valid data for addresses 'CDxx' is -32000 to 32000. CD data values are converted in the device from a whole number to a real number based on the decimal point placement specified for the associated math channel. For example, the device would interpret a data value of 32000 written to a CD address location with a decimal point placement of .000 as 32.000

### Model Name of Device

The Model address type that returns the model name of the device may return 'DR231' for models of type DR241 and 'DR232' for models of type DR242.

### Control Math Execution

The MathControl address type is only available for devices equipped with the math option and write operations to the MathControl tag for non-math equipped devices will return an error.

### Control Command and Response

The Command address allows the user to send a string command and receive a string response to and from the device. This allows the user to send any command to the device, including commands not directly supported by the driver.

**Caution:** Write operations using the Command address should be performed with care.

**Note 1:** The actual number of addresses available for of each type depends on the configuration of the Yokogawa device. If at runtime the driver finds that an address is not present in the device, the driver will post an error message and remove the tag from its scan list.

**Note 2:** Addresses that have Write Only access are assigned a default access of Read/Write. However, data values are unreadable for these addresses and the associated tags are not included in the scan list. The current data value for these tags will always be 0 for numeric data types and null string for string data types.

## DR130 Addressing

The driver supports the following addresses for this device. The default data type is shown in **bold**.

### Measured Channels

Address Type	Format	Range	Data Types	Access
Process Value of Channel	CHxxx or CHxxx.PV	001-020	<b>Double</b> , Float	Read Only
Alarm Summary of Channel	CHxxx.Alarm	001-020	<b>Short</b> , Word, Byte	Read Only
Alarm Level1 Status of Channel	CHxxx.Alarm1	001-020	<b>Short</b> , Word, Byte	Read Only
Alarm Level2 Status of Channel	CHxxx.Alarm2	001-020	<b>Short</b> , Word, Byte	Read Only
Alarm Level3 Status of Channel	CHxxx.Alarm3	001-020	<b>Short</b> , Word, Byte	Read Only
Alarm Level4 Status of Channel	CHxxx.Alarm4	001-020	<b>Short</b> , Word, Byte	Read Only
Alarm Type Level1 of Channel*	CHxxx.AlarmType1.Num	001-020	<b>Short</b> , Word, Byte	Read Only

(numeric, ex. 0 = Off)				
Alarm Type Level2 of Channel* (numeric)	CHxxx.AlarmType2.Num	001-020	<b>Short</b> , Word, Byte	Read Only
Alarm Type Level3 of Channel* (numeric)	CHxxx.AlarmType3.Num	001-020	<b>Short</b> , Word, Byte	Read Only
Alarm Type Level4 of Channel* (numeric)	CHxxx.AlarmType4.Num	001-020	<b>Short</b> , Word, Byte	Read Only
Alarm Type Level1 of Channel* (string, ex. "OFF")	CHxxx.AlarmType1.String	001-020	<b>String</b>	Read Only
Alarm Type Level2 of Channel* (string)	CHxxx.AlarmType2.String	001-020	<b>String</b>	Read Only
Alarm Type Level3 of Channel* (string)	CHxxx.AlarmType3.String	001-020	<b>String</b>	Read Only
Alarm Type Level4 of Channel* (string)	CHxxx.AlarmType4.String	001-020	<b>String</b>	Read Only
Set and Read Level1 Alarm Setpoint	CHxxx.ASP1	001-020	<b>Double</b> , Float	Read/Write
Set and Read Level2 Alarm Setpoint	CHxxx.ASP2	001-020	<b>Double</b> , Float	Read/Write
Set and Read Level3 Alarm Setpoint	CHxxx.ASP3	001-020	<b>Double</b> , Float	Read/Write
Set and Read Level4 Alarm Setpoint	CHxxx.ASP4	001-020	<b>Double</b> , Float	Read/Write
Upper Scale Value of Channel*	CHxxx.scale_Hi	001-020	<b>Double</b> , Float	Read Only
Lower Scale Value of Channel*	CHxxx.scale_Lo	001-020	<b>Double</b> , Float	Read Only
Unit String of Channel*	CHxxx.unit	001-020	<b>String</b>	Read Only
Tagname of Channel*	CHxxx.tag	001-020	<b>String</b>	Read Only
Status of Channel*	CHxxx.status	001-020	<b>String</b>	Read Only
Lowest Measuring Channel*	CH.Low		<b>Short</b> , Word, Byte	Read Only
Highest Measuring Channel*	CH.High		<b>Short</b> , Word, Byte	Read Only

### Math Channels

Address Type	Format	Range	Data Types	Access
Process Value of Math Channel	CHAxX or CHAxX.PV	01-30	<b>Double</b> , Float	Read Only
Alarm Summary of Math Channel	CHAxX.Alarm	01-30	<b>Short</b> , Word, Byte	Read Only
Alarm Level1 Status of Math Channel	CHAxX.Alarm1	01-30	<b>Short</b> , Word, Byte	Read Only
Alarm Level2 Status of Math Channel	CHAxX.Alarm2	01-30	<b>Short</b> , Word, Byte	Read Only
Alarm Level3 Status of Math Channel	CHAxX.Alarm3	01-30	<b>Short</b> , Word, Byte	Read Only
Alarm Level4 Status of Math Channel	CHAxX.Alarm4	01-30	<b>Short</b> , Word, Byte	Read Only
Set and Read Level1 Alarm Setpoint	CHAxX.ASP1	01-30	<b>Double</b> , Float	Read/Write
Set and Read Level2 Alarm Setpoint	CHAxX.ASP2	01-30	<b>Double</b> , Float	Read/Write
Set and Read Level3 Alarm Setpoint	CHAxX.ASP3	01-30	<b>Double</b> , Float	Read/Write
Set and Read Level4 Alarm Setpoint	CHAxX.ASP4	01-30	<b>Double</b> , Float	Read/Write
Upper Scale Value of Math Channel*	CHAxX.scale_Hi	01-30	<b>Double</b> , Float	Read Only
Lower Scale Value of Math Channel*	CHAxX.scale_Lo	01-30	<b>Double</b> , Float	Read Only
Unit String of Math Channel*	CHAxX.unit	01-30	<b>String</b>	Read Only
Tagname of Math Channel*	CHAxX.tag	01-30	<b>String</b>	Read Only
Status of Math Channel*	CHAxX.status	01-30	<b>String</b>	Read Only
Lowest Math Channel*	CHA.Low		<b>Short</b> , Word, Byte	Read Only
Highest Math Channel*	CHA.High		<b>Short</b> , Word, Byte	Read Only

\*Data associated with these addresses are only read at the device at the start of a communications session. Once read, the values will not be refreshed until the server has been restarted or the "Reset" tag has been invoked. To invoke a reset, a non-zero value must be written to the Reset tag. Once the Reset tag has been invoked, the driver will reinitialize all startup data from the device.

### Alarm Setpoints

Data values for Alarm Setpoints that are undefined in the device will be returned as +INF. Data values can only be written to Alarm Setpoints that are defined in the device. Write operations to undefined Alarm Setpoints will return an error.

### Scales

Data values for Scale\_Hi and Scale\_Lo for channels that are skipped will be returned as +INF.

### Tag Names

For devices that do not support tag names and channels that have unspecified tag names, the driver will construct an internal tag name based on the channel number. For example, the tag name of address 'CH001' will be returned as 'CH001'.

### General Device Data

Address Type	Format	Range	Data Types	Access
Date of Last Data	Date		<b>String</b>	Read Only
Time of Last Data	Time		<b>String</b>	Read Only
Model Name of Device*	Model		<b>String</b>	Read Only
Math Communication Data*	CDxx	01-30	<b>Short, Word, Byte</b>	Write Only
Control Math Execution	MathControl		<b>Short, Word, Byte</b>	Write Only
Reset Alarms	AlarmReset		<b>Boolean</b>	Write Only
Control Command and Response	Command		<b>String</b>	Read/Write
Direct Reloading of Configuration	Reset		<b>Boolean</b>	Write Only
SetTime*	Tag		<b>Boolean</b>	Write Only

\*The SetTime tag will cause the device time to be updated. Writing 0 or 1 to the tag will update the Device Date and Time which can be verified from the Date tag and the Time tag. The SetTime tag will always display 0 because it is a Write Only tag. After a successful update, the following message will be posted: "Device Clock set to system time [Device <device\_name>]."

**Note:** The SetTime tag requires that the device's Port parameter be set to Ethernet Exclusive Port. For more information, refer to [Communications Parameters](#).

### Math Communication Data

The CD address type is only valid for devices equipped with the math option and write operations to CD addresses for non-math equipped devices will return an error. The range of valid data for addresses 'CDxx' is -32000 to 32000. CD data values are converted in the device from a whole number to a real number based on the decimal point placement specified for the associated math channel. For example, the device would interpret a data value of 32000 written to a CD address location with a decimal point placement of .000 as 32.000

### Model Name of Device

The Model address type that returns the model name of the device may return 'DR231' for models of type DR241 and 'DR232' for models of type DR242.

### Control Math Execution

The MathControl address type is only available for devices equipped with the math option and write operations to the MathControl tag for non-math equipped devices will return an error.

### Control Command and Response

The Command address allows the user to send a string command and receive a string response to and from the device. This allows the user to send any command to the device, including commands not directly supported by the driver.

**Caution:** Write operations using the Command address should be performed with care.

**Note 1:** The actual number of addresses available for of each type depends on the configuration of the Yokogawa device. If at runtime the driver finds that an address is not present in the device, the driver will post an error message and remove the tag from its scan list.

**Note 2:** Addresses that have Write Only access are assigned a default access of Read/Write. However, data values are unreadable for these addresses and the associated tags are not included in the scan list. The current data value for these tags will always be 0 for numeric data types and null string for string data types.



## DC100-1 Addressing

The driver supports the following addresses for this device. The default data type for each address type is shown in **bold**.

### Measured Channels

Address Type	Format	Range	Data Types	Access
Process Value of Channel	CHxxx or CHxxx.PV	001-060	<b>Double</b> , Float	Read Only
Alarm Summary of Channel	CHxxx.Alarm	001-060	<b>Short</b> , Word, Byte	Read Only
Alarm Level1 Status of Channel	CHxxx.Alarm1	001-060	<b>Short</b> , Word, Byte	Read Only
Alarm Level2 Status of Channel	CHxxx.Alarm2	001-060	<b>Short</b> , Word, Byte	Read Only
Alarm Level3 Status of Channel	CHxxx.Alarm3	001-060	<b>Short</b> , Word, Byte	Read Only
Alarm Level4 Status of Channel	CHxxx.Alarm4	001-060	<b>Short</b> , Word, Byte	Read Only
Alarm Type Level1 of Channel* (numeric, ex. 0 = Off)	CHxxx.AlarmType1.Num	001-060	<b>Short</b> , Word, Byte	Read Only
Alarm Type Level2 of Channel* (numeric)	CHxxx.AlarmType2.Num	001-060	<b>Short</b> , Word, Byte	Read Only
Alarm Type Level3 of Channel* (numeric)	CHxxx.AlarmType3.Num	001-060	<b>Short</b> , Word, Byte	Read Only
Alarm Type Level4 of Channel* (numeric)	CHxxx.AlarmType4.Num	001-060	<b>Short</b> , Word, Byte	Read Only
Alarm Type Level1 of Channel* (string, ex. "OFF")	CHxxx.AlarmType1.String	001-060	<b>String</b>	Read Only
Alarm Type Level2 of Channel* (string)	CHxxx.AlarmType2.String	001-060	<b>String</b>	Read Only
Alarm Type Level3 of Channel* (string)	CHxxx.AlarmType3.String	001-060	<b>String</b>	Read Only
Alarm Type Level4 of Channel* (string)	CHxxx.AlarmType4.String	001-060	<b>String</b>	Read Only
Set and Read Level1 Alarm Setpoint	CHxxx.ASP1	001-060	<b>Double</b> , Float	Read/Write
Set and Read Level2 Alarm Setpoint	CHxxx.ASP2	001-060	<b>Double</b> , Float	Read/Write
Set and Read Level3 Alarm Setpoint	CHxxx.ASP3	001-060	<b>Double</b> , Float	Read/Write
Set and Read Level4 Alarm Setpoint	CHxxx.ASP4	001-060	<b>Double</b> , Float	Read/Write
Upper Scale Value of Channel*	CHxxx.scale_Hi	001-060	<b>Double</b> , Float	Read Only
Lower Scale Value of Channel*	CHxxx.scale_Lo	001-060	<b>Double</b> , Float	Read Only
Unit String of Channel*	CHxxx.unit	001-060	<b>String</b>	Read Only
Tagname of Channel*	CHxxx.tag	001-060	<b>String</b>	Read Only
Status of Channel*	CHxxx.status	001-060	<b>String</b>	Read Only
Lowest Measuring Channel*	CH.Low		<b>Short</b> , Word, Byte	Read Only
Highest Measuring Channel*	CH.High		<b>Short</b> , Word, Byte	Read Only

### Math Channels

Address Type	Format	Range	Data Types	Access
Process Value of Math Channel	CHAxX or CHAxX.PV	01-30	<b>Double</b> , Float	Read Only
Alarm Summary of Math Channel	CHAxX.Alarm	01-30	<b>Short</b> , Word, Byte	Read Only
Alarm Level1 Status of Math Channel	CHAxX.Alarm1	01-30	<b>Short</b> , Word, Byte	Read Only
Alarm Level2 Status of Math Channel	CHAxX.Alarm2	01-30	<b>Short</b> , Word, Byte	Read Only
Alarm Level3 Status of Math Channel	CHAxX.Alarm3	01-30	<b>Short</b> , Word, Byte	Read Only
Alarm Level4 Status of Math Channel	CHAxX.Alarm4	01-30	<b>Short</b> , Word, Byte	Read Only
Set and Read Level1 Alarm Setpoint	CHAxX.ASP1	01-30	<b>Double</b> , Float	Read/Write
Set and Read Level2 Alarm Setpoint	CHAxX.ASP2	01-30	<b>Double</b> , Float	Read/Write

Set and Read Level3 Alarm Setpoint	CHAx.x.ASP3	01-30	<b>Double</b> , Float	Read/Write
Set and Read Level4 Alarm Setpoint	CHAx.x.ASP4	01-30	<b>Double</b> , Float	Read/Write
Upper Scale Value of Math Channel*	CHAx.x.scale_Hi	01-30	<b>Double</b> , Float	Read Only
Lower Scale Value of Math Channel*	CHAx.x.scale_Lo	01-30	<b>Double</b> , Float	Read Only
Unit String of Math Channel*	CHAx.x.unit	01-30	<b>String</b>	Read Only
Tagname of Math Channel*	CHAx.x.tag	01-30	<b>String</b>	Read Only
Status of Math Channel*	CHAx.x.status	01-30	<b>String</b>	Read Only
Lowest Math Channel*	CHA.Low		<b>Short</b> , Word, Byte	Read Only
Highest Math Channel*	CHA.High		<b>Short</b> , Word, Byte	Read Only

\*Data associated with these addresses are only read at the device at the start of a communications session. Once read, the values will not be refreshed until the server has been restarted or the "Reset" tag has been invoked. To invoke a reset, a non-zero value must be written to the Reset tag. Once the Reset tag has been invoked, the driver will reinitialize all startup data from the device.

### Alarm Setpoints

Data values for Alarm Setpoints that are undefined in the device will be returned as +INF. Data values can only be written to Alarm Setpoints that are defined in the device. Write operations to undefined Alarm Setpoints will return an error.

### Scales

Data values for Scale\_Hi and Scale\_Lo for channels that are skipped will be returned as +INF.

### Tag Names

For devices that do not support tag names and channels that have unspecified tag names, the driver will construct an internal tag name based on the channel number. For example, the tag name of address 'CH001' will be returned as 'CH001'.

### General Device Data

Address Type	Format	Range	Data Types	Access
Date of Last Data	Date		<b>String</b>	Read Only
Time of Last Data	Time		<b>String</b>	Read Only
Model Name of Device*	Model		<b>String</b>	Read Only
Math Communication Data*	CDxx	01-30	<b>Short</b> , Word, Byte	Write Only
Control Math Execution	MathControl		<b>Short</b> , Word, Byte	Write Only
Reset Alarms	AlarmReset		<b>Boolean</b>	Write Only
Control Command and Response	Command		<b>String</b>	Read/Write
Direct Reloading of Configuration	Reset		<b>Boolean</b>	Write Only
SetTime*	Tag		<b>Boolean</b>	Write Only

\*The SetTime tag will cause the device time to be updated. Writing 0 or 1 to the tag will update the Device Date and Time which can be verified from the Date tag and the Time tag. The SetTime tag will always display 0 because it is a Write Only tag. After a successful update, the following message will be posted: "Device Clock set to system time [Device <device\_name>]."

**Note:** The SetTime tag requires that the device's Port parameter be set to Ethernet Exclusive Port. For more information, refer to [Communications Parameters](#).

### Math Communication Data

The CD address type is only valid for devices equipped with the math option and write operations to CD addresses for non-math equipped devices will return an error. The range of valid data for addresses 'CDxx' is -32000 to 32000. CD data values are converted in the device from a whole number to a real number based on the decimal point placement specified for the associated math channel. For example, a data value of 32000 written to a CD address location with a decimal point placement of .000 would be interpreted by the device as 32.000

### Model Name of Device

The Model address type that returns the model name of the device may return 'DR231' for models of type DR241 and 'DR232' for models of type DR242.

### Control Math Execution

The MathControl address type is only available for devices equipped with the math option and write operations to the MathControl tag for non-math equipped devices will return an error.

### Control Command and Response

The Command address allows the user to send a string command and receive a string response to and from the device. This allows the user to send any command to the device, including commands not directly supported by the driver.

**Caution:** Write operations using the Command address should be performed with care.

**Note 1:** The actual number of addresses available for of each type depends on the configuration of the Yokogawa device. If at runtime the driver finds that an address is not present in the device, the driver will post an error message and remove the tag from its scan list.

**Note 2:** Addresses that have Write Only access are assigned a default access of Read/Write. However, data values are unreadable for these addresses and the associated tags are not included in the scan list. The current data value for these tags will always be 0 for numeric data types and null string for string data types.

### DC100-2 Addressing

The driver supports the following addresses for this device. The default data type for each address type is shown in **bold**.

#### Measured Channels

Address Type	Format	Range	Data Types	Access
Process Value of Channel	CHxxx or CHxxx.PV	001-560	<b>Double</b> , Float	Read Only
Alarm Summary of Channel	CHxxx.Alarm	001-560	<b>Short</b> , Word, Byte	Read Only
Alarm Level1 Status of Channel	CHxxx.Alarm1	001-560	<b>Short</b> , Word, Byte	Read Only
Alarm Level2 Status of Channel	CHxxx.Alarm2	001-560	<b>Short</b> , Word, Byte	Read Only
Alarm Level3 Status of Channel	CHxxx.Alarm3	001-560	<b>Short</b> , Word, Byte	Read Only
Alarm Level4 Status of Channel	CHxxx.Alarm4	001-560	<b>Short</b> , Word, Byte	Read Only
Alarm Type Level1 of Channel* (numeric, ex. 0 = Off)	CHxxx.AlarmType1.Num	001-560	<b>Short</b> , Word, Byte	Read Only
Alarm Type Level2 of Channel* (numeric)	CHxxx.AlarmType2.Num	001-560	<b>Short</b> , Word, Byte	Read Only
Alarm Type Level3 of Channel* (numeric)	CHxxx.AlarmType3.Num	001-560	<b>Short</b> , Word, Byte	Read Only
Alarm Type Level4 of Channel* (numeric)	CHxxx.AlarmType4.Num	001-560	<b>Short</b> , Word, Byte	Read Only
Alarm Type Level1 of Channel* (string, ex. "OFF")	CHxxx.AlarmType1.String	001-560	<b>String</b>	Read Only
Alarm Type Level2 of Channel* (string)	CHxxx.AlarmType2.String	001-560	<b>String</b>	Read Only
Alarm Type Level3 of Channel* (string)	CHxxx.AlarmType3.String	001-560	<b>String</b>	Read Only
Alarm Type Level4 of Channel* (string)	CHxxx.AlarmType4.String	001-560	<b>String</b>	Read Only
Set and Read Level1 Alarm Setpoint	CHxxx.ASP1	001-560	<b>Double</b> , Float	Read/Write
Set and Read Level2 Alarm Setpoint	CHxxx.ASP2	001-560	<b>Double</b> , Float	Read/Write
Set and Read Level3 Alarm Setpoint	CHxxx.ASP3	001-560	<b>Double</b> , Float	Read/Write
Set and Read Level4 Alarm Setpoint	CHxxx.ASP4	001-560	<b>Double</b> , Float	Read/Write
Upper Scale Value of Channel*	CHxxx.scale_Hi	001-560	<b>Double</b> , Float	Read Only
Lower Scale Value of Channel*	CHxxx.scale_Lo	001-560	<b>Double</b> , Float	Read Only
Unit String of Channel*	CHxxx.unit	001-560	<b>String</b>	Read Only
Tagname of Channel*	CHxxx.tag	001-560	<b>String</b>	Read Only

Status of Channel*	CHxxx.status	001-560	<b>String</b>	Read Only
Lowest Measuring Channel*	CH.Low		<b>Short, Word, Byte</b>	Read Only
Highest Measuring Channel*	CH.High		<b>Short, Word, Byte</b>	Read Only

### Math Channels

Address Type	Format	Range	Data Types	Access
Process Value of Math Channel	CHAx.x or CHAx.x.PV	01-60	<b>Double, Float</b>	Read Only
Alarm Summary of Math Channel	CHAx.x.Alarm	01-60	<b>Short, Word, Byte</b>	Read Only
Alarm Level1 Status of Math Channel	CHAx.x.Alarm1	01-60	<b>Short, Word, Byte</b>	Read Only
Alarm Level2 Status of Math Channel	CHAx.x.Alarm2	01-60	<b>Short, Word, Byte</b>	Read Only
Alarm Level3 Status of Math Channel	CHAx.x.Alarm3	01-60	<b>Short, Word, Byte</b>	Read Only
Alarm Level4 Status of Math Channel	CHAx.x.Alarm4	01-60	<b>Short, Word, Byte</b>	Read Only
Set and Read Level1 Alarm Setpoint	CHAx.x.ASP1	01-60	<b>Double, Float</b>	Read/Write
Set and Read Level2 Alarm Setpoint	CHAx.x.ASP2	01-60	<b>Double, Float</b>	Read/Write
Set and Read Level3 Alarm Setpoint	CHAx.x.ASP3	01-60	<b>Double, Float</b>	Read/Write
Set and Read Level4 Alarm Setpoint	CHAx.x.ASP4	01-60	<b>Double, Float</b>	Read/Write
Upper Scale Value of Math Channel*	CHAx.x.scale_Hi	01-60	<b>Double, Float</b>	Read Only
Lower Scale Value of Math Channel*	CHAx.x.scale_Lo	01-60	<b>Double, Float</b>	Read Only
Unit String of Math Channel*	CHAx.x.unit	01-60	<b>String</b>	Read Only
Tagname of Math Channel*	CHAx.x.tag	01-60	<b>String</b>	Read Only
Status of Math Channel*	CHAx.x.status	01-60	<b>String</b>	Read Only
Lowest Math Channel*	CHA.Low		<b>Short, Word, Byte</b>	Read Only
Highest Math Channel*	CHA.High		<b>Short, Word, Byte</b>	Read Only

\*Data associated with these addresses are only read at the device at the start of a communications session. Once read, the values will not be refreshed until the server has been restarted or the "Reset" tag has been invoked. To invoke a reset, a non-zero value must be written to the Reset tag. Once the Reset tag has been invoked, the driver will reinitialize all startup data from the device.

### Alarm Setpoints

Data values for Alarm Setpoints that are undefined in the device will be returned as +INF. Data values can only be written to Alarm Setpoints that are defined in the device. Write operations to undefined Alarm Setpoints will return an error.

### Scales

Data values for Scale\_Hi and Scale\_Lo for channels that are skipped will be returned as +INF.

### Tag Names

For devices that do not support tag names and channels that have unspecified tag names, the driver will construct an internal tag name based on the channel number. For example, the tag name of address 'CH001' will be returned as 'CH001'.

### General Device Data

Address Type	Format	Range	Data Types	Access
Date of Last Data	Date		<b>String</b>	Read Only
Time of Last Data	Time		<b>String</b>	Read Only
Model Name of Device*	Model		<b>String</b>	Read Only
Math Communication Data*	CDxx	01-60	<b>Short, Word, Byte</b>	Write Only
Control Math Execution	MathControl		<b>Short, Word, Byte</b>	Write Only
Reset Alarms	AlarmReset		<b>Boolean</b>	Write Only
Control Command and Response	Command		<b>String</b>	Read/Write
Direct Reloading of Configuration	Reset		<b>Boolean</b>	Write Only
SetTime*	Tag		<b>Boolean</b>	Write Only

\*The SetTime tag will cause the device time to be updated. Writing 0 or 1 to the tag will update the Device Date and Time which can be verified from the Date tag and the Time tag. The SetTime tag will always display 0 because it is a Write Only tag. After a successful update, the following message will be posted: "Device Clock set to system time [Device <device\_name>]."

**Note:** The SetTime tag requires that the device's Port parameter be set to Ethernet Exclusive Port. For more information, refer to [Communications Parameters](#).

### Math Communication Data

The CD address type is only valid for devices equipped with the math option and write operations to CD addresses for non-math equipped devices will return an error. The range of valid data for addresses 'CDxx' is -32000 to 32000. CD data values are converted in the device from a whole number to a real number based on the decimal point placement specified for the associated math channel. For example, the device would interpret a data value of 32000 written to a CD address location with a decimal point placement of .000 as 32.000

### Model Name of Device

The Model address type that returns the model name of the device may return 'DR231' for models of type DR241 and 'DR232' for models of type DR242.

### Control Math Execution

The MathControl address type is only available for devices equipped with the math option and write operations to the MathControl tag for non-math equipped devices will return an error.

### Control Command and Response

The Command address allows the user to send a string command and receive a string response to and from the device. This allows the user to send any command to the device, including commands not directly supported by the driver.

**Caution:** Write operations using the Command address should be performed with care.

**Note 1:** The actual number of addresses available for of each type depends on the configuration of the Yokogawa device. If at runtime the driver finds that an address is not present in the device, the driver will post an error message and remove the tag from its scan list.

**Note 2:** Addresses that have Write Only access are assigned a default access of Read/Write. However, data values are unreadable for these addresses and the associated tags are not included in the scan list. The current data value for these tags will always be 0 for numeric data types and null string for string data types.


## Automatic Tag Database Generation

This driver's Automatic OPC Tag Database Generation features have been designed to make configuring the OPC application a plug-and-play operation. This driver can be configured to automatically build a list of OPC tags within the OPC Server that correspond to device-specific data. The automatically-generated OPC tags can then be browsed from the OPC client.

The tags that are generated depend on the nature of the driver. If the target device supports its own local tag database, the driver will read the device's tag information and then use this data to generate OPC tags within the OPC Server. If the device does not natively support its own named tags, the driver will create a list of tags based on driver-specific information. An example of these two conditions is as follows:

1. A data acquisition system that supports its own local tag database. The driver will use the tags names found in the device to build the OPC Server's OPC tags.
2. An Ethernet I/O system that supports detection of I/O module type. The driver will automatically generate OPC tags in the OPC Server that are based on the types of I/O modules plugged into the Ethernet I/O rack.

Automatic Tag Database Generation is completely configurable. The following dialog is used to define how the OPC Server and the associated communications driver will handle Automatic OPC Tag Database Generation:

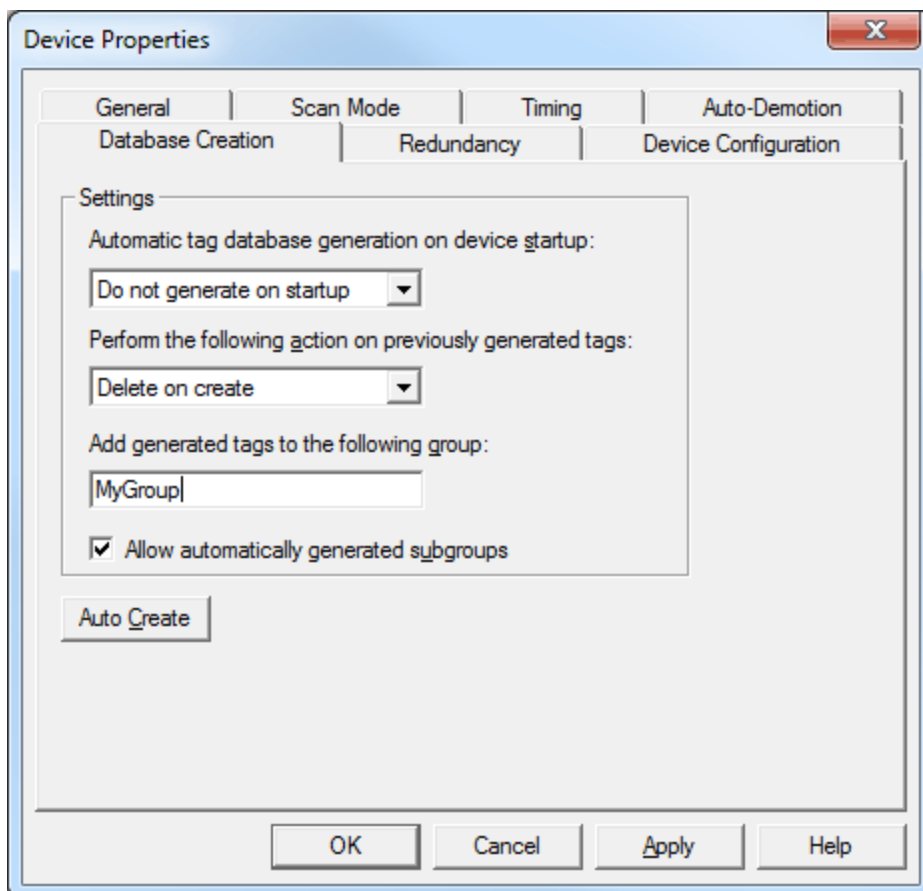

The **Automatic tag database generation on device startup** selection is used to configure when OPC tags will be automatically generated. Descriptions of the parameters are as follows:

- **Do not generate on startup:** This option prevents the driver from adding any OPC tags to the OPC Server's tag space. This is the default condition.
- **Always generate on startup:** This option causes the driver to always evaluate the device for tag information. OPC tags will be added to the tag space of the server each time the server is launched.
- **Generate on first startup:** This option causes the driver to evaluate the target device for tag information the first time the OPC Server project is run. OPC tags will be added to the server tag space as needed.


**Note:** Any tags that are added to the server's tag space must be saved with the project. The OPC Server project can be configured to automatically save from the **Tools | Options** menu.

When automatic tag generation is enabled, the server needs to know what to do with the OPC tags that were added from previous runs (or with the OPC tags that have been added or modified after being added by the communications driver originally). The selection **Perform the following action** controls how the server will handle OPC tags that were automatically generated and currently exist in the OPC Server project. This feature prevents automatically-generated tags from piling up in the server. In the Ethernet I/O example above, this would occur if users continued to change the I/O modules in the rack while the OPC Server was configured to always generate new OPC tags on startup. Under this condition, tags would be added to the server every time the communications driver detected a new I/O module. If the old tags are not removed, they will accumulate in the server's tag space. Descriptions of the selections are as follows:


- **Delete on create:** This option allows the server to remove any tags that have previously been added to the tag space before any new tags can be added by the communications driver. This is the default setting.
- **Overwrite as necessary:** This option allows the server to only remove tags that the communications driver will replace with new tags. Any tags that are not being overwritten will remain in the server's tag space.
- **Do not overwrite:** This option prevents the server from removing any tags that had previously been generated or that already exist in the server. With this selection, the communications driver can only add tags that are completely new.
- **Do not overwrite, log error:** This option has the same effect as the third option, but also posts an error message to the OPC Server's Event Log when a tag overwrite would have occurred.

**Note:** The removal of OPC tags not only affects tags that have been automatically generated by the communications driver, but also any tags that have been added using names that match generated tags. It is recommended that users avoid adding tags to the server using names that match tags that may be automatically generated by the driver.

**Add generated tags to the following group** can be used to keep automatically-generated tags from mixing with tags that have been entered manually. This parameter specifies a sub group that will be used when adding all automatically-generated tags for this device. The name of the sub group can be up to 31 characters in length. The following image displays demonstrate how this parameter affects where automatically generated tags are placed in the server's tag space. It provides a root branch to which all automatically-generated tags will be added.

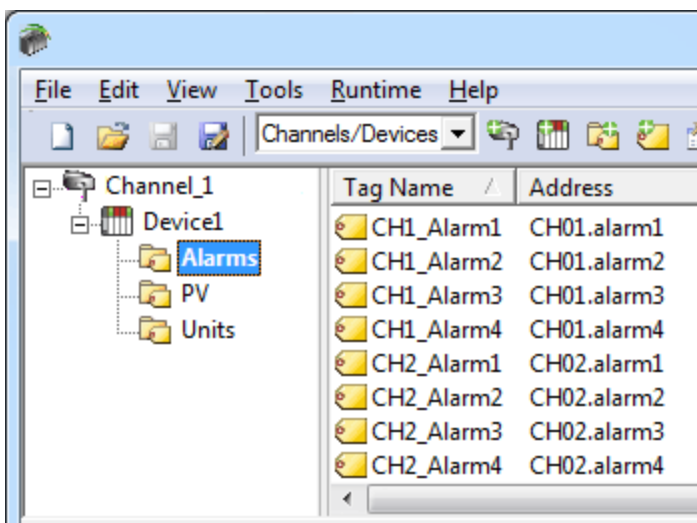

**No sub group specified.**

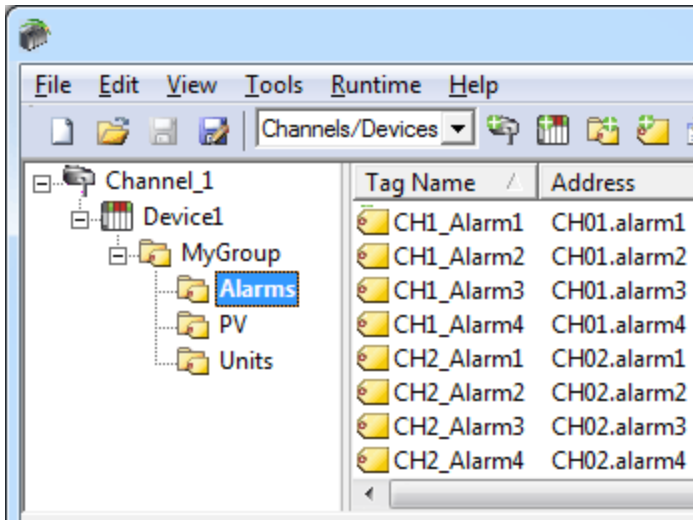

**Sub group named MyGroup specified.**

**Auto Create** manually initiates the creation of automatically-generated OPC tags, and also forces the communications driver to reevaluate the device for possible tag changes. It can be accessed from the System Tags, thus allowing the OPC client application to initiate tag database creation.



## Error Descriptions

---

The following error/warning messages may be generated. Click on the link for a description of the message.

### Address Validation

[Address '<address>' is out of range for the specified device or register](#)

[Data Type '<type>' is not valid for device address '<address>'](#)

[Device address '<address>' contains a syntax error](#)

[Device address '<address>' is Read Only](#)

[Missing address](#)

### Device Status Messages

[Device '<device name>' is not responding](#)

[Unable to write to '<address>' on device '<device name>'](#)

### Driver Error Messages

[Winsock initialization failed \(OS Error = n\)](#)

[Winsock V1.1 or higher must be installed to use the Yokogawa Darwin Ethernet device driver](#)

## Address Validation

---

The following error/warning messages may be generated. Click on the link for a description of the message.

### Address Validation

[Address '<address>' is out of range for the specified device or register](#)

[Data Type '<type>' is not valid for device address '<address>'](#)

[Device address '<address>' contains a syntax error](#)

[Device address '<address>' is Read Only](#)

[Missing address](#)

## Address '<address>' is out of range for the specified device or register

---

### Error Type:

Warning

### Possible Cause:

A tag address that has been specified statically references a location that is beyond the range of supported locations for the device.

### Solution:

Verify the address is correct; if it is not, re-enter it in the client application.

## Data Type '<type>' is not valid for device address '<address>'

---

### Error Type:

Warning

### Possible Cause:

A tag address that has been specified statically has been assigned an invalid data type.

### Solution:

Modify the requested data type in the client application.

## Device address '<address>' contains a syntax error

---

### Error Type:

Warning

### Possible Cause:

A tag address that has been specified statically contains one or more invalid characters.

### Solution:

Re-enter the address in the client application.

---

## Device address '<address>' is Read Only

---

**Error Type:**

Warning

**Possible Cause:**

A tag address that has been specified statically has a requested access mode that is not compatible with what the device supports for that address.

**Solution:**

Change the access mode in the client application.

---

## Missing address

---

**Error Type:**

Warning

**Possible Cause:**

A tag address that has been specified statically has no length.

**Solution:**

Re-enter the address in the client application.

---

## Device Status Messages

---

The following error/warning messages may be generated. Click on the link for a description of the message.

**Device Status Messages**

[Device '<device name>' is not responding](#)

[Unable to write to '<address>' on device '<device name>'](#)

---

## Device '<device name>' is not responding

---

**Error Type:**

Serious

**Possible Cause:**

1. The connection between the device and the host PC is broken.
2. The IP address assigned to the device is incorrect.
3. The connection cannot be established in the specified timeout period.
4. The response from the device took longer to receive than the amount of time specified in the "Request Timeout" device setting.

**Solution:**

1. Verify the cabling between the PC and the PLC device.
2. Verify the IP address given to the named device matches that of the actual device.
3. Increase the Connect Timeout value in the Timeout page of Device Properties.
4. Increase the Request Timeout setting so that the entire response can be handled.

---

## Unable to write to '<address>' on device '<device name>'

---

**Error Type:**

Serious

**Possible Cause:**

1. The connection between the device and the host PC is broken.
2. The named device may have been assigned an incorrect IP address.
3. The address specified may be Read Only or may not exist in the current device..

**Solution:**

1. Verify the cabling between the PC and the PLC device.
2. Verify that the IP address given to the named device matches that of the actual device.
3. Check address availability for the device.

---

## Driver Error Messages

---

The following error/warning messages may be generated. Click on the link for a description of the message.

**Driver Error Messages****Winsock initialization failed (OS Error = n)****Winsock V1.1 or higher must be installed to use the Yokogawa Darwin Ethernet device driver****Winsock initialization failed (OS Error = n)**

---

**Error Type:**

Fatal

OS Error	Indication	Possible Solution
10091	Indicates that the underlying network subsystem is not ready for network communication.	Wait a few seconds and restart the driver.
10067	Limit on the number of tasks supported by the Windows Sockets implementation has been reached.	Close one or more applications that may be using Winsock and restart the driver.

**Winsock V1.1 or higher must be installed to use the Yokogawa Darwin Ethernet device driver**

---

**Error Type:**

Fatal

**Possible Cause:**

The version number of the Winsock DLL found on the system is less than 1.1.

**Solution:**

Upgrade Winsock to version 1.1 or higher.

# Index

## A

Address '<address>' is out of range for the specified device or register.....	33
Address Descriptions.....	9
Address Validation.....	33
Automatic Tag Database Generation.....	30

## B

Boolean.....	8
--------------	---

## C

Communications Parameters.....	5
--------------------------------	---

## D

Data Types Description.....	8
DC100-1 Addressing.....	25
DC100-1_Addressing.....	9
DC100-2 Addressing.....	27
DC100-2_Addressing.....	11
Device '<device name>' is not responding.....	34
Device address '<address>' contains a syntax error.....	33
Device address '<address>' is Read Only.....	34
Device ID.....	4
Device Setup.....	4
Device Status Messages.....	34
DR130 Addressing.....	22
DR231 Addressing.....	13
DR232 Addressing.....	16
DR241 Addressing.....	18
DR242 Addressing.....	20
Driver Error Messages.....	34

**E**

**Error Descriptions**..... 33

**F**

**Float**..... 8

**M**

**Missing address**..... 34

**N**

**Network**..... 4

**O**

**Optimizing Ethernet Communications**..... 7

**Overview**..... 3

**S**

**Short**..... 8

**U**

**Unable to write tag '<address>' on device '<device name>'**..... 34

**W**

**Winsock initialization failed (OS Error = n)..... 35**

**Winsock V1.1 or higher must be installed to use the Yokogawa Darwin Ethernet device driver..... 35**

**Word..... 8**