



Connectivity Guide

TSXCUSBMBP USB Adapter

August 2022

Ref. 3.03

Table of Contents

1.	Overview.....	1
1.1	Purpose.....	1
1.2	Functionality.....	1
1.2.1	Communication.....	1
1.2.2	Diagnostics.....	1
1.3	Abbreviated Terms.....	1
2.	Setup.....	2
2.1	Requirements.....	2
2.2	Software.....	2
2.3	Hardware.....	2
3.	TSXCUSBMBP Configuration.....	3
3.1	Access from the System Tray.....	3
3.1.1	Exit Driver.....	3
3.1.2	Rescan Adapters.....	3
3.1.3	Show Interface.....	3
3.2	Configure the Driver.....	3
3.2.1	Settings.....	4
3.2.2	Routing.....	4
3.2.3	Virtual Modbus Port.....	5
3.2.4	MB+ Network Diagnostics.....	6
3.2.5	Help.....	6
4.	KEPServerEX Configuration.....	7
4.1	Prerequisites.....	7
4.2	Set up the Server.....	7
4.2.1	Create a New Channel.....	7
4.2.2	Create a New Device.....	9
4.2.3	Create a New Tag.....	10
4.3	Check the Connection.....	10

1. Overview

- **NOTE:** This document applies to Revision 1 of this adapter; it does not apply to Revision 2. This revision of the adapter presents a virtual serial COM port that should be targeted by Kepware's Modbus RTU Serial driver as a typical Modbus RTU device, whereas Revision 2 presents a virtual Modbus Plus PCI card that should be targeted with the Modbus Plus driver.

1.1 Purpose

Schneider Electric has developed hardware in response to the increased usage of USB. The TSXCUSBMBP adapter replaces the SA85 without the requirement of having an available ISA, PCI or PCMCIA slot.

1.2 Functionality

The TSXCUSBMBP provides a bridge between a high-speed Modbus Plus network and a PC's USB port with two areas of functionality.

1.2.1 Communication

The adapter provides a means of programming and exchanging data with applications supporting Modbus RTU. A Virtual Serial Port is granted by the software driver to simulate actual serial hardware but at a faster speed since no serial communications are actually taking place.

1.2.2 Diagnostics

The adapter is also used as a diagnostic and network monitoring tool for Modbus Plus networks. Included is a full and local network scan, an active stations table, and detailed node information.

1.3 Abbreviated Terms

The following terms may have been used in this document as a generalization. An expanded explanation of the terms is provided.

- **Adapter** refers to the TSXCUSBMBP hardware.
- **Software Application** or **application** is used to reference the third-party software that will be communication to the TSXCUSBMBP driver with Modbus RTU requests.
- **Driver Software** or **driver** is used to reference the TSXCUSBMBP software that is installed during setup to create a bridge between the Modbus Plus network (along with the TSXCUSBMBP hardware) and computer USB port.
- **Server** refers to the KEPServerEX application.

2. Setup

2.1 Requirements

The requirements are as follows:

- Microsoft Windows XP with SP 2 or greater installed (Windows 2000 with SP 4 or greater can also be used on most computers)
- 1 MB free disk space
- 256 MB RAM
- An available USB port or a USB hub supporting USB 1.1 or greater

2.2 Software


The software driver must be installed before connecting the USB cable to the TSXCUSBMBP.

1. Insert the CD-ROM labeled TSXCUSBMBP Driver into your CD-ROM drive.
2. The installation should begin automatically. If not, manually start the installation by running the Setup.exe application.
3. Follow the on-screen instructions to complete the software installation.
4. The final step of the software installation will display a message window containing instructions. Please read the instructions carefully.

2.3 Hardware

Connect the UBS cable to any available USB port on the PC or USB hub. Power for the TSXCUSBMBP is supplied through the USB port so no other power connection is required. A green LED on the cover will illuminate indicating power is present.

- **DO NOT CONNECT THE MODBUS PLUS CABLE TO THE NETWORK UNTIL THE TSXCUSBMBP HAS BEEN CONFIGURED WITH A UNIQUE NODE ADDRESS WITH THE DRIVER SOFTWARE.**

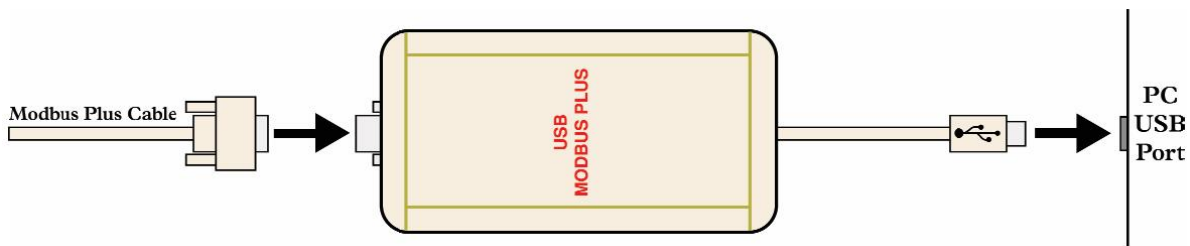

The New Hardware Wizard will start up if this is the first time that this hardware is connected to the computer. Follow the wizard to complete the hardware installation and restart the computer.

3. TSXCUSBMBP Configuration

3.1 Access from the System Tray

During the installation of the software, the TSXCUSBMBP driver is added to the Startup group. Upon power up of the computer, the driver will start and scan for attached devices. An icon will appear in the system tray indicating the status of the driver.



Indicates that a TSXCUSBMBP is found and initialized.



Indicates that a TSXCUSBMBP is in the process of being initialized.



Indicates that no TSXCUSBMBP is found.

3.1.1 Exit Driver

Right clicking on the TSXCUSBMBP icon and selecting Exit Driver will close the driver and break the connection to the TSXCUSBMBP. The driver will need to be restarted manually by running the MbSvr.exe application. By default, the application is installed in the following location:

C:\Program Files\Schneider Electric\TSXCUSBMBP\

Or the application can be started from the Start menu:

Start, All Programs, Schneider Electric, TSXCUSBMBP

3.1.2 Rescan Adapters


Right clicking on the TSXCUSBMBP icon and selecting Rescan Adapters will initiate a scan to identify a connected TSXCUSBMBP. A rescan is necessary if the computer is powered up without the TSXCUSBMBP being connected. This state will be indicated by a red icon. If a rescan is completed and no adapter is found, check the USB cable and confirm that power is applied on the adapter using the LEDs on the housing. Then confirm that the correct drivers are installed and enabled.

3.1.3 Show Interface

Double-clicking or right-clicking on the TSXCUSBMBP icon and selecting Show Interface will display the Interface Window.

3.2 Configure the Driver


The Interface Window is used to configure the TSXCUSBMBP adapter. The title bar of the window displays the current node that is already selected for the adapter. Information on initialized adapters is displayed as well as a window for status and error information.

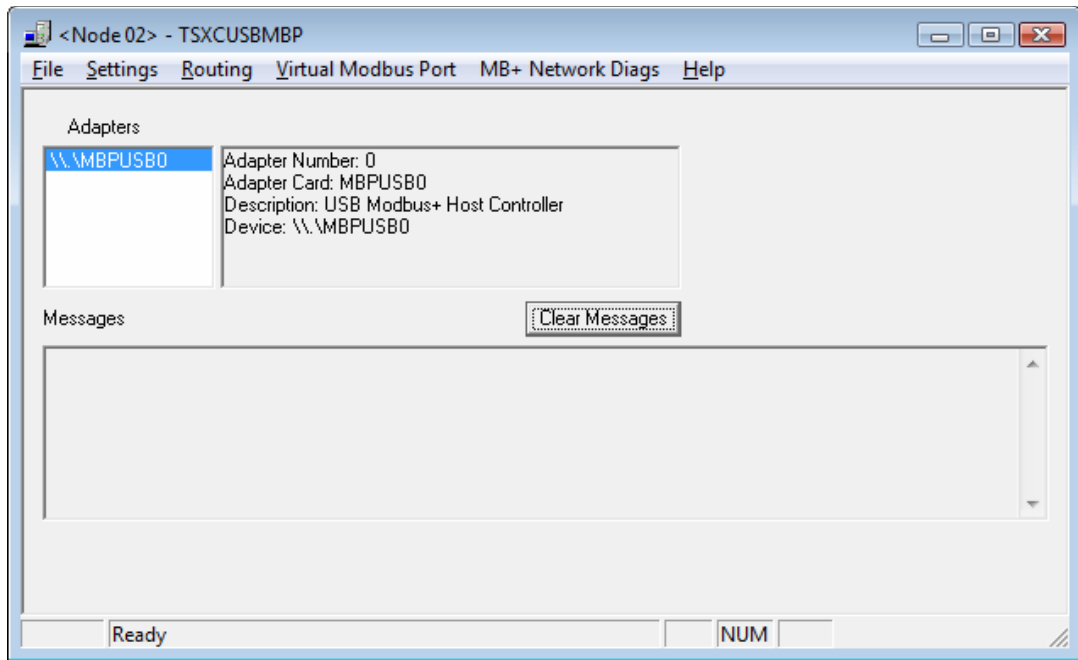

3.2.1 Settings

Since the TSXCUSBMBP is a node on the Modbus Plus network, a unique node address must be assigned. This must be done prior to connecting the adapter to the network.

From the top-level menu, select Settings. The following window is displayed:

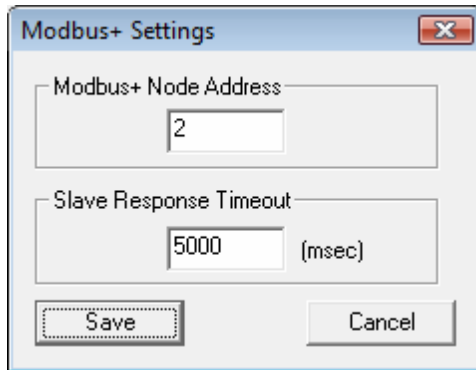


- **Modbus+ Node Address** is the address that will be assigned to the TSXCUSBMBP.
- **Slave Response Timeout** is the amount of time that is allowed for the slave device to respond to the TSXCUSBMBP before it can accept another request from the application.

3.2.2 Routing

For the TSXCUSBMBP to be able to communicate on a Modbus Plus network, the driver must convert a Modbus RTU ID into a 5-byte Modbus Plus routing path. The driver supports multiple addressing methods which are detailed in the help manual. Some addresses do not require an entry in the routing table. For instance, a Modbus ID which is in the range of 1-64 will be used directly as the first byte of the routing path while the remaining bytes will be set to 0. In this example, the Modbus ID must be unique to the Modbus Plus network.

From the top-level menu, select Routing. The following window is displayed:

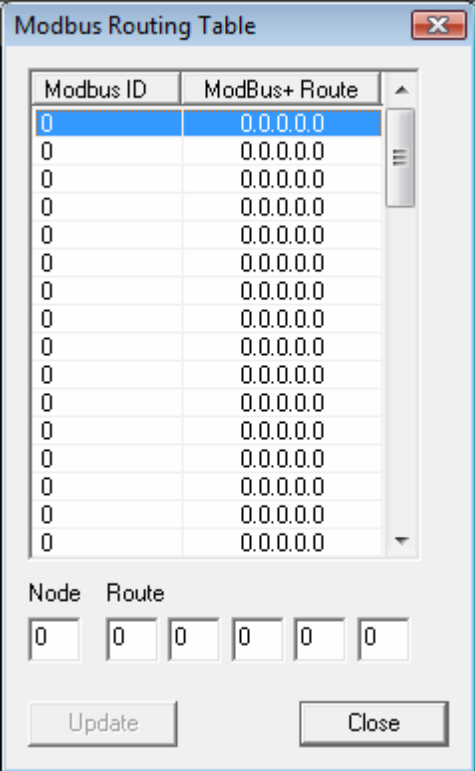

Select the Modbus ID by clicking the entry on the table. The entry will become highlighted and the current values will be populated in the fields below.


- **Node** is the slave address used by the application.
- **Route** is the Modbus Plus routing that is created by the structure of the network.

Press **Update** to apply the changes to the table.

3.2.3 Virtual Modbus Port

The Virtual Modbus Port is used by the application to send Modbus RTU requests to the TSXCUSBMBP driver. The COM port must be free and have no other device installed on it.

From the top-level menu, select Virtual Modbus Port. The following window is displayed:

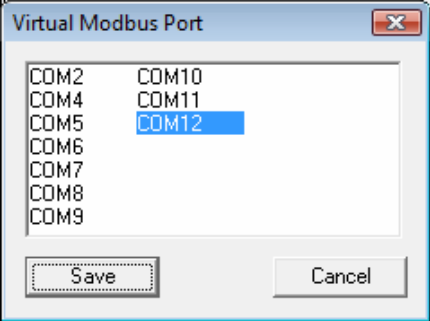

- The **COM#** which is highlighted is the current COM port being used. To change select a different COM port.


Press **Save** to activate the changes.

3.2.4 MB+ Network Diagnostics

The TSXCUSBMBP driver also provides useful diagnostics functions such as a complete and local network scan.

• Refer to the *TSXCUSBMBP driver help manual* for complete details on the diagnostic tools.

From the top-level menu, select MB+ Network Diagnostics. The following window is displayed:

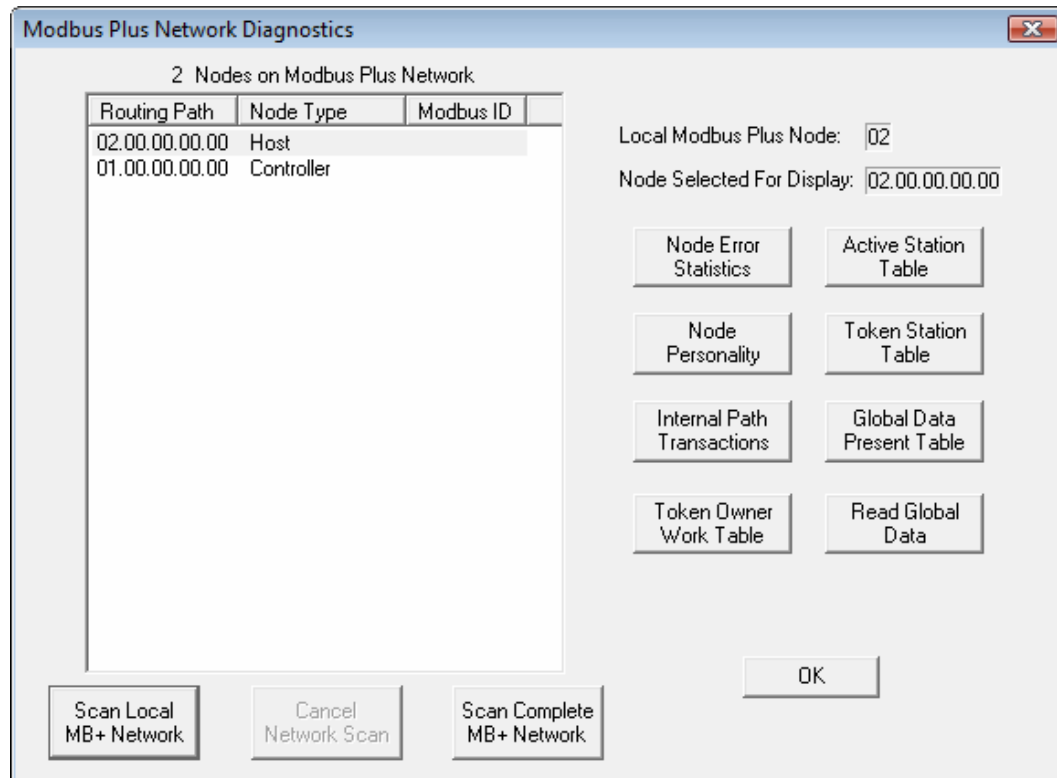


When the diagnostic window is first opened, only the TSXCUSBMBP adapter will be displayed. A scan must be performed to see other devices on the network.

3.2.5 Help

From the top-level menu, select **Help | Manual** to display the TSXCUSBMBP USB Modbus Plus Communications Adapter User Manual.

From the top-level menu, select **Help | About...** to display the TSXCUSBMBP driver version and copyright information.

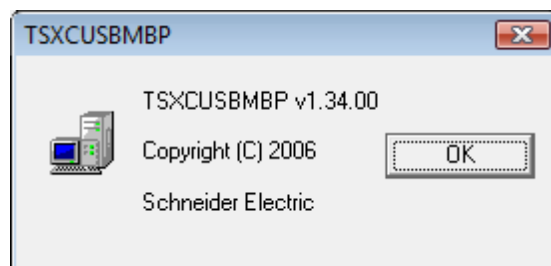

4. KEPServerEX Configuration

4.1 Prerequisites


- The TSXCUSBMBP software and hardware must be installed and configured using the above guidelines.
- KEPServerEX must be installed on a computer that meets the hardware requirements.
- A new or existing server project must be opened.

4.2 Set up the Server


Use the following procedure to create a new channel, device, and tag for use with the TSXCUSBMBP adapter.

4.2.1 Create a New Channel

1. Using the top-level menu, select **Edit | Connectivity | New Channel...**

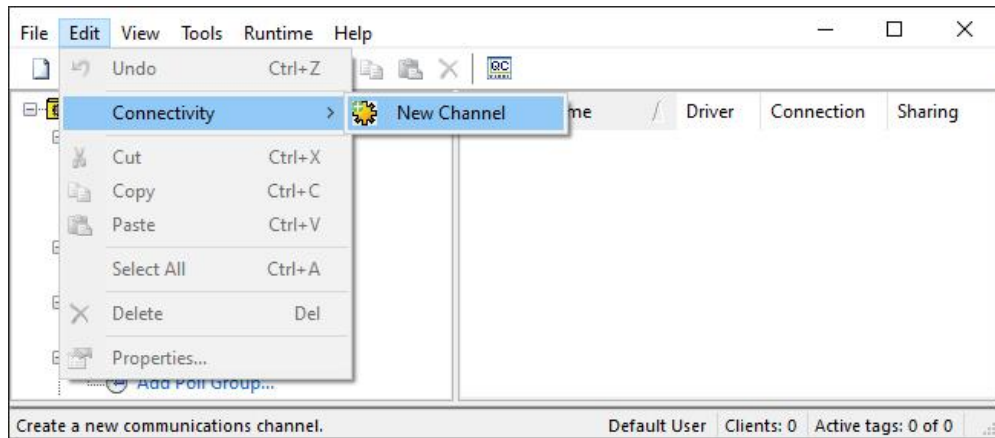


2. Use the Device Driver: drop down menu to select the Modbus Serial driver. Press **Next** when complete.

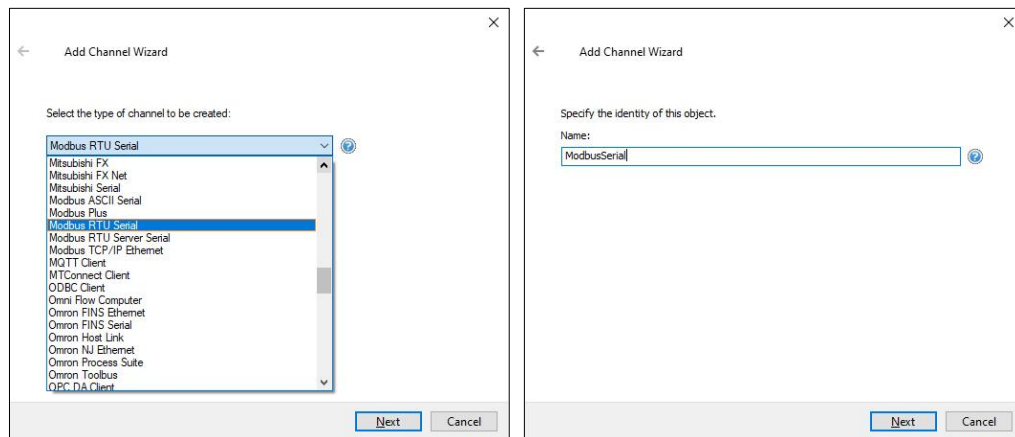

3. Enter a channel name and click **Next**.

- Specify the ID of the Virtual Modbus Port that was configured when setting up the TSXCUSBMBP driver. All other parameters are ignored when using a Virtual Modbus Port. Press **Next** when complete.

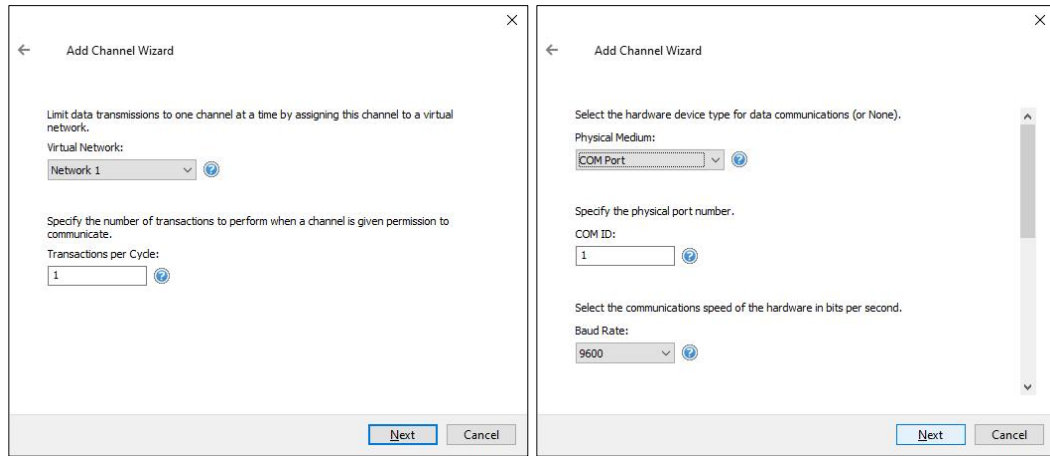

- Make any optimizations that are necessary. For most cases, the default values work correctly. Press **Next** when complete.
- Review the summary and press **Finish** when complete.


Identification	
Name	ModbusSerial
Description	
Driver	Modbus RTU Serial
Diagnostics	
Diagnostics Capture	Disable
Tag Counts	
Static Tags	0
Connection Type	
Physical Medium	COM Port
Shared	No
Serial Port Settings	
COM ID	1
Baud Rate	9600
Data Bits	8
Parity	Even
Stop Bits	1
Flow Control	None
Operational Behavior	
Report Communication Errors	Enable
Close Idle Connection	Enable
Idle Time to Close (s)	15
Write Optimizations	
Optimization Method	Write Only Latest Value for All Tags
Duty Cycle	10
Non-Normalized Float Handling	
Floating-Point Values	Replace with Zero
Channel-Level Settings	
Virtual Network	Network 1
Transactions per Cycle	1
Global Settings	
Network Mode	Load Balanced

4.2.2 Create a New Device


1. Select the new channel, right-click and select **New Device**.



2. Enter a device name. Press **Next** when complete.

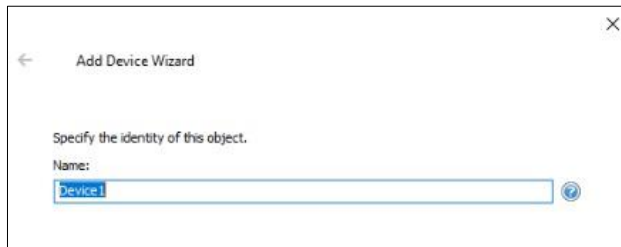


3. Use the Device model: drop down menu to select **Modbus**.
4. Press **Next** when complete.

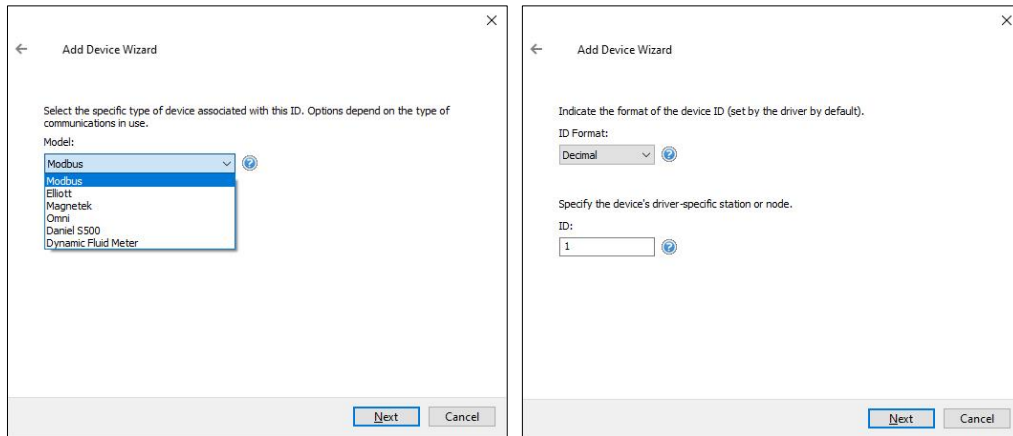


5. Specify the Device ID that was configured in the Modbus Routing Table when setting up the TSXCUSBMBP driver. If no entry was made in the Modbus Routing Table, select the Modbus Plus node address of the device.
6. Press **Next** when complete.
7. Continue with the New Device wizard using the default values for the remaining pages. The values can be modified at the device level at a later time.
8. Review the summary and press **Finish** when complete.

4.2.3 Create a New Tag

1. Right-click on the new device and click **New Tag...**

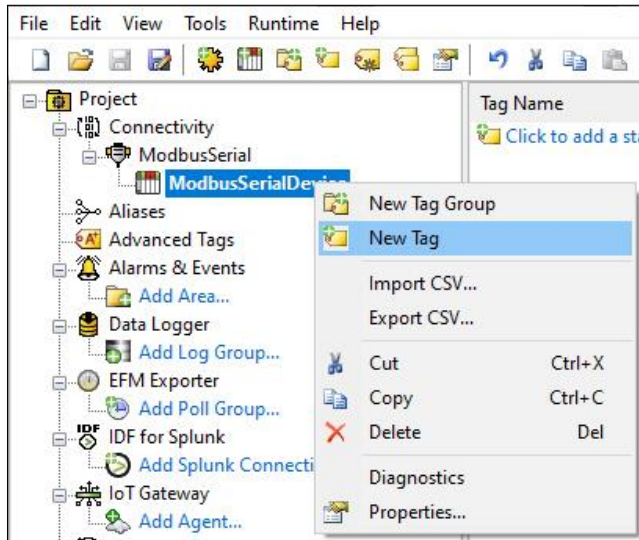

2. Under the **General** group, assign a name for the new tag. In this example, Modbus address 400001 is used in the address field. A description may also be entered.

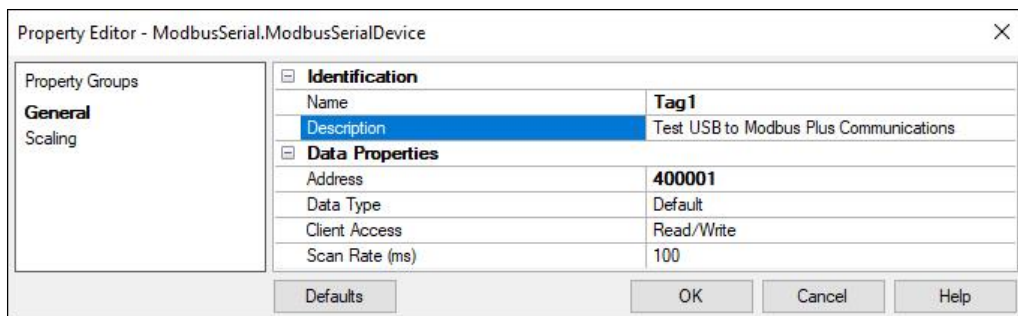

3. Press **OK** when complete.

4.3 Check the Connection

1. Using the top-level menu, select **Tools | Launch OPC Quick Client**.
2. Click on the folder that has the channel and device name that you specified above. This example used the default values of Channel 1 and Device 1. The window on the right displays information regarding the created tags. The connection is working correctly as Tag1 shows a Quality of Good.

The connection is now ready for the transferring of data with OPC.

- Refer to the *TSXCUSBMBP driver help manual* for complete details on how to use the *TSXCUSBMBP* to connect to applications such as *Concept*, *Unity*, and *ProWorx32*.