

OMNI Flow Computer Driver Help

© 2014 Kepware Technologies

Table of Contents

Table of Contents	2
OMNI Flow Computer Driver Help	5
Overview	5
Channel Setup	6
Device Setup	7
Data Access	7
Block Sizes	8
Framing & Error Handling	9
EFM Meters	10
EFM Mapping	13
EFM History Mapping	16
EFM History Mapping - Gas Models	16
EFM History Mapping - Liquid Models	19
EFM Alarm Mapping	24
EFM Event Mapping	26
CSV Import/Export	26
EFM Cache	28
Data Types Descriptions	29
Address Descriptions	30
Error Descriptions	34
Modbus Exception Codes	35
Address Validation	36
Address '<address>' is out of range for the specified device or register	36
Array size is out of range for address '<address>'	37
Array support is not available for the specified address: '<address>'	37
Data Type '<type>' is not valid for device address '<address>'	37
Device address '<address>' contains a syntax error	37
Device address '<address>' is not supported by model '<model name>'	37
Device address '<address>' is Read Only	38
Missing address	38
Received block length of '<received length>' does not match expected length of '<expected length>' for address '<address>' on device '<device>'	38
Device Status Messages	38
Device '<device name>' is not responding	38
Unable to write to '<address>' on device '<device name>'	39
Unable to write to address '<address>' on device '<device>': Device responded with exception code '<code>'	39
Write failed for '<tag name>' on device '<device name>'. Maximum path length of '<number>' exceeded	39
OMNI Flow Computer Specific Messages	39

'<device name>' - A starting address of '<address>' in the archive's record structure is invalid. May not receive data for address '<address>'	41
'<device name>' - Alarm record parse for device failed	41
'<device name>' - Archive '<archive number>' is not configured correctly for address '<address>'. Max number of records is zero	41
'<device name>' - Archive record contains an invalid address. BOOL, 8-byte strings, and 16-byte strings are not supported	41
'<device name>' - Archive record for address '<address>' contains an unexpected number of bytes. Expected '<number of bytes>' bytes, received '<number of bytes>' bytes	41
'<device name>' - Config data attribute for meter tap location read from device address '<address>' is '<value>', and does not map to any valid meter tap locations. Expecting 0 for flange, or 1 for pipe. Defaulting to flange	42
'<device name>' - Config data attribute for meter type read from device address '<address>' is '<value>', and does not map to any valid meter types. Expected values are 0, 2, or 3 for orifice, 1 for turbine, 4 or 8 for ultra sonic, and 5 for vcone. Defaulting to orifice	42
'<device name>' - Config data attribute for static pressure tap read from device address '<address>' is '<value>', and does not map to any valid static pressure tap locations. Expecting 0 for up, or 1 for down. Defaulting to up	42
'<device name>' - Config data attribute for static pressure unit read from device address '<address>' is '<value>', and does not map to a valid pressure unit. Expecting 0 for kPa, 1 for Bar, or 2 for kg/cm2. Defaulting to kPa	42
'<device name>' - Config data attribute for totalizer digits read from the device address '<address>' is '<value>', and does not map to a valid number of totalizer digits. Expecting 0 for 9 digits, or 1 for 8 digits. Defaulting to 9 digits	43
'<device name>' - Date format for address '<address>' is invalid. Device returned '<value>', valid values are 0 or 1	43
'<device name>' - Device Firmware version '<Firmware version>' is not supported by the '<model name>' model	43
'<device name>' - Device password write not successful. Value in response is different from the written value	43
'<device name>' - Event record parse for device failed	43
'<device name>' - Failed to read EFM pointer file. <Extended Error>	44
'<device name>' - Failed to write EFM pointer file. <Extended Error>	44
'<device name>' - Meter and shared archives are not in sync. Records will only contain flow data (no analysis)	44
'<device name>' - Meter archive record parse failed	45
'<device name>' - Read invalid Firmware version '<Firmware version>' from address '<address>', config upload complete	45
'<device name>' - Shared '<archive type>' archive address is not configured, records will only contain flow data (no analysis)	45
'<device name>' - Shared archive record parse failed	45
'<device name>' - The <archive type> mapping contains more configured attributes than the device. Some attributes will not contain valid data	45
'<device name>' - The max alarm archive size was changed from '<previous size>' to '<current size>'	46
'<device name>' - The max event archive size was changed from '<previous size>' to '<current size>'	46
'<device name>' - Time sync write not successful. Value in response is different from the written value	46
'<device name>' - Unable to read '<number of registers>' registers in config register block at address '<address>'	46
'<device name>' - Unable to read date format register for address '<address>'. Response is not the correct size	47

'<device name>' - Unable to read index registers. Response is not the correct size	47
'<device name>' - Unable to read record format registers for address '<address>'. Response is not the correct size	47
'<device name>' - Unable to write requested record register for address '<address>'. Wrote '<value>', read back '<value>'	47
'<device name>' - Unable to write requested record register for address '<address>'. Response is not the correct size	47
Alarm mapping for address '<address>' is invalid and will be ignored	48
Alarm state for address '<address>' is invalid. Setting the state to <state>	48
Alarm type for address '<address>' is invalid. Setting the type to <type>	48
Bad address in block [<start address> to <end address>] on device '<device name>'	48
Bad array spanning [<address> to <address>] on device '<device>'	49
Device password invalid for device '<device name>'	49
Device password write for device '<device name>' was successful	49
History attribute '<attribute index>' is unknown and will be ignored	49
History mapping for attribute '<attribute name>' is invalid and will be ignored	50
Received "needs password" exception from device '<device name>' with 'fail after successive timeouts' set to 1. Set the 'fail after successive timeouts' setting to a value greater than 1 and verify that the 'device password' setting is correct	50
Serialization of EFM data to temporary file '<file name>' failed. Reason: '<file I/O error>'	50
The '<archive type>' archive number for meter '<meter name>' is already being used. XML project load not successful	50
The shared '<archive type>' archive number is already in use by another meter. XML project load not successful	51
Unable to read '<address>' from device '<device name>'. The device is configured for broadcast writes only	51
Unable to read block address [<start address> to '<end address>'] on device '<device name>'. Unexpected characters in response	51
Warning loading '<mapping type>' mapping from CSV. '<warning type>'	51
Serial Communications	51
Communications error on '<channel name>' [<error mask>]	51
COMn does not exist	52
COMn is in use by another application	52
Error opening COMn	52
Unable to set comm parameters on COMn	52
Index	53

OMNI Flow Computer Driver Help

Help version 1.037

CONTENTS

[Overview](#)

What is the OMNI Flow Computer?

[Channel Setup](#)

How do I configure channels for use with this driver?

[Device Setup](#)

How do I configure a device for use with this driver?

[Data Types Description](#)

What data types does this driver support?

[Address Descriptions](#)

How do I address a data location on an OMNI Flow Computer device?

[Error Descriptions](#)

What error messages are produced by the OMNI Flow Computer Driver?

Overview

The OMNI Flow Computer Driver provides real-time and EFM data access. In addition to archive, time zone, and device password settings, the driver configuration also maps data in the device to the server's EFM Model (which consists of various EFM attributes such as pressure, temperature, and so forth).

Important: EFM functionality is not available in all server versions. To determine whether support is available, refer to the "Server Summary Information" topic located in the server help file.

Channel Setup

Communication Serialization

The OMNI Flow Computer Driver supports Communication Serialization, which specifies whether data transmissions should be limited to one channel at a time. For more information, refer to "Channel Properties - Advanced" in the server help file.

Device Setup

Supported Communication Parameters

Baud Rate: 1200, 2400, 9600, and 19200.

Parity: Odd, Even, and None.

Data Bits: 8.

Stop Bits: 1 and 2.

Note: Not all of the listed configurations may be supported in every device.

Supported Firmware Versions

20.xx

21.xx

22.xx

23.xx

24.xx

26.xx

27.xx


Maximum Number of Channels and Devices

The maximum number of supported channels is 256. The maximum number of devices supported per channel is 255.

Ethernet Encapsulation

This driver supports Ethernet Encapsulation, which allows the driver to communicate with serial devices attached to an Ethernet network using a terminal server. It may be enabled through the Communications dialog in Channel Properties. For more information, refer to the main server's help file.

Data Access

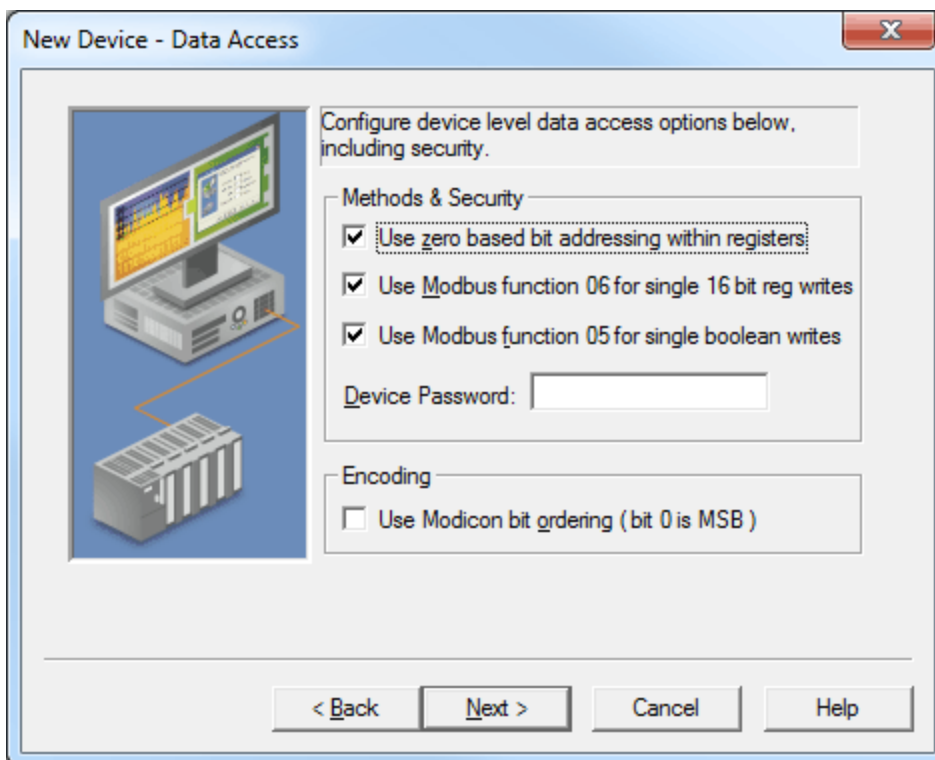

Descriptions of the parameters are as follows:

- **Use zero based bit addressing within registers:** When checked, this option will use zero based bit addressing within registers and will start the first bit at 0. The default setting is checked. For more information, refer to the "Zero vs. One Based Bit Addressing Within Registers" subtopic below.

- **Use Modbus function 06 for single 16 bit reg writes:** When checked, this option will use Modbus function 06 for single 16 bit register writes. The default setting is checked. For more information, refer to the "Use Modbus Function 06 for Single 16 Bit Reg Writes" subtopic below.
- **Use Modbus function 05 for single boolean writes:** When checked, this option will use Modbus function 05 for single boolean writes. This allows the driver to operate as it has historically, switching between 05 and 15 as needed. When unchecked, all writes will be done using only Modbus function 15. The default setting is checked. For more information, refer to the "Use Modbus Function 05 for Single Boolean Writes" subtopic below.
- **Device Password:** This parameter specifies a password for the device.
- **Use Modicon bit ordering (bit 0 is MSB):** When checked, the driver will reverse the bit order on reads and writes to registers to follow the convention of the Modicon Modsoft programming software. For example, when enabled, a write to address 40001.0/1 will affect bit 15/16 in the device. The default setting is unchecked. For more information, refer to the "Use Modicon Bit Ordering" subtopic below.

Zero vs. One Based Bit Addressing Within Registers

Memory types that allow bits within Words can be referenced as a Boolean. The addressing notation for this is <address>. <bit>, where <bit> represents the bit number within the word. Bit level addressing within registers provides two ways of addressing a bit within a given word: Zero Based and One Based. Zero Based Bit addressing within registers simply means the first bit begins at 0. One Based Bit addressing means that the first bit begins at 1. Descriptions are as follows:

- **Zero Based:** For the Word data type, the bit range is 0 to 15.
- **One Based:** For the Word data type, the bit range is 1 to 16.

Use Modbus Function 06 for Single 16 Bit Reg Writes

Although all OMNI Firmware revisions support Function Code 06 when writing a single 16 bit register, revisions older than xx.44 will not support Function Code 06 when writing a single 32 bit register. As such, Function Code 16 must be used when writing one or more 32 bit registers on the older Firmware revisions. Even though newer Firmware revisions support Function Code 06 for single 32 bit register writes, Function Code 16 will always be used for single 32 bit register writes in order to support legacy installations.

Use Modbus Function 05 for Single Boolean Writes

The OMNI Flow Computer Driver can use two Modbus protocol functions to write output coil data to the target device. In most cases, it will switch between these two functions based on the number of coils being written. When writing a single coil, the driver will use the Modbus function 05. When writing an array of coils, the driver will use Modbus function 15. The standard Modicon PLC can use either of these functions. There are many Third-Party devices that have implemented the Modbus protocol, however, and only support the use of Modbus function 15 to write to output coils (regardless of the number of coils being written).

Use Modicon Bit Ordering

For the following example, the 1st through 16th bit signifies either 0 to 15 bits or 1 to 16 bits, depending on whether the driver is set at zero based addressing within registers. In the tables below, MSB is the Most Significant Bit and LSB is the Least Significant Bit.


Use Modicon Bit Ordering Checked

MSB								LSB							
1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16

Use Modicon Bit Ordering Unchecked

MSB								LSB							
16	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1


Block Sizes

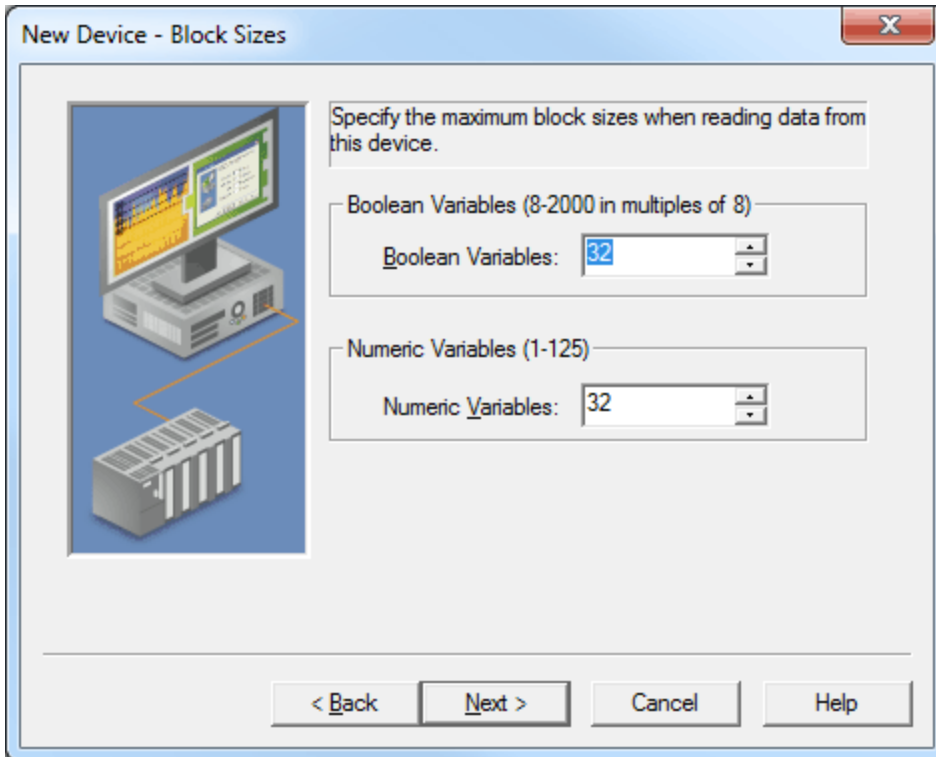

Descriptions of the parameters are as follows:

- **Boolean Variables:** This parameter specifies the Boolean variables. The valid range is 8 to 2000, in multiples of 8. The default setting is 32.
- **Numeric Variables:** This parameter specifies the Numeric variables. The valid range is 1 to 125. The default setting is 32.

Framing & Error Handling

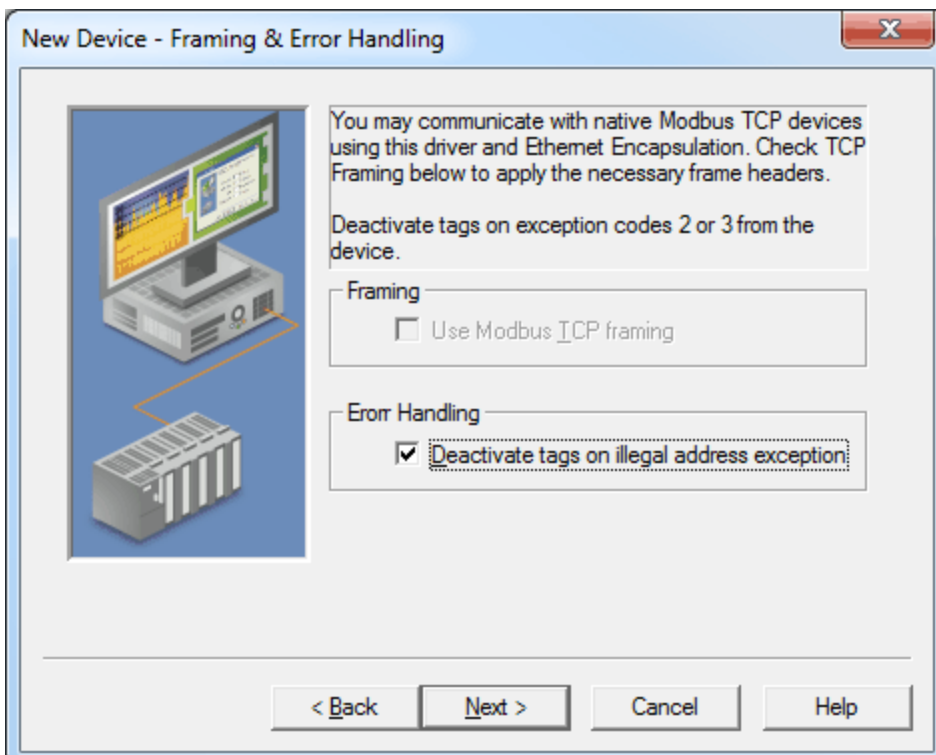


Descriptions of the parameters are as follows:

- **Use Modbus TCP Framing:** When checked, this option enables communications with native Modbus TCP devices using Ethernet Encapsulation. The default setting is unchecked.
- **Deactivate tags on illegal address exception:** When checked, the driver will stop polling for a block of data if the device returns Modbus exception code 2 (illegal address) or 3 (illegal data, such as number of points) in response to a read of that block. To read addresses that are accessible dynamically in the device, uncheck this option. The default setting is checked.

EFM Meters

This dialog contains meter-specific EFM configuration and upload settings. The OMNI Flow Computer Driver supports up to four meters.

Upload

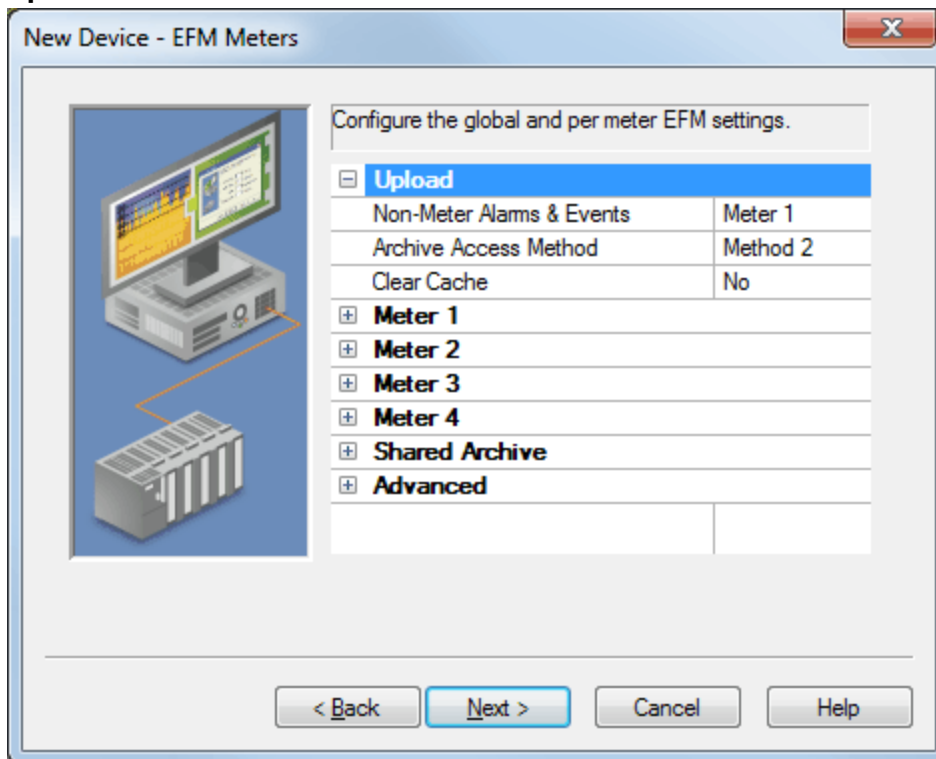

Descriptions of the parameters are as follows:


- **Non-Meter Alarms & Events:** OMNI devices produce some alarms and events that are not meter specific. This parameter specifies the location where these alarms and events will be stored. Options include Ignore, Meter 1, Meter 2, Meter 3, Meter 4, and All. The default setting is Meter 1. Descriptions of the options are as follows:
 - **Ignore:** The alarms and events will not be sent to any meters.
 - **Meter 1, Meter 2, Meter 3, or Meter 4:** The alarms and events will be sent to one specified meter.
 - **All:** The alarms and events will be sent to all meters.
- **Archive Access Method:** This parameter specifies whether archives will be accessed using Method 1 or Method 2. Method 1 is the legacy method, and Method 2 is more efficient. The default setting is Method 2.

Note: When Method 2 is selected but is not supported by the device, the read will fail and the driver will fall back to Method 1 and issue a warning.
- **Clear Cache:** This parameter specifies whether to clear the EFM cache, which is maintained by the server and stores history, alarms, and events data for each meter. When enabled, the cache will be cleared on the next poll. This feature will also remove pointer files, which are used to track EFM uploads in

order to prevent uploading the same records twice. All EFM data in the device will be requested again on the next poll. Once the cache is cleared, this parameter will automatically be set back to No. The default setting is No.

Note: This option should be used during testing, if the EFM mappings are not configured correctly, or in situations where it is beneficial to re-request all EFM data from the device.

Meter *N*

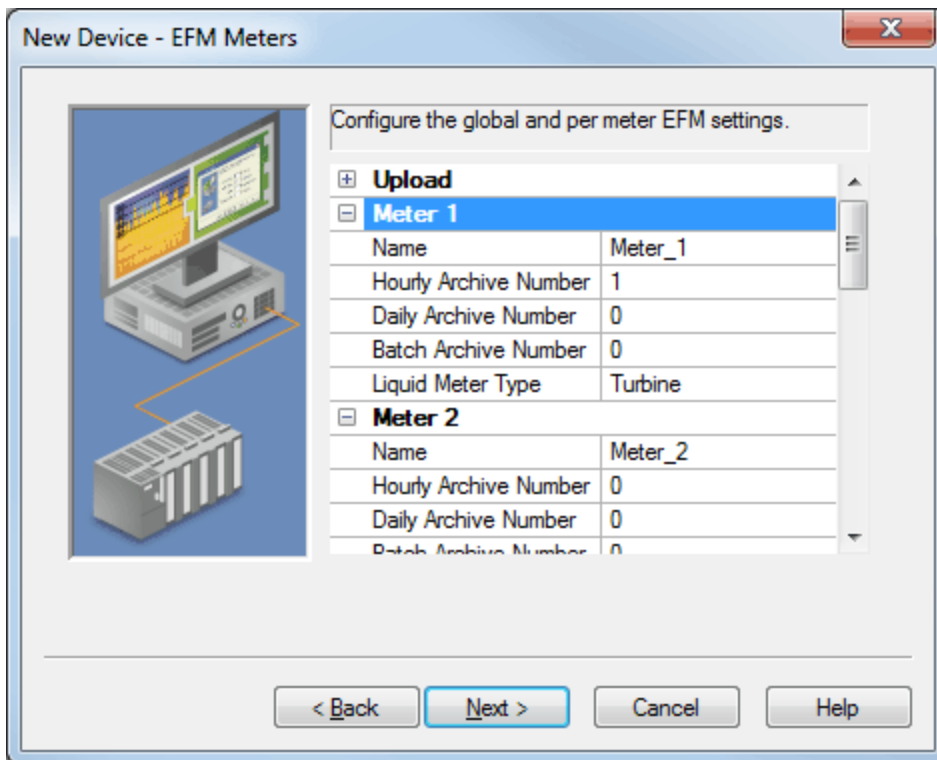

Descriptions of the parameters are as follows:


- **Name:** This parameter specifies a descriptive name for the meter. The valid range is 1 to 128 characters. It can neither begin nor end with a trailing blank space. It also cannot begin with an underscore or contain an '@' character, period, or quotation mark.

Note: Multiple meters may not use the same meter name.

- **Hourly Archive Number:** This parameter specifies the device archive number that will store the meter's hourly historical data. This number must match the physical device configuration. The valid range is 0 to 10. Setting this parameter to 0 will disable the archive.
 - **Daily Archive Number:** This parameter specifies the device archive number that will store the meter's daily historical data. This number must match the physical device configuration. The valid range is 0 to 10. Setting this parameter to 0 will disable the archive.
 - **Batch Archive Number:** This parameter specifies the device archive number that will store the meter's batch data. This number must match the physical device configuration. The valid range is 0 to 10. Setting this parameter to 0 will disable the archive.
- Note:** This setting is only supported by OMNI Liquid Firmware models.
- **Liquid Meter Type:** This parameter specifies the liquid meter type that will be applied to the EFM configuration when an upload is performed. Because the type cannot be determined during an EFM upload, this property should be configured to match the meter's type. Options include Orifice, Ultrasonic, Coriolis, Positive Displacement, Turbine, and Line Pack. The default setting is Turbine.

Note: This setting is only supported by OMNI Liquid Firmware models.

Shared Archive

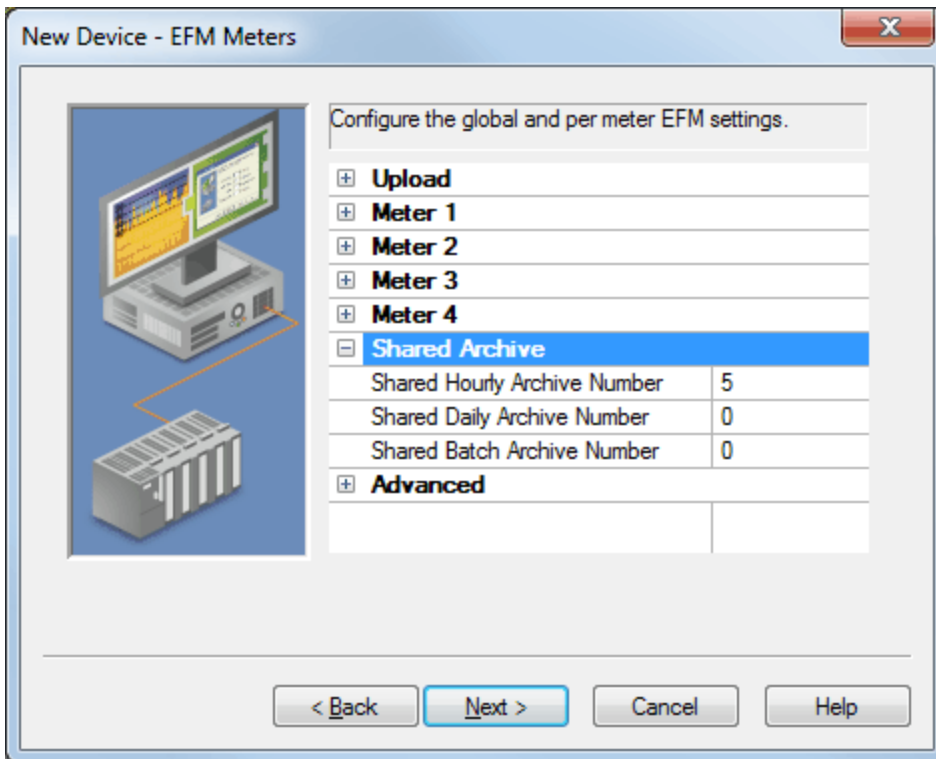


Descriptions of the parameters are as follows:

- **Shared Hourly Archive Number:** This parameter specifies the device archive number for shared hourly data. Each meter shares this archive. The valid range is 0 to 10. Setting this parameter to 0 will disable the archive. The default setting is 5.
- **Shared Daily Archive Number:** This parameter specifies the device archive number for shared daily data. Each meter shares this archive. The valid range is 0 to 10. Setting this parameter to 0 will disable the archive. The default setting is 0.
- **Shared Batch Archive Number:** This parameter specifies the device archive number for shared batch data. Each meter shares this archive. The valid range is 0 to 10. Setting this parameter to 0 will disable the archive. The default setting is 0.

Note: This setting is only supported by OMNI Liquid Firmware models.

Advanced

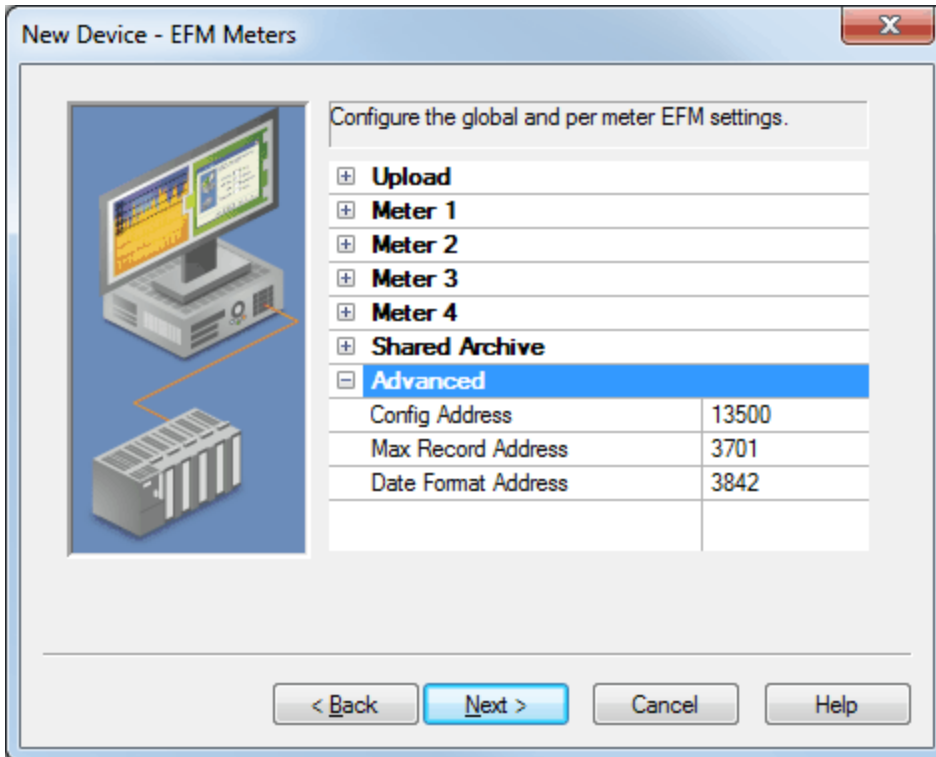


Descriptions of the parameters are as follows:

- **Config Address:** This parameter specifies the group configuration address for archive 1 in the device. The default setting is 13500. This setting should usually not be changed.
- **Max Record Address:** This parameter specifies the device address whose value is the maximum number of records for archive 1 in the device. The default setting is 3701. This setting should usually not be changed.
- **Date Format Address:** This parameter specifies the Date Format address that defines the date format for all archive data. The default setting is 3842. This setting should usually not be changed.

EFM Mapping

This dialog configures the mapping of EFM data in the device to the server's EFM data model. The History and Alarms Mappings can be configured. Configuration and Event data is fixed.

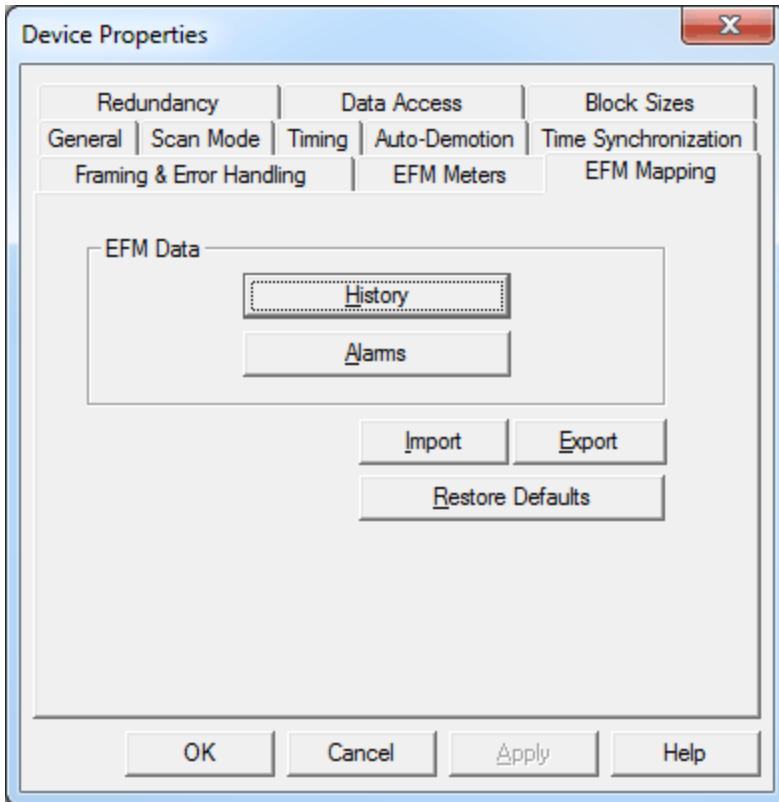

Descriptions of the parameters are as follows:

- **History:** When clicked, this button launches the EFM History Mapping dialog, which is used to map history records from the device to EFM attributes. The EFM History Mapping is applied to all enabled meters. For more information, refer to [EFM History Mapping](#).
- **Alarms:** When clicked, this button launches the EFM Alarm Mapping dialog, which is used to map alarms to the server's alarms. The EFM Alarm Mapping is applied to all enabled meters. For more information, refer to [EFM Alarm Mapping](#).
- **Import:** When clicked, this button launches the Import from CSV dialog, which is used to import EFM History and EFM Alarm Mappings from a CSV file. The CSV file will replace all existing mappings.
- **Export:** When clicked, this button launches the Export to CSV dialog, which is used to export the current EFM History and EFM Alarm Mappings to a CSV file for easy editing.
- **Restore Defaults:** When clicked, this button restores both the EFM History Mapping and the EFM Alarm Mapping to their default settings.

Configuration Mappings

The OMNI Flow Computer Driver does not support configuration of the EFM Configuration Mapping. The driver will request the configuration data from the device on each poll per meter as listed in the tables below. The Configuration Mapping that the driver uses depends on the Firmware revision. For more information, select a link from the list below.

- [Firmware Revisions 23.xx and 27.xx](#)
- [Firmware Revisions 20.xx, 22.xx, 24.xx, and 26.xx](#)
- [Firmware Revision 21.xx](#)

Note: The *N* syntax denotes a base address, where *N* is replaced with the meter number.

Firmware Revisions 23.xx and 27.xx

Attribute	Address
Meter ID	4N14
Meter Type	3N08
Pressure Base	7894
Temperature Base	7892

Live Analysis	3839
Live BTU	13058
Live Gravity	13053
Live Temperature	13041
AGA8/FPV Method	3N11
Pipe Diameter	7N48
Pipe Material	7N49
Pipe Reference Temperature	7N50
Meter Tap	3N12
Static Pressure Tap	3N10
Orifice Plate Size	7N45
Orifice Plate Material	7N46
Orifice Plate Temperature	7N47
DP Low Flow Cutoff	7N51
Atmospheric Pressure	7891
DP Low Alarm	7N52
DP High Alarm	7N53
Temperature Low Alarm	7N63
Temperature High Alarm	7N64
Static Pressure Low Alarm	7N68
Static Pressure High Alarm	7N69
K Factor	17501
Meter Factor	17179
Specific Heats	17252
BTU	17253
Specific Gravity	17254
Viscosity	17251
Contract Hour	4819
Units	4849
C1	5N21/5N26*
N2	5N22/5N21*
CO2	5N33/5N22*
C2	5N24/5N27*
C3	5N25/5N28*
ISO C4	5N31/5N30*
NC4	5N32/5N29*
ISO C5	5N33/5N32*
C5	5N34/5N31*
NEO C5	5N42
C6	5N35/5N33*
C7	5N36/5N34*
C8	5N37/5N35*
C9	5N38/5N36*
C10	5N39/5N37*
O2	5N30/5N38*
H2O	5N26/5N24*
H2S	5N27/5N23*
HE	5N40/5N25*
H2	5N28/5N40*
CO	5N29/5N39*
AR	5N41

*The address of the Gas Chromatograph data is independent of the Calculation Method. It is the address on the left for AGA8 1992-94 and the address on the right for all others.

Firmware Revisions 20.xx, 22.xx, 24.xx, and 26.xx

Attribute	Description
Meter ID	4N14
Liquid Product Name	4N05
Atmospheric Pressure	7891
Density Meter Factor	7N44
Totalizer Digits	3098
Linear Meter Factor	5N13
Flow Computer ID	4836
Live Temperature	13002
Temperature Compensated	3N14
Meter Serial Number	4N11
K Factor	7N40

Firmware Revision 21.xx

Attribute	Description
Meter ID	4N14
Liquid Product Name	4N05
Atmospheric Pressure	7891
Density Meter Factor	7N44
Totalizer Digits	3098
Linear Meter Factor	5N13
Flow Computer ID	4836
Live Temperature	13002
Static Pressure Tap Location	3N10
Meter Tap Type	3N12
Pipe Diameter	7N39
Pipe Reference Temperature	7N47
Temp Low Alarm Set Point	7N63
Temp High Alarm Set Point	7N64
Differential Pressure Low Alarm Set Point	7N52
Differential Pressure High Alarm Set Point	7N53
Static Pressure Low Alarm Set Point	7N68
Static Pressure High Alarm Set Point	7N69


EFM History Mapping

The History dialog is used to assign each float to an EFM attribute using the float's unique index. History data pulled from the device is in record form, with each record containing an array of data points. Each data point has a unique index or position in the array. The valid range is 0 to 31. For model-specific information, select a link from the list below.

- [EFM History Mapping - Gas Models](#)
- [EFM History Mapping - Liquid Models](#)

EFM History Mapping - Gas Models

The EFM History Mapping dialog for gas models contains two tabs: Hourly History and Daily History.

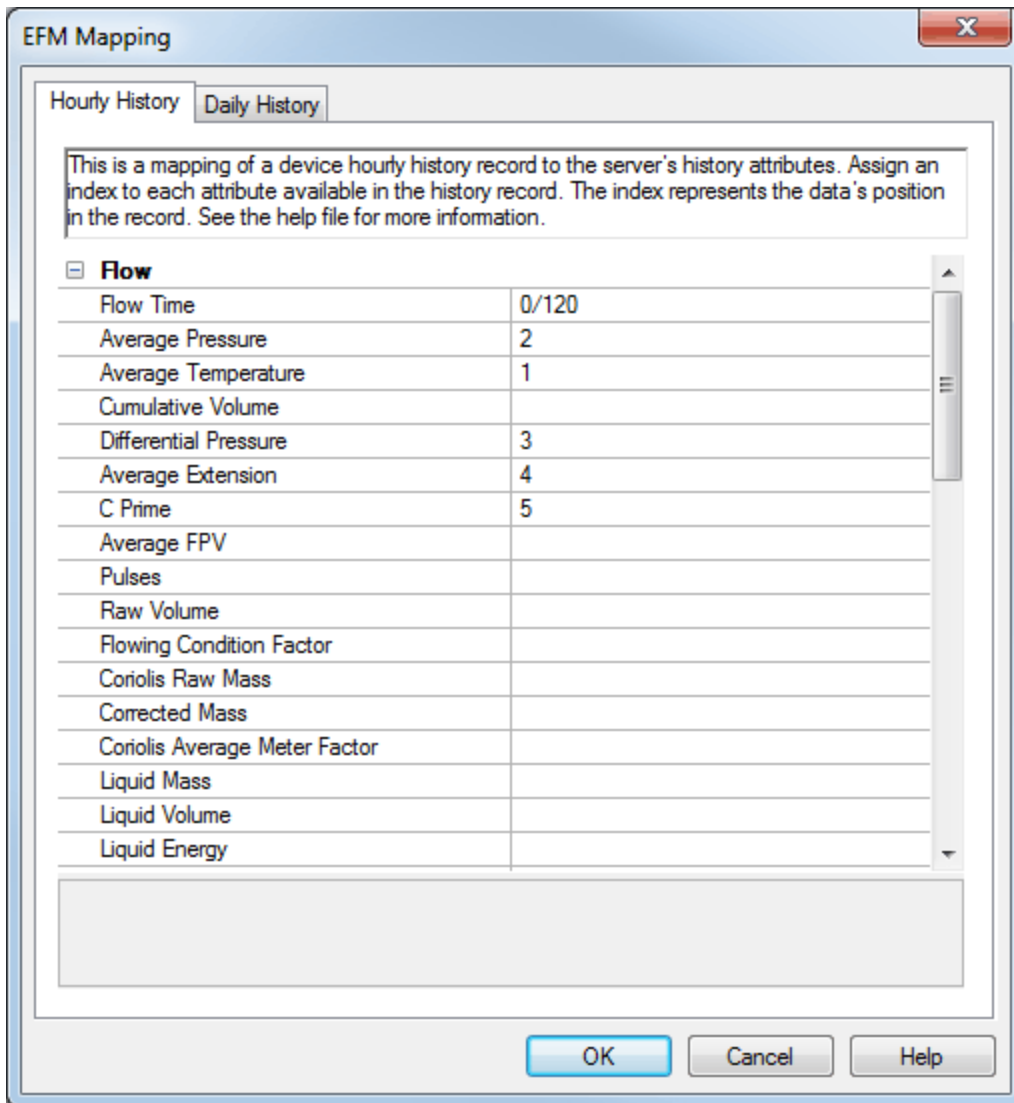

Descriptions of the tabs are as follows:

- **Hourly History:** The indices assigned to the attributes in this tab will apply to the Hourly History Archive in all configured meters. It will be used when parsing records that are read from a meter's hourly archive.
- **Daily History:** The indices assigned to the attributes in this tab will apply to the Daily History Archive in all configured meters. It will be used when parsing records that are read from a meter's daily archive.

History Syntax

A History Index uses the following syntax: N or $S<N>$ where:

- **N:** This index in the record associates with an attribute. The valid range is 0 to 31.
- **S:** This optional index indicates that the element comes from the Shared Archive configured in the EFM Meters dialog.

Note: GC data is typically from a shared archive, and will not be requested from the device when S indices are not used.

Static values use the following syntax: $!<static>$ where:

- **!:** This character indicates that the subsequent entry is static for the associated attribute.
- **static:** Static values are always considered floats.

Scale factors use the following syntax: $N/<scale\ factor>$ or $S<N>/<scale\ factor>$ where:

- /: This character indicates that the subsequent entry is a scale factor for the associated attribute. The value read from the device will be divided by the scale factor before it is passed to the EFM Exporter.
- **scale factor:** Scale factors are always considered floats.

Note: Scale factors cannot be used with the static syntax or non-numeric attributes.

Examples

1. A meter attribute with scale factor could be "0/120".
2. A shared attribute with scale factor could be "S0/3.5".
3. A static attribute with no scale factor allowed could be "!128".

See Also: [EFM Meters](#)

Meter History Attributes & Mappings

The tables below list all the attributes available in the History Mapping, and includes their name, CSV name, data type, and description. Attributes that are left blank will be ignored.

Flow

Attribute	CSV Name	Data Type	Description
Flow Time	flow_time	Float	Flow time for this record in minutes.*
Average Pressure	avg_pressure	Float	Average pressure.**
Average Temperature	avg_temp	Float	Average temperature over the flow time. Fahrenheit for English and Celsius for Metric.
Cumulative Volume	cumulative_volume	Float	Volume added during this interval for orifice and turbine meters. Units are controlled by the Volume Units in the Configuration Mapping.
Differential Pressure	diff_pressure	Float	Average differential pressure for orifice meters.**
Average Extension	avg_extension	Float	Average extension for orifice meters.**
C Prime	c_prime	Float	Orifice flow constant.
Average FPV	avg_fpv	Float	Average Super Compressibility Factor.
Pulses	pulses	Float	Pulses for turbine meters.
Raw Volume	raw_volume	Float	Raw volume for turbine meters. Units are controlled by the Volume Units in the Configuration Mapping.
Flowing Condition Factor	flowing_condition_factor	Float	Flowing Condition Factor for turbine meters.
Coriolis Raw Mass	coriolis_raw_mass	Float	Raw mass for coriolis meters. Units are pounds for English and KG for Raw Mass.
Corrected Mass	corrected_mass	Float	Corrected mass for coriolis meters. Units are pounds for English and KG for Metric.
Coriolis Average Meter Factor	coriolis_avg_meter_factor	Float	Average meter factor for coriolis meters.
Liquid Mass	liquid_mass	Float	Mass for liquid meters. Units are pounds for English and KG for Metric.
Liquid Volume	liquid_volume	Float	Volume for liquid meters. Units are controlled by the Volume Units in the Configuration Mapping.
Liquid Energy	liquid_energy	Float	Energy for liquid meters.

			Units are BTU/cubic foot for English and MJ/cubic meter for Metric.
Total Volume	total_volume	Float	Total volume. Units are controlled by the Volume Units in the Configuration Mapping.
Total Energy	total_energy	Float	Total energy. Units are BTU/cubic foot for English and MJ/cubic meter for Metric.

*The Flow Time resolution in the Omni device is measured in half seconds. The driver will round the Flow Time value down to the nearest second.


**Inches of Water for English and Kilopascals for Metric.

Gas Composition (Mole%)

Attribute	CSV Name	Data Type	Description
Average BTU	avg_btu	Float	Average heating value. Units are Dekatherms for English and Gigajoules for Metric.
Average Specific Gravity	avg_specific_gravity	Float	Average specific gravity.
Average CO2	avg_co2	Float	%
Average N2	avg_n2	Float	%
Average C1	avg_c1	Float	%
Average C2	avg_c2	Float	%
Average C3	avg_c3	Float	%
Average ISOC4	avg_isoc4	Float	%
Average NC4	avg_nc4	Float	%
Average ISOC5	avg_isoc5	Float	%
Average NC5	avg_nc5	Float	%
Average NEOC5	avg_neoc5	Float	%
Average C6	avg_c6	Float	%
Average C7	avg_c7	Float	%
Average C8	avg_c8	Float	%
Average C9	avg_c9	Float	%
Average C10	avg_c10	Float	%
Average O2	avg_o2	Float	%
Average H2O	avg_h2o	Float	%
Average H2S	avg_h2s	Float	%
Average HE	avg_he	Float	%
Average H2	avg_h2	Float	%
Average CO	avg_co	Float	%
Average AR	avg_ar	Float	%
Specific Heat Ratio	specific_heat_ratio	Float	Ratio of specific heat.
Viscosity	viscosity	Float	Viscosity. Units of Pounds/Mass per Foot/Second for English and Centipoises for Metric.

EFM History Mapping - Liquid Models

The EFM History Mapping dialog for liquid models contains three tabs: Hourly History, Daily History, and Batch.

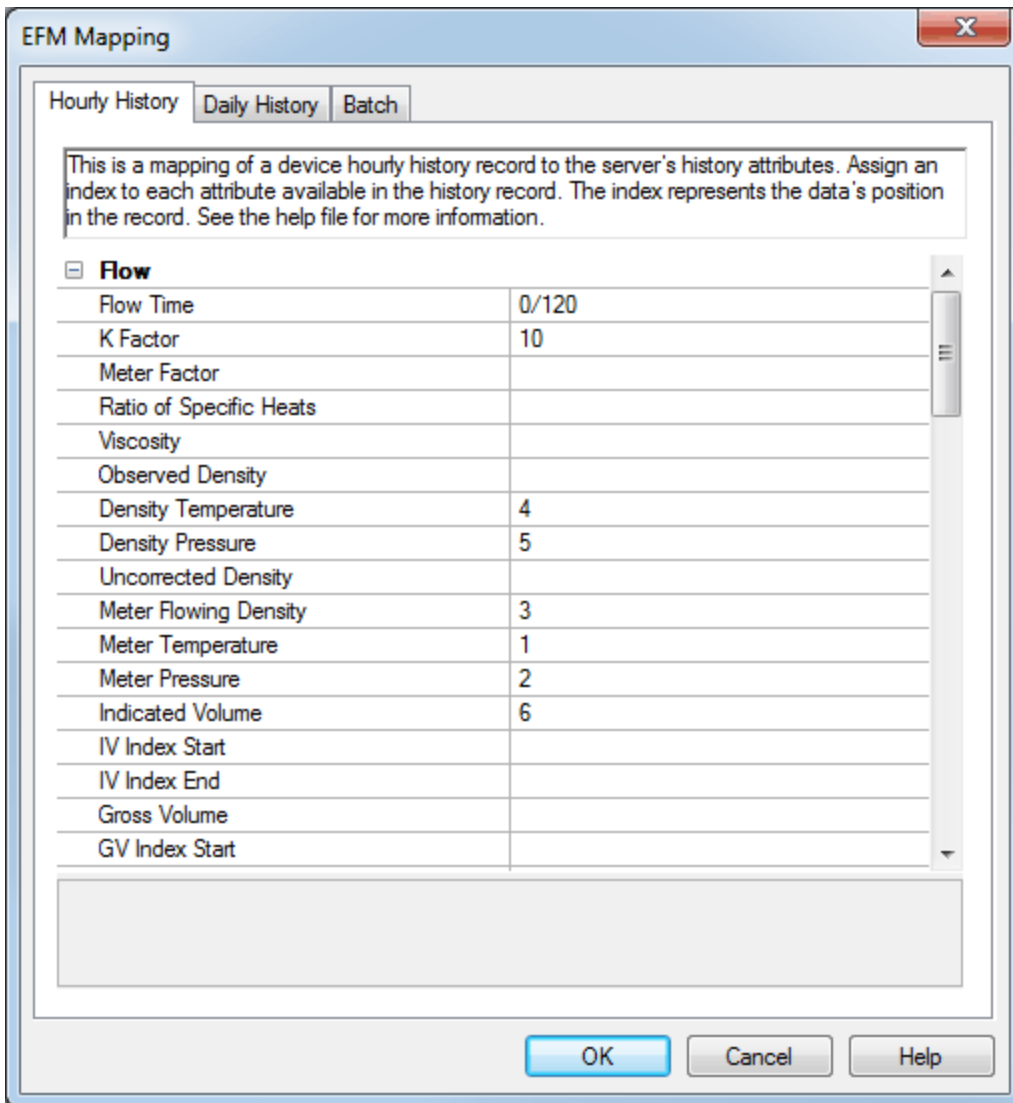

Descriptions of the tabs are as follows:

- **Hourly History:** The indices assigned to the attributes in this tab will apply to the Hourly History Archive in all configured meters. It is used when parsing records that are read from a meter's hourly archive.
- **Daily History:** The indices assigned to the attributes in this tab will apply to the Daily History Archive in all configured meters. It is used when parsing records that are read from a meter's daily archive.
- **Batch:** The indices assigned to the attributes in this tab will apply to the Batch Archive in all configured meters. It is used when parsing records that are read from a meter's batch archive. This tab is only available to liquid models.

Note: For more information on the hourly, daily, and batch archives, refer to [EFM Meters](#).

History Syntax

A History Index uses the following syntax: N or $S<N>$ where:

- **N:** This index in the record associates with an attribute. The valid range is 0 to 31.
- **S:** This optional index indicates that the element comes from the Shared Archive configured in the EFM Meters dialog.

Note: GC data is typically from a shared archive, and will not be requested from the device when S indices are not used.

Static values use the following syntax: $!<static>$ where:

- **!**: This character indicates that the subsequent entry is static for the associated attribute.
- **static**: Static values are always considered floats.

Scale factors use the following syntax: $N/<scale\ factor>$ or $S<N>/<scale\ factor>$ where:

- **/**: This character indicates that the subsequent entry is a scale factor for the associated attribute. The value read from the device will be divided by the scale factor before it is passed to the EFM Exporter.
- **scale factor**: Scale factors are always considered floats.

Note: Scale factors cannot be used with the static syntax, Batch Start attribute X:Y syntax, or non-numeric attributes.

Examples

1. A meter attribute with scale factor could be "0/120".
2. A shared attribute with scale factor could be "S0/3.5".
3. A static attribute with no scale factor allowed could be "!128".

Important: The Batch Start attribute has different syntax than the other attributes. Its syntax is X:Y, where X is the first index in the record that associates with Batch Start attribute and Y is the number of record indices that the driver will use (starting with the value X) when setting the Batch Start attribute. For example, the Batch Start attribute contains the date and time that the batch was started. The OMNI device stores that data in two different addresses that are read, concatenated, and then stored in the attribute. The default value is 0:2, which means that Index 0 must contain the batch start date and Index 1 must contain the batch start time. The Batch Start attribute always requires two registers, so the only Y value allowed is 2. The Batch Start attribute's index notation does not allow the static and shared options described above.

See Also: [EFM Meters](#)

Meter History Attributes & Mappings for Hourly History and Daily History

The table below lists all the attributes available in the History Mapping, and includes their name, CSV name, data type, and description. Attributes that are left blank will be ignored.

Flow

Attribute	CSV Name	Data Type	Description
Flow Time	flow_time	Integer	Flow time for this record in minutes.*
K Factor	k_factor	Float	Average K factor over the flow time.**
Meter Factor (MF)	meter_factor	Float	Average meter factor over the flow time.
Specific Heat Ratio	ratio_of_specific_heats	Float	Ratio of specific heat.
Viscosity	viscosity	Float	Viscosity.**
Observed Density	liquid_observed_density	Float	Hydrometer reading.**
Density Temperature	liquid_density_temperature	Float	Density temperature.**
Density Pressure	liquid_density_pressure	Float	Density pressure.**
Uncorrected Density	liquid_uncorrected_density	Float	Uncorrected densitometer result.
Meter Flowing Density	liquid_meter_flow_density	Float	Meter flowing density.**
Meter Temperature	liquid_meter_temperature	Float	Meter temperature.**
Meter Pressure	liquid_meter_pressure	Float	Meter pressure.**
Indicated Volume (IV)	liquid_indicated_volume	Float	Indicated volume.**
IV Index Start	liquid_iv_index_start	Float	IV index start.
IV Index End	liquid_iv_index_end	Float	IV index end.
Gross Volume (GV)	liquid_gross_volume	Float	Gross volume.**
GV Index Start	liquid_gv_index_start	Float	GV index start.
GV Index End	liquid_gv_index_end	Float	GV index end.
Gross Standard Volume (GSV)	liquid_gross_standard_volume	Float	Gross standard volume.**
GSV Index Start	liquid_gsv_index_start	Float	GSV index start.

GSV Index End	liquid_gsv_index_end	Float	GSV index end.
Mass	liquid_mass	Float	Mass.**
Mass Index Start	liquid_mass_index_start	Float	Mass index start.
Mass Index End	liquid_mass_index_end	Float	Mass index end.
Net Standard Volume (NSV)	liquid_net_standard_volume	Float	Net standard volume.**
NSV Index Start	liquid_nsv_index_start	Float	NSV index start.
NSV Index End	liquid_nsv_index_end	Float	NSV index end.
S&W Volume	liquid_sw_volume	Float	Sediment and water volume.
S&W Index Start	liquid_sw_index_start	Float	Sediment and water index start.
S&W Index End	liquid_sw_index_end	Float	Sediment and water index end.
S&W Percent	liquid_sw_percent	Float	Sediment and water percent.
S&W Correction	liquid_sw_correction	Float	Sediment and water correction.
Pulses	liquid_pulses	Float	Pulses for turbine meters.
Pulse Index Start	liquid_pulse_index_start	Float	Pulse index start.
Pulse Index End	liquid_pulse_index_end	Float	Pulse index end.
Orifice Differential	liquid_orifice_differential	Float	Orifice differential.
Orifice Extension	liquid_orifice_extension	Float	Orifice extension.
Orifice C Prime	liquid_orifice_c_prime	Float	Orifice flow constant.
Gas Equivalent Volume	liquid_gas_equivalent_volume	Float	Gas equivalent volume.**
Gas Equivalent Energy	liquid_gas_equivalent_energy	Float	Gas equivalent energy.**
Densitometer Factor	liquid_densitometer_factor	Float	Average densitometer factor over the flow time.
Equilibrium Vapor Pressure	liquid_equilibrium_vapor_pressure	Float	Equilibrium vapor pressure.
CTL	ctl	Float	Correction for the effect of temperature on a liquid.
CPL	cpl	Float	Correction for the effect of pressure on a liquid.
CTPL	ctpl	Float	Correction for the temperature and pressure of a liquid.
CCF	ccf	Float	Combined correction factor equals MF * CTL * CPL.

*The Flow Time resolution in the Omni device is measured in half seconds. The driver will round the Flow Time value down to the nearest second.

**Units depend on the Firmware revision.

Liquid Composition (Mole%)

Attribute	CSV Name	Data Type	Description
Average CO2	co2	Float	Mole %
Average N2	n2	Float	Mole %
Average C1	c1	Float	Mole %
Average C2	c2	Float	Mole %
Average C3	c3	Float	Mole %
Average ISOC4	ic4	Float	Mole %
Average NC4	nc4	Float	Mole %
Average ISOC5	ic5	Float	Mole %
Average NC5	nc5	Float	Mole %
Average NEOC5	neoc5	Float	Mole %
Average C6	c6	Float	Mole %
Average C7	c7	Float	Mole %
Average C8	c8	Float	Mole %
Average C9	c9	Float	Mole %
Average C10	c10	Float	Mole %

Average O2	o2	Float	Mole %
Average H2O	h2o	Float	Mole %
Average H2S	h2s	Float	Mole %
Average HE	he	Float	Mole %
Average H2	h2	Float	Mole %
Average CO	co	Float	Mole %
Average AR	ar	Float	Mole %
Average Ethylene	ethylene	Float	Mole %
Average Propylene	propylene	Float	Mole %

Meter History Attributes & Mappings for Batch History

Flow

Attribute	CSV Name	Data Type	Description
Batch Start	when_start	Integer	Start time of the batch.
Batch Type	batch_type	Integer	Type of batch. Options include Unknown, Normal, Maintenance, and Unauthorized.
Batch ID	batch_id	String	Batch ID.
Report Number	report_number	Integer	Batch report number.
MF is in GSV	mf_in_gsv	Char	Meter factor is in the gross standard volume calculation.
Observed Density	observed_density	Float	Hydrometer reading or corrected densitometer result.
Density Temperature	density_temp	Float	Density temperature.*
Density Pressure	density_pressure	Float	Density pressure.*
Density Correction Factor	dcf	Float	This is also known as the Pyc factor or Density Meter Factor (DMF).
Uncorrected Density	uncorrected_density	Float	Uncorrected densitometer result.
Meter Flowing Density	meter_flowing_density	Float	Meter flowing density.*
Meter Temperature	meter_temp	Float	Meter temperature.*
Meter Pressure	meter_pressure	Float	Meter pressure.*
Meter Factor	meter_factor	Float	Average meter factor for the batch.
K Factor	k_factor	Float	Average K factor for the batch.*
Equilibrium Vapor Pressure	evp	Float	Equilibrium vapor pressure.
CTL	ctl	Float	Correction for the effect of temperature on a liquid.
CPL	cpl	Float	Correction for the effect of pressure on a liquid.
CTPL	ctpl	Float	Correction for the temperature and pressure of a liquid.
CCF	ccf	Float	Combined correction factor equals MF * CTL * CPL.
Liquid Product Name	liquid_product_name	String	Product name for the batch.
Pulses	pulses	Float	Pulses for turbine meters.
Pulse Index Start	pulse_index_start	Float	Pulse index start.
Pulse Index End	pulse_index_end	Float	Pulse index end.
Orifice Differential	orifice_differential	Float	Orifice differential.
Orifice Extension	orifice_extension	Float	Orifice extension.
Orifice C Prime	orifice_c_prime	Float	Orifice flow constant.
Indicated Volume (IV)	iv	Float	Indicated volume.*
IV Index Start	iv_index_start	Float	IV index start.
IV Index End	iv_index_end	Float	IV index end.
Gross Volume (GV)	gv	Float	Gross volume.*
GV Index Start	gv_index_start	Float	GV index start.
GV Index End	gv_index_end	Float	GV index end.

Gross Standard Volume (GSV)	gsv	Float	Gross standard volume.*
GSV Index Start	gsv_index_start	Float	GSV index start.
GSV Index End	gsv_index_end	Float	GSV index end.
Net Standard Volume (NSV)	nsv	Float	Net standard volume.*
NSV Index Start	nsv_index_start	Float	NSV index start.
NSV Index End	nsv_index_end	Float	NSV index end.
S&W Volume	sw	Float	Sediment and water volume.
S&W Index Start	sw_index_start	Float	Sediment and water index start.
S&W Index End	sw_index_end	Float	Sediment and water index end.
S&W Percent	sw_percent	Float	Sediment and water percent.
S&W Correction	sw_correction	Float	Sediment and water correction.
Mass	mass	Float	Mass.*
Mass Index Start	mass_index_start	Float	Mass index start.
Mass Index End	mass_index_end,	Float	Mass index end.
Gas Equivalent Volume	gas_eq_volume	Float	Gas equivalent volume.*
Gas Equivalent Energy	gas_eq_energy	Float	Gas equivalent energy.*
Viscosity	viscosity	Float	Viscosity.*
Specific Heat Ratio	specific_heat_ratio	Float	Ratio of specific heat.

*Units depend on the Firmware revision.

Liquid Composition (Mole%)


Attribute	CSV Name	Data Type	Description
Average CO2	avg_co2	Float	Mole %
Average N2	avg_n2	Float	Mole %
Average C1	avg_c1	Float	Mole %
Average C2	avg_c2	Float	Mole %
Average C3	avg_c3	Float	Mole %
Average ISOC4	avg_isoc4	Float	Mole %
Average NC4	avg_nc4	Float	Mole %
Average ISOC5	avg_isoc5	Float	Mole %
Average NC5	avg_nc5	Float	Mole %
Average NEOC5	avg_neoc5	Float	Mole %
Average C6	avg_c6	Float	Mole %
Average C7	avg_c7	Float	Mole %
Average C8	avg_c8	Float	Mole %
Average C9	avg_c9	Float	Mole %
Average C10	avg_c10	Float	Mole %
Average Ethylene	ethylene	Float	Mole %
Average Propylene	propylene	Float	Mole %
Average H2	avg_h2	Float	Mole %
Average CO	avg_co	Float	Mole %
Average AR	avg_ar	Float	Mole %
Average O2	avg_o2	Float	Mole %
Average H2O	avg_h2o	Float	Mole %
Average H2S	avg_h2s	Float	Mole %
Average HE	avg_he	Float	Mole %

EFM Alarm Mapping

The Alarms dialog is used to assign alarms received from the device to specific meters, alarm types, and states. Alarms can apply to one or more meters depending on how the alarm address is specified.

Note: When an alarm is received from the device that does not match an address in the Alarm Mappings, the alarm will be logged as a user string alarm. It will be handled according to the "Non-Meter Alarms & Events" setting located in EFM Meters. Furthermore, meter-specific registers that do not contain a meter-specific *n* designation will be routed to that same setting. For more information, refer to [EFM Meters](#).

Important: The default EFM Alarm Mapping contains some differential pressure mappings that are specific to Firmware versions 21.xx, 23.xx, and 27.xx. Devices running a different Firmware version than those listed can remove these mappings from the configuration.

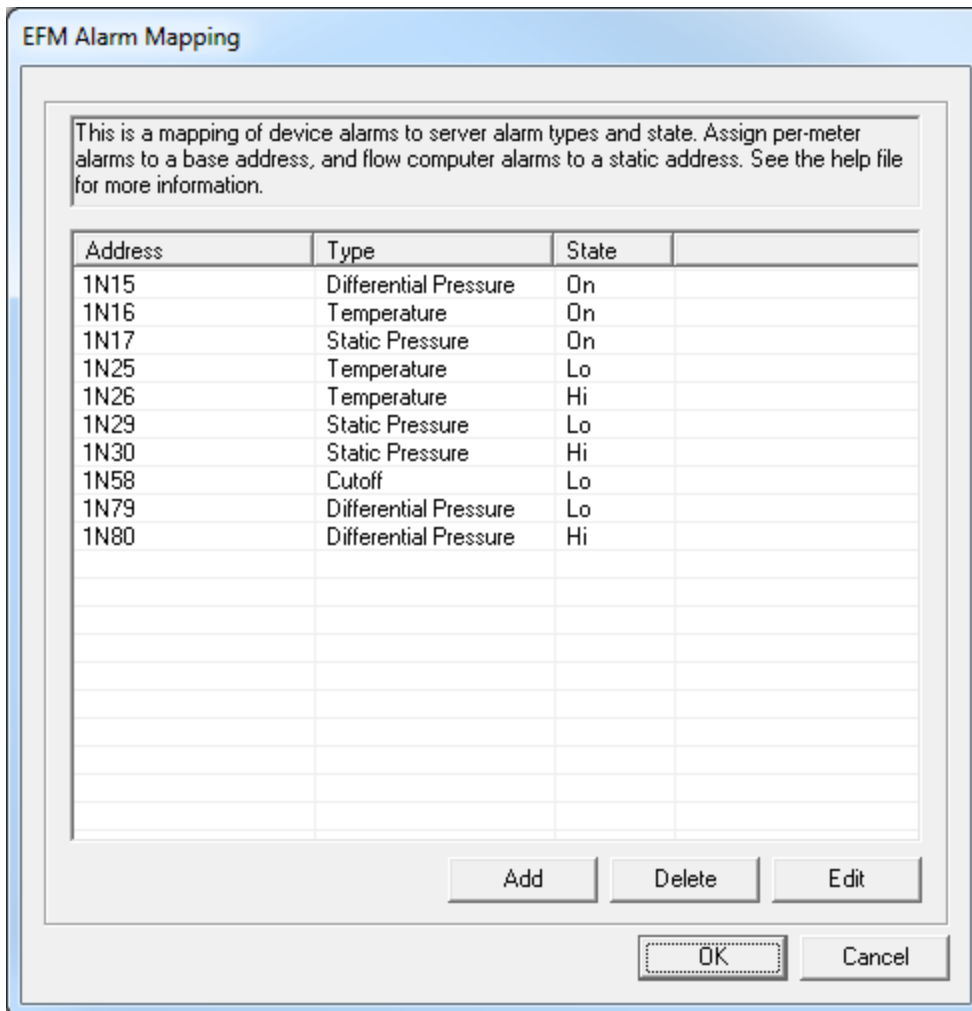

Descriptions of the parameters are as follows:

- **Address:** This parameter specifies the OMNI device address that generates the alarm. The default setting is blank.
- **Type:** This parameter specifies the type of alarm. The default setting is Differential Pressure. Options are as follows:
 - Differential Pressure
 - Static Pressure
 - Temperature
 - Cutoff
 - Backflow
 - Battery
- **State:** This parameter specifies the alarm state. The default setting is Off. Options are as follows:
 - Off
 - On

- Lo
- Hi
- **Add:** When clicked, this button launches a new Alarm dialog. For more information, refer to "Adding a New Alarm" below.
- **Delete:** When clicked, this button deletes the selected alarm from the mapping.
- **Edit:** When clicked, this button launches the Alarm dialog that contains the selected alarm's properties.

Alarm Syntax

An alarm address may use one of the following syntactic forms:


- **1N34:** This is a base address, and makes the alarm meter-specific. N will be replaced with the meter number.

Note: For example, an address is "1N34". An alarm received from device address "1034" will be assigned to Meter 1. An alarm received from device address "1134" will be assigned to Meter 2.

- **1234:** This is a static address, and makes the alarm non-meter specific. An alarm that is received from address 1234 will be sent to all meters.

Adding a New Alarm

1. To start, click **Add**.
2. Next, specify the new alarm's Address, Type, and State.

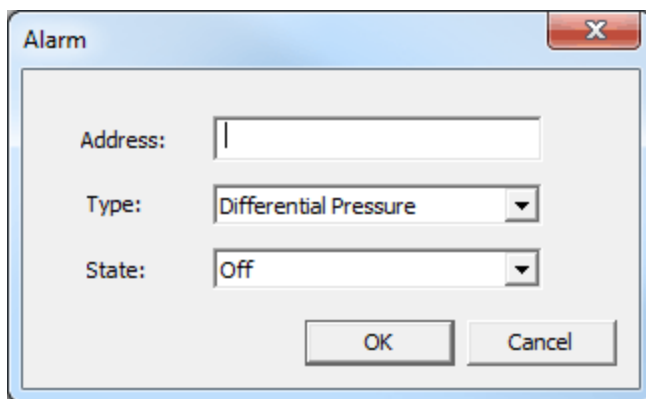

3. Once finished, click **OK**.

EFM Event Mapping

EFM Event Mappings are not user-configurable: they depend on the Configuration Mapping.

When an event is received from an address that matches an address in any Configuration Mapping, it will be converted to an audit event. For example, a Configuration Mapping with address "7N48" is set to Pipe Diameter. An event will be generated from address 7148 when the user changes the Pipe Diameter in the device for Meter 1. The event will be converted to an audit event for the Pipe Diameter field on Meter 1. Both the old and new values will be displayed.

When an event is received from an address that does not match an address in any Configuration Mapping, it will be considered a non-meter event. The event will be converted to a string event, and then handled as defined in the "Non-Meter Alarms & Events" setting located in the **EFM Meters** tab of **Device Properties**.

CSV Import/Export

The EFM Mappings support the import and export of data in a Comma Separated Variable (CSV) file. CSV import and export supports the efficient configuration of many devices. For more information on a specific aspect of CSV Import/Export, select a link from the list below.

[Creating a Template](#)

[Exporting EFM Mappings](#)

[Importing EFM Mappings](#)

Using Other Characters as the Delimiter

Creating a Template

The easiest way to create an import CSV file is to create a template. For more information, refer to the instructions below.

1. To start, create a new device using the default settings. Then, click **OK**.
2. Next, right-click on the device and select **Properties | EFM Mapping**. Then, click **Export**.
3. Save the file to an accessible location.
4. Use the exported template in a spreadsheet application that supports CSV files, and then modify the file as desired.

Note: Microsoft Excel is an excellent tool for editing large groups of tags outside the server. Once a template CSV file has been exported, it can be loaded directly into Excel for editing.

Exporting EFM Mappings

Exporting an EFM Mapping will generate a CSV text file that contains sections for History and Alarms. Each section has a heading record followed by a record for each item. Column names must match those listed; however, columns may be in any order.

Note: For Gas models, the CSV file will contain two sections for Hourly History and Daily History mapping data. For Liquid models, the CSV file will contain three sections for Hourly History, Daily History, and Batch History mapping data.

History Mapping

The table below displays the History Mapping for the Hourly History, Daily History, and Batch History mapping data. The required columns are listed in **bold**.

Column Name	Description
Attribute	This is the name of the History Mapping attribute. Attributes can be in any order. Attributes that are not included on an import will be left blank in the mapping. Note: All possible attribute names are listed in the History dialog. For more information, refer to EFM History Mapping .
Value	This is the address syntax for the attribute. It can be blank, static, or take the form <i>S<N></i> . For the Batch Start attribute available in liquid models, the syntax is <i>X:Y</i> . For more information, refer to EFM History Mapping - Liquid Models . Note: For information on each attribute's value limitations, refer to EFM History Mapping .

Alarm Mapping

The required columns are listed in **bold**.

Column Name	Description
Address	This is the address of the alarm. It can take the form <i>1N34</i> . For more information, refer to EFM Alarm Mapping .
Alarm Type	This is the type of the alarm. The default setting is Differential Pressure. The valid types are as follows: 1 = Differential Pressure 2 = Static Pressure 3 = Temperature 4 = Cutoff 5 = Backflow 6 = Battery
Alarm State	This is the state of the alarm. The default setting is Off. 1 = Off 2 = On 3 = Hi 4 = Lo

Importing EFM Mappings

Once the CSV file has been created and exported, it may be re-imported into an EFM Mapping. To do so, open **EFM Mapping** and then click **Import**.

Note: For History and Alarms, importing will replace all existing settings with the settings specified in the CSV file. When the import is complete, the configured mapping should match one for one with the file.

Using Other Characters as the Delimiter

When utilizing a CSV file that does not use a comma or semi-colon delimiter, users should do one of the following:

- Save the project in XML. Then, perform mass configuration on the XML file instead of using CSV.
- Perform a search-and-replace on the delimiter in the CSV file and then replace the delimiter with a comma or semicolon. The delimiter being used by the OPC server (either comma or semicolon) must be set to the replacement character.

Note: For information on specifying which character to use as the variable (comma or semicolon), refer to "Options - General" in the server help file.

EFM Cache

The OMNI Flow Computer Driver caches EFM data per device. During polls, the driver will only request new data from the device and then add it to its local cache. This minimizes communication between the physical device and the driver. The cache that is maintained by the driver will be cleared under the following scenarios:

1. The server is reinitialized, restarted, or a new project is loaded.
2. The channel or device is deleted.
3. The cache is cleared manually through the "Clear Cache" setting located in EFM Meters.
4. A meter's Archive Number changes.
5. The Max History Archive Size changes.

See Also: [EFM Meters](#)

Data Types Descriptions

Data Type	Description
Boolean	Single bit
Word	Unsigned 16 bit value bit 0 is the low bit bit 15 is the high bit
Short	Signed 16 bit value bit 0 is the low bit bit 14 is the high bit bit 15 is the sign bit
DWord	Unsigned 32 bit value bit 0 is the low bit bit 31 is the high bit
Long	Signed 32 bit value bit 0 is the low bit bit 30 is the high bit bit 31 is the sign bit
BCD	Two byte packed BCD Value range is 0-9999. Behavior is undefined for values beyond this range.
LBCD	Four byte packed BCD Value range is 0-99999999. Behavior is undefined for values beyond this range.
String	Null terminated ASCII string Supports 8 byte and 16 byte string data.
Float*	32 bit floating point value The driver interprets two consecutive registers as a single precision value by making the last register the high word and the first register the low word.
Float Example	If register 40001 is specified as a float, bit 0 of register 40001 would be bit 0 of the 32 bit data type and bit 15 of register 40002 would be bit 31 of the 32 bit data type.

Address Descriptions

The default data types are shown in **bold**.

Note: The address ranges provided in the tables below are not necessarily supported on all Firmware revisions.

Address	Range	Data Type	Access
Digital I/O Point	1001-1024	Boolean	Read/Wri-te
Programmable Boolean Point	1025-1088	Boolean	Read/Wri-te
Programmable Accumulator Points	1089-1099	Boolean	Read/Wri-te
Meter Run Status and Alarm Points	1n01-1n99 n = Number of Meter Run	Boolean	Read/Wri-te
User Scratch Pad Boolean Points	1501-1599 1601-1649	Boolean	Read/Wri-te
User Scratch Pad One Shot Points	1650-1699	Boolean	Read/Wri-te
Command Boolean Points/Variables	1700-1799	Boolean	Read/Wri-te
Meter Station Alarm and Status Points	1801-1899	Boolean	Read/Wri-te
Prover Alarm and Status Points	1901-2099	Boolean	Read/Wri-te
Meter Totalizer Roll-Over Flags	2n01-2n84 n = Number of Meter Run	Boolean	Read/Wri-te
Misc. Meter Station Alarm and Status	2601-2660	Boolean	Read/Wri-te
Miscellaneous Boolean Points	2701-2799	Boolean	Read/Wri-te
Station Totalizer Roll-over Flags	2801-2851	Boolean	Read/Wri-te
Station Totalizer Decimal Resolution Flags	2852-2862	Boolean	Read/Wri-te
Status Booleans Relating to Redundant Flow Computer Systems	2863-2864	Boolean	Read/Wri-te
Boolean Command Outputs and Status Points used for Meter Tube Switching	2877-2896	Boolean	Read/Wri-te

16 Bit Integer Data Addresses

These addresses support bit level access. For more information, refer to "Zero vs One Based Bit Addressing Within Registers" in [Data Access](#).

Address	Range	Data Type	Access
Custom Data Packet # 1	3001-3040	Short , Word, BCD	Read/Wri-te
Custom Data Packet # 2	3041-3056	Short , Word, BCD	Read/Wri-te
Custom Data Packet # 3	3057-3096	Short , Word, BCD	Read/Wri-te
Trapil function related data	3665-3699	Short , Word, BCD	Read/Wri-te
Misc. 16 bit Integer Data	3097-3099 3737-3799 3880-3899	Short , Word, BCD	Read/Wri-te
Meter Run 16 Bit Integer Data	3n01-3n99	Short , Word, BCD	Read/Wri-te

	n = Number of Meter Run		te
Scratch Pad 16 Bit Integer Data	3501-3599	Short , Word, BCD	Read/Wri-te
User Display #1	3601-3608	Short , Word, BCD	Read/Wri-te
User Display #2	3609-3616	Short , Word, BCD	Read/Wri-te
User Display #3	3617-3624	Short , Word, BCD	Read/Wri-te
User Display #4	3625-3632	Short , Word, BCD	Read/Wri-te
User Display #5	3633-3640	Short , Word, BCD	Read/Wri-te
User Display #6	3641-3648	Short , Word, BCD	Read/Wri-te
User Display #7	3649-3656	Short , Word, BCD	Read/Wri-te
User Display #8	3657-3664	Short , Word, BCD	Read/Wri-te
Access Raw Data Archive Records	3701-3736	Short , Word, BCD	Read/Wri-te
Honeywell Multivariable 16 Bit Integer Data	3753-3793	Short , Word, BCD	Read/Wri-te
Meter Station 16 Bit Integer Data	3800-3842	Short , Word, BCD	Read/Wri-te
Danalyzer Gas Chromatograph Data	3843-3864	Short , Word, BCD	Read/Wri-te
Flow Computer Time and Date Variables	3867-3879	Short , Word, BCD	Read/Wri-te
Prover 16 Bit Integer Data	3901-3944	Short , Word, BCD	Read/Wri-te

8 Character ASCII String Data

Address	Range	Data Type	Access
Meter Run ASCII Data	4n01-4n43 n = Number of Meter Run	String	Read/Wri-te
Scratch Pad ASCII Data	4501-4599	String	Read/Wri-te
User Display Definition Variables	4601-4640	String	Read/Wri-te
Station Auxiliary Input Variables	4707-4714	String	Read/Wri-te
Meter Station ASCII Data	4801-4850	String	Read/Wri-te
Prover ASCII String Data	4901-4999	String	Read/Wri-te

32 Bit Integer Data

These addresses support bit level access. For more information, refer to "Zero vs One Based Bit Addressing Within Registers" in [Data Access](#).

Address	Range	Data Type	Access
Meter Run 32 Bit Integer Data	5n01-5n99 n = Number of Meter Run	Long , DWord, LBCD, Float	Read/Wri-te

Scratch Pad 32 Bit Integer Data	5501-5599	Long , DWord, LBCD, Float	Read/Wri-te
Product 32 Bit integer data	5601-5799	Long , DWord, LBCD, Float	Read/Wri-te
Station 32 Bit Integer Data	5801-5891	Long , DWord, LBCD, Float	Read/Wri-te
Prover 32 Bit Integer Data	5901-5999	Long , DWord, LBCD, Float	Read/Wri-te
Meter Run Premium Level 32 Bit Integer Data	6n01-6n99	Long , DWord, LBCD, Float	Read/Wri-te
Station Premium Level 32 Bit Integer Data	6801-6855	Long , DWord, LBCD, Float	Read/Wri-te

32 Bit IEEE Floating Point Data

These addresses support bit level access. For more information, refer to "Zero vs One Based Bit Addressing Within Registers" in [Data Access](#).

Address	Range	Data Type	Access
Digital to Analog Outputs	7001-7024	Float , Long, DWord, LBCD	Read/Wri-te
User Variables	7025-7088	Float , Long, DWord, LBCD	Read/Wri-te
Programmable Accumulator	7089-7099	Float , Long, DWord, LBCD	Read/Wri-te
Meter Run Data	7n01 - 7n99 n = Number of Meter Run	Float , Long, DWord, LBCD	Read/Wri-te
Scratch Pad Data	7501-7599	Float , Long, DWord, LBCD	Read/Wri-te
PID Control Data	7601-7623	Float , Long, DWord, LBCD	Read/Wri-te
Miscellaneous Meter Run Data	7624-7699	Float , Long, DWord, LBCD	Read/Wri-te
Miscellaneous Variables	7701-7778	Float , Long, DWord, LBCD	Read/Wri-te
Meter Station Data	7801-7899	Float , Long, DWord, LBCD	Read/Wri-te
Prover Data	7901-8499	Float , Long, DWord, LBCD	Read/Wri-te
Miscellaneous Meter Run #1	8501-8599	Float , Long, DWord, LBCD	Read/Wri-te
Miscellaneous Meter Run #2	8601-8699	Float , Long, DWord, LBCD	Read/Wri-te
Miscellaneous Meter Run #3	8701-8799	Float , Long, DWord, LBCD	Read/Wri-te
Miscellaneous Meter Run #4	8801-8899	Float , Long, DWord, LBCD	Read/Wri-te
Station Previous Batch Average Data	8901-8999	Float , Long, DWord, LBCD	Read/Wri-te

16 Bit Integer Configuration Data

These addresses support bit level access. For more information, refer to "Zero vs One Based Bit Addressing Within Registers" in [Data Access](#).

Address	Range	Data Type	Access
Meter Run #1	13001-13013	Short , Word, BCD	Read/Wri-te
Meter Run #2	13014-13026	Short , Word, BCD	Read/Wri-te

Meter Run #3	13027-13039	Short , Word, BCD	Read/Wri- te
Meter Run #4	13040-13052	Short , Word, BCD	Read/Wri- te
Meter Run Configuration 16 Bit Integer Data	13053-13073 13300-13499	Short , Word, BCD	Read/Wri- te
General Flow Configuration	13074-13084	Short , Word, BCD	Read/Wri- te
Serial Port Configuration	13085-13128	Short , Word, BCD	Read/Wri- te
PID Configuration	13129-13160	Short , Word, BCD	Read/Wri- te
PLC Data	13161-13299	Short , Word, BCD	Read/Wri- te
Peer to Peer Setup	13300-13477	Short , Word, BCD	Read/Wri- te

16 Character ASCII String Data

Address	Range	Data Type	Access
Flow Computer Configuration	14001-14499	String	Read/Wri- te

32 Bit Integer Data

These addresses support bit level access. For more information, refer to "Zero vs One Based Bit Addressing Within Registers" in [Data Access](#).

Address	Range	Data Type	Access
Flow Computer Configuration	15001-16999	Long , DWord, LBCD, Float	Read/Wri- te

32 Bit IEEE Floating Point Data

These addresses support bit level access. For more information, refer to "Zero vs One Based Bit Addressing Within Registers" in [Data Access](#).

Address	Range	Data Type	Access
Flow Computer Configuration	17001-19999	Float , Long, DWord, LBCD	Read/Wri- te

Array Support

Arrays are supported for register locations for all data types except for strings. Arrays are also supported for input and output coils (Boolean data types). There are two methods of addressing an array. The following examples use register locations:

3xxx [rows] [cols]

3xxx [cols] this method assumes rows is equal to one.

For arrays, rows multiplied by cols cannot exceed the maximum number of registers or Booleans (depending on the data type) that can be read by the protocol in a single access.

Error Descriptions

The following error/warning messages may be generated. Click on the link for a description of the message.

Address Validation

[Address '<address>' is out of range for the specified device or register](#)

[Array size is out of range for address '<address>'](#)

[Array support is not available for the specified address: '<address>'](#)

[Data Type '<type>' is not valid for device address '<address>'](#)

[Device address '<address>' contains a syntax error](#)

[Device address '<address>' is not supported by model '<model name>'](#)

[Device address '<address>' is Read Only](#)

[Missing address](#)

[Received block length of '<received length>' does not match expected length of '<expected length>' for address '<address>' on device '<device>'](#)

Device Status Messages

[Device '<device name>' is not responding](#)

[Unable to write to address '<address>' on device '<device>': Device responded with exception code '<code>'](#)

[Unable to write to '<address>' on device '<device name>'](#)

[Write failed for '<tag name>' on device '<device name>'. Maximum path length of '<number>' characters exceeded](#)

OMNI Flow Computer Error Messages

['<device name>' - A starting address of '<address>' in the archive's record structure is invalid. May not receive data for address '<address>'](#)

['<device name>' - Alarm record parse for device failed](#)

['<device name>' - Archive '<archive number>' is not configured correctly for address '<address>'. Max number of records is zero](#)

['<device name>' - Archive record contains an invalid address. BOOL, 8-byte strings, and 16-byte strings are not supported](#)

['<device name>' - Archive record for address '<address>' contains an unexpected number of bytes. Expected '<number of bytes>' bytes, received '<number of bytes>' bytes](#)

['<device name>' - Config data attribute for meter tap location read from device address](#)

['<address>' is '<value>', and does not map to any valid meter tap locations. Expecting 0 for flange, or 1 for pipe. Defaulting to flange](#)

['<device name>' - Config data attribute for meter type read from device address '<address>' is '<value>', and does not map to any valid meter types. Expected values are 0, 2, or 3 for orifice, 1 for turbine, 4 or 8 for ultra sonic, and 5 for vcone. Defaulting to orifice](#)

['<device name>' - Config data attribute for static pressure tap read from device address](#)

['<address>' is '<value>', and does not map to any valid static pressure tap locations. Expecting 0 for up, or 1 for down. Defaulting to up](#)

['<device name>' - Config data attribute for static pressure unit read from device address](#)

['<address>' is '<value>', and does not map to a valid pressure unit. Expecting 0 for kPa, 1 for Bar, or 2 for kg/cm2. Defaulting to kPa](#)

['<device name>' - Config data attribute for totalizer digits read from the device address](#)

['<address>' is '<value>', and does not map to a valid number of totalizer digits. Expecting 0 for 9 digits, or 1 for 8 digits. Defaulting to 9 digits](#)

['<device name>' - Date format for address '<address>' is invalid. Device returned '<value>', valid values are 0 or 1](#)

['<device name>' - Device Firmware version '<Firmware version>' is not supported by the '<model name>' model](#)

['<device name>' - Device password write not successful. Value in response is different from the written value](#)

['<device name>' - Event record parse for device failed](#)

['<device name>' - Failed to read EFM pointer file. <Extended Error>](#)

['<device name>' - Failed to write EFM pointer file. <Extended Error>](#)

['<device name>' - Meter and shared archives are not in sync. Records will only contain flow data \(no analysis\)](#)

['<device name>' - Meter archive record parse failed](#)

['<device name>' - Read invalid Firmware version '<Firmware version>' from address '<address>', config upload complete](#)

'<device name>' - Shared '<archive type>' archive address is not configured, records will only contain flow data (no analysis)

'<device name>' - Shared archive record parse failed

'<device name>' - The <archive type> mapping contains more configured attributes than the device. Some attributes will not contain valid data

'<device name>' - The max alarm archive size was changed from '<previous size>' to '<current size>'

'<device name>' - The max event archive size was changed from '<previous size>' to '<current size>'

'<device name>' - Time sync write not successful. Value in response is different from the written value

'<device name>' - Unable to read '<number of registers>' registers in config register block at address '<address>'

'<device name>' - Unable to read date format register for address '<address>'. Response is not the correct size

'<device name>' - Unable to read index registers. Response is not the correct size

'<device name>' - Unable to read record format registers for address '<address>'. Response is not the correct size

'<device name>' - Unable to write requested record register for address '<address>'. Response is not the correct size

'<device name>' - Unable to write requested record register for address '<address>'. Wrote '<value>', read back '<value>'

Alarm mapping for address '<address>' is invalid and will be ignored

Alarm state for address '<address>' is invalid. Setting the state to <state>

Alarm type for address '<address>' is invalid. Setting the type to <type>

Bad address in block [<start address> to <end address>] on device '<device name>'

Bad array spanning [<address> to <address>] on device '<device>'

Device password invalid for device '<device name>'

Device password write for device '<device name>' was successful

History attribute '<attribute index>' is unknown and will be ignored

History mapping for attribute '<attribute name>' is invalid and will be ignored

Received "needs password" exception from device '<device name>' with 'fail after successive timeouts' set to 1. Set the 'fail after successive timeouts' setting to a value greater than 1 and verify that the 'device password' setting is correct

Serialization of EFM data to temporary file '<file name>' failed. Reason: '<file I/O error>'

The '<archive type>' archive number for meter '<meter name>' is already being used. XML project load not successful

The shared '<archive type>' archive number is already in use by another meter. XML project load not successful

Unable to read '<address>' from device '<device name>'. The device is configured for broadcast writes only

Unable to read block address [<start address> to '<end address>'] on device '<device name>'. Unexpected characters in response

Warning loading '<mapping type>' mapping from CSV. '<warning type>'

Serial Communications

Communications error on '<channel name>' [<error mask>]

COMn does not exist

COMn is in use by another application

Error opening COMn

Unable to set comm parameters on COMn

See Also: [Modbus Exception Codes](#)

Modbus Exception Codes

The following data is from Modbus Application Protocol Specifications documentation.

Code Dec/Hex	Name	Meaning
01/0x01	ILLEGAL FUNCTION	The function code received in the query is not an allowable action for the server (or slave). This may be because the function code is only applicable to newer devices, and was not implemented in the unit selected. It could also indicate that the server (or slave) is in the

		wrong state to process a request of this type, for example, because it is unconfigured and is being asked to return register values.
02/0x02	ILLEGAL DATA ADDRESS	The data address received in the query is not an allowable address for the server (or slave). More specifically, the combination of reference number and transfer length is invalid. For a controller with 100 registers, a request with offset 96 and length 4 would succeed. A request with offset 96 and length 5 will generate exception 02.
03/0x03	ILLEGAL DATA VALUE	A value contained in the query data field is not an allowable value for server (or slave). This indicates a fault in the structure of the remainder of a complex request, such as that the implied length is incorrect. It specifically does not mean that a data item submitted for storage in a register has a value outside the expectation of the application program, since the MODBUS protocol is unaware of the significance of any particular value of any particular register.
04/0x04	SLAVE DEVICE FAILURE	An unrecoverable error occurred while the server (or slave) was attempting to perform the requested action.
05/0x05	ACKNOWLEDGE	The slave has accepted the request and is processing it, but a long duration of time will be required to do so. This response is returned to prevent a timeout error from occurring in the master. The master can next issue a Poll Program Complete message to determine if processing is completed.
06/0x06	SLAVE DEVICE BUSY	The slave is engaged in processing a long-duration program command. The master should retransmit the message later when the slave is free.
07/0x07	NEGATIVE ACKNOWLEDGE	The slave cannot perform the program function received in the query. This code is returned for an unsuccessful programming request using function code 13 or 14 decimal. The master should request diagnostic or error information from the slave.
08/0x08	MEMORY PARITY ERROR	The slave attempted to read extended memory, but detected a parity error in the memory. The master can retry the request, but service may be required on the slave device.
10/0x0A	GATEWAY PATH UNAVAILABLE	Specialized use in conjunction with gateways indicates that the gateway was unable to allocate an internal communication path from the input port to the output port for processing the request. This usually means that the gateway is misconfigured or overloaded.
11/0x0B	GATEWAY TARGET DEVICE FAILED TO RESPOND	Specialized use in conjunction with gateways indicates that no response was obtained from the target device. This usually means that the device is not present on the network.

Note: For this driver, the terms Slave and Unsolicited are used interchangeably.

Address Validation

The following error/warning messages may be generated. Click on the link for a description of the message.

Address Validation

- [Address '<address>' is out of range for the specified device or register](#)
- [Array size is out of range for address '<address>'](#)
- [Array support is not available for the specified address: '<address>'](#)
- [Data Type '<type>' is not valid for device address '<address>'](#)
- [Device address '<address>' contains a syntax error](#)
- [Device address '<address>' is not supported by model '<model name>'](#)
- [Device address '<address>' is Read Only](#)
- [Missing address](#)
- [Received block length of '<received length>' does not match expected length of '<expected length>' for address '<address>' on device '<device>'](#)

Address '<address>' is out of range for the specified device or register

Error Type:

Warning

Possible Cause:

A tag address that has been specified statically references a location that is beyond the range of supported locations for the device.

Solution:

Verify that the address is correct; if it is not, re-enter it in the client application.

Array size is out of range for address '<address>'

Error Type:

Warning

Possible Cause:

A tag address that has been specified statically is requesting an array size that is too large for the address type or block size of the driver.

Solution:

Re-enter the address in the client application to specify a smaller value for the array or a different starting point.

Array support is not available for the specified address: '<address>'

Error Type:

Warning

Possible Cause:

A tag address that has been specified statically contains an array reference for an address type that doesn't support arrays.

Solution:

Re-enter the address in the client application to remove the array reference or correct the address type.

Data Type '<type>' is not valid for device address '<address>'

Error Type:

Warning

Possible Cause:

A tag address that has been specified statically has been assigned an invalid data type.

Solution:

Modify the requested data type in the client application.

Device address '<address>' contains a syntax error

Error Type:

Warning

Possible Cause:

A tag address that has been specified statically contains one or more invalid characters.

Solution:

Re-enter the address in the client application.

Device address '<address>' is not supported by model '<model name>'

Error Type:

Warning

Possible Cause:

A tag address that has been specified statically references a location that is valid for the communications protocol but not supported by the target device.

Solution:

Verify that the address is correct; if it is not, re-enter it in the client application. Also verify that the selected model name for the device is correct.

Device address '<address>' is Read Only

Error Type:

Warning

Possible Cause:

A tag address that has been specified statically has a requested access mode that is not compatible with what the device supports for that address.

Solution:

Change the access mode in the client application.

Missing address

Error Type:

Warning

Possible Cause:

A tag address that has been specified statically has no length.

Solution:

Re-enter the address in the client application.

Received block length of '<received length>' does not match expected length of '<expected length>' for address '<address>' on device '<device>'

Error Type:

Warning

Possible Cause:

The driver attempted to read a block of memory but the PLC did not provide the driver with the requested size of data. No error code was returned.

Solution:

N/A

Device Status Messages

The following error/warning messages may be generated. Click on the link for a description of the message.

Device Status Messages[Device '<device name>' is not responding](#)[Unable to write to address '<address>' on device '<device>': Device responded with exception code '<code>'](#)[Unable to write to '<address>' on device '<device name>'](#)[Write failed for '<tag name>' on device '<device name>'. Maximum path length of '<number>' characters exceeded](#)

Device '<device name>' is not responding

Error Type:

Serious

Possible Cause:

1. The serial connection between the device and the Host PC is broken.
2. The communications parameters for the serial connection are incorrect.
3. The named device may have been assigned an incorrect Network ID.
4. The response from the device took longer to receive than the amount of time specified in the "Request Timeout" device setting.

Solution:

1. Verify the cabling between the PC and the PLC device.
2. Verify the specified communications parameters match those of the device.
3. Verify the Network ID given to the named device matches that of the actual device.

4. Increase the Request Timeout setting so that the entire response can be handled.

Unable to write to '<address>' on device '<device name>'

Error Type:

Serious

Possible Cause:

1. The serial connection between the device and the Host PC is broken.
2. The communications parameters for the serial connection are incorrect.
3. The named device may have been assigned an incorrect Network ID.

Solution:

1. Verify the cabling between the PC and the PLC device.
2. Verify the specified communications parameters match those of the device.
3. Verify that the Network ID given to the named device matches that of the actual device.

Unable to write to address '<address>' on device '<device>': Device responded with exception code '<code>'

Error Type:

Warning

Possible Cause:

See [Modbus Exception Codes](#) for a description of the exception code.

Solution:

See [Modbus Exception Codes](#).

Write failed for '<tag name>' on device '<device name>'. Maximum path length of '<number>' exceeded

Error Type:

Warning

Possible Cause:

Path length is limited to the indicated number of characters.

Solution:

Devise a shorter path.

OMNI Flow Computer Specific Messages

The following error/warning messages may be generated. Click on the link for a description of the message.

OMNI Flow Computer Specific Messages

['<device name>' - A starting address of '<address>' in the archive's record structure is invalid. May not receive data for address '<address>'](#)

['<device name>' - Alarm record parse for device failed](#)

['<device name>' - Archive '<archive number>' is not configured correctly for address '<address>'. Max number of records is zero](#)

['<device name>' - Archive record contains an invalid address. BOOL, 8-byte strings, and 16-byte strings are not supported](#)

['<device name>' - Archive record for address '<address>' contains an unexpected number of bytes. Expected '<number of bytes>' bytes, received '<number of bytes>' bytes](#)

['<device name>' - Config data attribute for meter tap location read from device address '<address>' is '<value>', and does not map to any valid meter tap locations. Expecting 0 for flange, or 1 for pipe. Defaulting to flange](#)

['<device name>' - Config data attribute for meter type read from device address '<address>' is '<value>', and does not map to any valid meter types. Expected values are 0, 2, or 3 for orifice, 1 for turbine, 4 or 8 for ultra sonic, and 5 for vcone. Defaulting to orifice](#)

['<device name>' - Config data attribute for static pressure tap read from device address '<address>' is '<value>', and does not map to any valid static pressure tap locations. Expecting 0 for up, or 1 for down. Defaulting to up](#)

'<device name>' - Config data attribute for static pressure unit read from device address '<address>' is '<value>', and does not map to a valid pressure unit. Expecting 0 for kPa, 1 for Bar, or 2 for kg/cm2. Defaulting to kPa

'<device name>' - Config data attribute for totalizer digits read from the device address '<address>' is '<value>', and does not map to a valid number of totalizer digits. Expecting 0 for 9 digits, or 1 for 8 digits. Defaulting to 9 digits

'<device name>' - Date format for address '<address>' is invalid. Device returned '<value>', valid values are 0 or 1

'<device name>' - Device Firmware version '<Firmware version>' is not supported by the '<model name>' model

'<device name>' - Device password write not successful. Value in response is different from the written value

'<device name>' - Event record parse for device failed

'<device name>' - Failed to read EFM pointer file. <Extended Error>

'<device name>' - Failed to write EFM pointer file. <Extended Error>

'<device name>' - Meter and shared archives are not in sync. Records will only contain flow data (no analysis)

'<device name>' - Read invalid Firmware version '<Firmware version>' from address '<address>', config upload complete

'<device name>' - Meter archive record parse failed

'<device name>' - Shared '<archive type>' archive address is not configured, records will only contain flow data (no analysis)

'<device name>' - Shared archive record parse failed

'<device name>' - The <archive type> mapping contains more configured attributes than the device. Some attributes will not contain valid data

'<device name>' - The max alarm archive size was changed from '<previous size>' to '<current size>'

'<device name>' - The max event archive size was changed from '<previous size>' to '<current size>'

'<device name>' - Time sync write not successful. Value in response is different from the written value

'<device name>' - Unable to read '<number of registers>' registers in config register block at address '<address>'

'<device name>' - Unable to read date format register for address '<address>'. Response is not the correct size

'<device name>' - Unable to read index registers. Response is not the correct size

'<device name>' - Unable to read record format registers for address '<address>'. Response is not the correct size

'<device name>' - Unable to write requested record register for address '<address>'. Response is not the correct size

'<device name>' - Unable to write requested record register for address '<address>'. Wrote '<value>', read back '<value>'

Alarm mapping for address '<address>' is invalid and will be ignored

Alarm state for address '<address>' is invalid. Setting the state to <state>

Alarm type for address '<address>' is invalid. Setting the type to <type>

Bad address in block [<start address> to <end address>] on device '<device name>'

Bad array spanning [<address> to <address>] on device '<device>'

Device password invalid for device '<device name>'

Device password write for device '<device name>' was successful

History attribute '<attribute index>' is unknown and will be ignored

History mapping for attribute '<attribute name>' is invalid and will be ignored

Received "needs password" exception from device '<device name>' with 'fail after successive timeouts' set to 1. Set the 'fail after successive timeouts' setting to a value greater than 1 and verify that the 'device password' setting is correct

Serialization of EFM data to temporary file '<file name>' failed. Reason: '<file I/O error>'

The '<archive type>' archive number for meter '<meter name>' is already being used. XML project load not successful

The shared '<archive type>' archive number is already in use by another meter. XML project load not successful

Unable to read '<address>' from device '<device name>'. The device is configured for broadcast writes only

Unable to read block address [<start address> to '<end address>'] on device '<device name>'. Unexpected characters in response

Warning loading '<mapping type>' mapping from CSV. '<warning type>'**'<device name>' - A starting address of '<address>' in the archive's record structure is invalid. May not receive data for address '<address>'**

Error Type:

Warning

Possible Cause:

1. The Config Address parameter (located in the **EFM Meters** tab of **Device Properties**) is configured incorrectly.
2. The archive record structure's configuration is invalid.

Solution:

1. Verify that the Config Address parameter is configured using the base address of the raw data archive record structure section from the Omni memory map. If unsure of the value, use the Config Address's default value.
2. Verify that the record structure for the archive associated with the address in the message is valid.

'<device name>' - Alarm record parse for device failed

Error Type:

Warning

Possible Cause:

1. A failure occurred when parsing the alarm record for EFM attribute data.
2. The device's archive memory may have been cleared since the last upload.

Solution:

1. Ensure that the time and date have been set correctly.
2. Verify the cabling between the PC and the PLC device.
3. Verify that the specified communications parameters match those of the device.

'<device name>' - Archive '<archive number>' is not configured correctly for address '<address>'. Max number of records is zero

Error Type:

Warning

Possible Cause:

The meter's archive configuration is invalid.

Solution:

Verify that the configuration of the archive's group and max records are correct.

'<device name>' - Archive record contains an invalid address. BOOL, 8-byte strings, and 16-byte strings are not supported

Error Type:

Warning

Possible Cause:

The meter's archive group configuration is invalid.

Solution:

Ensure that the archive's group configuration does not contain any addresses that correspond to Boolean or String data.

'<device name>' - Archive record for address '<address>' contains an unexpected number of bytes. Expected '<number of bytes>' bytes, received '<number of bytes>' bytes

Error Type:

Warning

Possible Cause:

1. The Config Address parameter (located in the **EFM Meters** tab of **Device Properties**) is configured incorrectly.
2. The archive record structure's configuration is invalid.
3. The serial connection between the device and the Host PC is bad.
4. The communications parameters for the serial connection are incorrect.

Solution:

1. Verify that the Config Address parameter is configured using the base address of the raw data archive record structure section from the Omni memory map. If unsure of the value, use the Config Address's default value.
2. Verify that the record structure for the archive associated with the address in the message is valid.
3. Verify the cabling between the PC and the PLC device.
4. Verify that the specified communications parameters match those of the device.

'<device name>' - Config data attribute for meter tap location read from device address '<address>' is '<value>', and does not map to any valid meter tap locations. Expecting 0 for flange, or 1 for pipe. Defaulting to flange

Error Type:

Warning

Possible Cause:

The meter tap location register contains an invalid value.

Solution:

Set the value to one of the expected values from the error string.

'<device name>' - Config data attribute for meter type read from device address '<address>' is '<value>', and does not map to any valid meter types. Expected values are 0, 2, or 3 for orifice, 1 for turbine, 4 or 8 for ultra sonic, and 5 for vcone. Defaulting to orifice

Error Type:

Warning

Possible Cause:

The meter type register contains an invalid value.

Solution:

Set the value to one of the expected values from the error string.

'<device name>' - Config data attribute for static pressure tap read from device address '<address>' is '<value>', and does not map to any valid static pressure tap locations. Expecting 0 for up, or 1 for down. Defaulting to up

Error Type:

Warning

Possible Cause:

The static pressure tap location register contains an invalid value.

Solution:

Set the value to one of the expected values from the error string.

'<device name>' - Config data attribute for static pressure unit read from device address '<address>' is '<value>', and does not map to a valid pressure unit. Expecting 0 for kPa, 1 for Bar, or 2 for kg/cm2. Defaulting to kPa

Error Type:

Warning

Possible Cause:

The static pressure unit register contains an invalid value.

Solution:

Set the value to one of the expected values from the error string.

'<device name>' - Config data attribute for totalizer digits read from the device address '<address>' is '<value>', and does not map to a valid number of totalizer digits. Expecting 0 for 9 digits, or 1 for 8 digits. Defaulting to 9 digits

Error Type:

Warning

Possible Cause:

The totalizer digits register contains an invalid value.

Solution:

Set the value to one of the expected values from the error string.

'<device name>' - Date format for address '<address>' is invalid. Device returned '<value>', valid values are 0 or 1

Error Type:

Warning

Possible Cause:

The date format register contains an invalid value.

Solution:

Set the value to one of the expected values from the error string.

'<device name>' - Device Firmware version '<Firmware version>' is not supported by the '<model name>' model

Error Type:

Warning

Possible Cause:

The device is running a Firmware version that is not supported by the chosen model.

Solution:

Download one of the supported Firmware versions to the device or select the appropriate model.

'<device name>' - Device password write not successful. Value in response is different from the written value

Error Type:

Warning

Possible Cause:

1. The serial connection between the device and the Host PC is bad.
2. The communications parameters for the serial connection are incorrect.

Solution:

1. Verify the cabling between the PC and the PLC device.
2. Verify that the specified communications parameters match those of the device.

'<device name>' - Event record parse for device failed

Error Type:

Warning

Possible Cause:

1. A failure occurred when parsing the event record for EFM attribute data.
2. The device's archive memory may have been cleared since the last upload.

Solution:

1. Ensure that the time and date have been set correctly.
2. Verify the cabling between the PC and the PLC device.
3. Verify that the specified communications parameters match those of the device.

'<device name>' - Failed to read EFM pointer file. <Extended Error>

Error Type:

Warning

Extended Error:

When supplied by the operating system, this describes the file error that occurred.

Possible Cause:

1. A permission error was encountered when the EFM pointer cache was read.
2. The EFM pointer cache file is corrupt.

Solution:

The Omni Flow Computer Driver will automatically generate a new EFM pointer file; however, the server will re-poll (uploading all EFM data) during the next EFM poll for meters in the device.

Note:

For more information, refer to the extended error.

'<device name>' - Failed to write EFM pointer file. <Extended Error>

Error Type:

Warning

Extended Error:

When supplied by the operating system, this describes the file error that occurred.

Possible Cause:

1. The disk is full.
2. A permission error was encountered when the EFM pointer cache was written.

Solution:

The server will attempt to update the EFM pointer file periodically, in addition to when the server is shutdown. If the pointer file cannot be written, the server will re-poll (uploading all EFM data) during the next EFM poll for meters in the device.

Note:

For more information, refer to the extended error.

'<device name>' - Meter and shared archives are not in sync. Records will only contain flow data (no analysis)

Error Type:

Warning

Possible Cause:

1. The number of records in the meter and shared archives are not equal.
2. The timestamps of the records located at the same index are not equal.
3. Records that had not yet been uploaded by the server were overwritten in the device by newer ones.

Solution:

1. Ensure that the shared archive and all meter archives are configured to use the same trigger.
2. Ensure that the values in the Current Record Number registers for all meter archives and the shared archive are the same.
3. Increase the frequency of the meter's EFM poll to ensure that unconsumed records in the device will not be overwritten.

'<device name>' - Meter archive record parse failed

Error Type:

Warning

Possible Cause:

1. A failure occurred when parsing the meter history record for EFM attribute data.
2. The device's archive memory may have been cleared since the last upload.

Solution:

1. Verify that the meter's archive configuration is correct, and that it matches the History Mapping.
2. Ensure that the time and date have been set correctly.

'<device name>' - Read invalid Firmware version '<Firmware version>' from address '<address>', config upload complete

Error Type:

Warning

Possible Cause:

An unsupported Firmware version is installed on the device.

Solution:

Download one of the supported Firmware versions.

Note:

For a list of supported Firmware versions, refer to [Device Setup](#).

'<device name>' - Shared '<archive type>' archive address is not configured, records will only contain flow data (no analysis)

Error Type:

Warning

Possible Cause:

The shared hourly, daily, or batch archive number (located in the **EFM Meter Settings** tab of **Device Properties**) is set to zero.

Solution:

Configure the shared hourly, daily, or batch archive number with a value other than zero.

Note:

The batch archive number is only supported by OMNI Liquid Firmware models.

See Also:

[EFM Meters](#)

'<device name>' - Shared archive record parse failed

Error Type:

Warning

Possible Cause:

1. A failure occurred when parsing the shared data history record for EFM attribute data.
2. The device's archive memory may have been cleared since the last upload.

Solution:

1. Verify that the shared data archive's configuration is correct, and that it matches the Gas Quality mapping.
2. Ensure that the time and date have been set correctly.

'<device name>' - The <archive type> mapping contains more configured attributes than the device. Some attributes will not contain valid data

Error Type:

Warning

Possible Cause:

The number of registers configured in an archive's group configuration does not equal the number of attributes with a configured index in the hourly, daily, or batch mapping.

Solution:

Verify that the archive's group configuration matches the hourly, daily, or batch mapping configuration.

'<device name>' - The max alarm archive size was changed from '<previous size>' to '<current size>'

Error Type:

Warning

Possible Cause:

The size of the alarm archive in the device has been changed since the last alarm archive upload.

Solution:

Change the alarm archive size back to its default value for the Firmware version that is being used.

Note:

Data may be lost if the archive size is not set to the default value.

'<device name>' - The max event archive size was changed from '<previous size>' to '<current size>'

Error Type:

Warning

Possible Cause:

The size of the event archive in the device has been changed since the last event archive upload.

Solution:

Change the event archive size back to its default value for the Firmware version that is being used.

Note:

Data may be lost if the archive size is not set to the default value.

'<device name>' - Time sync write not successful. Value in response is different from the written value

Error Type:

Warning

Possible Cause:

1. The serial connection between the device and the Host PC is bad.
2. The communications parameters for the serial connection are incorrect.

Solution:

1. Verify the cabling between the PC and the PLC device.
2. Verify that the specified communications parameters match those of the device.

'<device name>' - Unable to read '<number of registers>' registers in config register block at address '<address>'

Error Type:

Warning

Possible Cause:

1. The serial connection between the device and the Host PC is bad.
2. The communications parameters for the serial connection are incorrect.

Solution:

1. Verify that the Firmware version running on the device is supported.
2. Verify the cabling between the PC and the PLC device.
3. Verify that the specified communications parameters match those of the device.

'<device name>' - Unable to read date format register for address '<address>'. Response is not the correct size

Error Type:

Warning

Possible Cause:

1. The serial connection between the device and the Host PC is bad.
2. The communications parameters for the serial connection are incorrect.

Solution:

1. Verify the cabling between the PC and the PLC device.
2. Verify that the specified communications parameters match those of the device.

'<device name>' - Unable to read index registers. Response is not the correct size

Error Type:

Warning

Possible Cause:

1. The serial connection between the device and the Host PC is bad.
2. The communications parameters for the serial connection are incorrect.

Solution:

1. Verify the cabling between the PC and the PLC device.
2. Verify that the specified communications parameters match those of the device.

'<device name>' - Unable to read record format registers for address '<address>'. Response is not the correct size

Error Type:

Warning

Possible Cause:

1. The serial connection between the device and the Host PC is bad.
2. The communications parameters for the serial connection are incorrect.

Solution:

1. Verify the cabling between the PC and the PLC device.
2. Verify that the specified communications parameters match those of the device.

'<device name>' - Unable to write requested record register for address '<address>'. Wrote '<value>', read back '<value>'

Error Type:

Warning

Possible Cause:

1. The serial connection between the device and the Host PC is bad.
2. The communications parameters for the serial connection are incorrect.

Solution:

1. Verify the cabling between the PC and the PLC device.
2. Verify that the specified communications parameters match those of the device.

'<device name>' - Unable to write requested record register for address '<address>'. Response is not the correct size

Error Type:

Warning

Possible Cause:

1. The serial connection between the device and the Host PC is bad.
2. The communications parameters for the serial connection are incorrect.

Solution:

1. Verify the cabling between the PC and the PLC device.
2. Verify that the specified communications parameters match those of the device.

Alarm mapping for address '<address>' is invalid and will be ignored

Error Type:

Warning

Possible Cause:

An invalid Alarm Mapping was imported from a CSV file or loaded from an XML project file.

Solution:

Correct the Alarm Mapping in the CSV import file or the XML project file.

See Also:

[EFM Alarm Mapping](#)

Alarm state for address '<address>' is invalid. Setting the state to <state>

Error Type:

Warning

Possible Cause:

An invalid Alarm Mapping was imported from a CSV file.

Solution:

Correct the Alarm Mapping in the CSV import file.

See Also:

[EFM Alarm Mapping](#)

Alarm type for address '<address>' is invalid. Setting the type to <type>

Error Type:

Warning

Possible Cause:

An invalid Alarm Mapping was imported from a CSV file.

Solution:

Correct the Alarm Mapping in the CSV import file.

See Also:

[EFM Alarm Mapping](#)

Bad address in block [<start address> to <end address>] on device '<device name>'

Error Type:

Serious

Possible Cause:

1. An attempt has been made to reference a nonexistent location in the specified device.
2. An attempt has been made to read more registers than allowed by the protocol.

Solution:

1. Verify the tags assigned to addresses in the specified range on the device and eliminate ones that reference invalid locations.

2. Decrease the register block size value to 125.

See Also:

[Framing & Error Handling](#)
[Block Sizes](#)

Bad array spanning [<address> to <address>] on device '<device>'

Error Type:

Serious

Possible Cause:

1. An attempt has been made to reference a nonexistent location in the specified device.
2. An attempt has been made to read more registers than allowed by the protocol.

Solution:

1. Verify that all the register addresses requested in the array exist in the device and reduce the array size such that only valid addresses (that exist in the device) are requested by the array.
2. Reduce the array size value to the number of addresses that can be read by the protocol in a single access. For example, set the value to 125 for 16 bit registers.

See Also:

[Framing & Error Handling](#)
[Block Sizes](#)

Device password invalid for device '<device name>'

Error Type:

Warning

Possible Cause:

The device responded with the "needs password" exception code, even though the configured password was written to the device.

Solution:

Ensure that the device password that is configured in the Data Access tab of Device Properties matches the password that is configured on the device.

Device password write for device '<device name>' was successful

Error Type:

Information

Possible Cause:

After receiving the "Device password invalid for device '<device name>'" error message, a valid password was written to the device.

Solution:

N/A.

Note:

This message is logged to indicate that the device's password requirements have been met.

See Also:

[Device password invalid for device '<device name>'](#)

History attribute '<attribute index>' is unknown and will be ignored

Error Type:

Warning

Possible Cause:

An invalid History Mapping was imported from a CSV file or loaded from an XML project file.

Solution:

Correct the History Mapping in the CSV import file or the XML project file.

See Also:

[EFM History Mapping](#)

History mapping for attribute '<attribute name>' is invalid and will be ignored

Error Type:

Warning

Possible Cause:

An invalid History Mapping was imported from a CSV file or loaded from an XML project file.

Solution:

Correct the History Mapping in the CSV import file or the XML project file.

See Also:

[EFM History Mapping](#)

Received "needs password" exception from device '<device name>' with 'fail after successive timeouts' set to 1. Set the 'fail after successive timeouts' setting to a value greater than 1 and verify that the 'device password' setting is correct

Error Type:

Warning

Possible Cause:

A password is required to access a register in the device, and the Fail After x Successive Timeouts setting is configured with a value of 1.

Solution:

To start, check the Device Password (located in the **Data Access** tab of **Device Properties**) and ensure that it is set correctly. Then, change the Fail After x Successive Timeouts setting (located in the **Timing** tab of **Device Properties**) to a value greater than 1.

See Also:

[Data Access](#)

Serialization of EFM data to temporary file '<file name>' failed. Reason: '<file I/O error>'

Error Type:

Warning

Possible Cause:

1. The driver was unable to create the specified file directory.
2. The driver was unable to access the specified file.

Solution:

1. Verify that the disk has sufficient disk space.
2. Verify user permissions for the specified file directory.

The '<archive type>' archive number for meter '<meter name>' is already being used. XML project load not successful

Error Type:

Warning

Possible Cause:

The archive number for the meter's hourly, daily, or batch archive is already being used by another meter.

Solution:

Change the archive number for the meter's hourly, daily, or batch archive to a value that is not already in use.

The shared '<archive type>' archive number is already in use by another meter. XML project load not successful

Error Type:

Warning

Possible Cause:

The archive number for the shared hourly, daily, or batch archive is already being used by another meter.

Solution:

Change the archive number for the shared hourly, daily, or batch archive to a value that is not already in use.

Unable to read '<address>' from device '<device name>'. The device is configured for broadcast writes only

Error Type:

Warning

Possible Cause:

The device is configured for broadcast writes only, and an EFM Poll was triggered. The Device ID is set to 0.

Solution:

1. Disable EFM polling for broadcast devices.
2. Do not use a Device ID of 0 for EFM-enabled devices.

Unable to read block address ['<start address>' to '<end address>'] on device '<device name>'. Unexpected characters in response

Error Type:

Warning

Possible Cause:

The calculated CRC did not match the CRC that was sent by the device.

Solution:

1. Verify the cabling between the PC and the PLC device.
2. Verify that the specified communications parameters match those of the device.

Warning loading '<mapping type>' mapping from CSV. '<warning type>'

Error Type:

Information

Possible Cause:

A new EFM mapping was imported from the CSV file.

Solution:

N/A.

Serial Communications

The following error/warning messages may be generated. Click on the link for a description of the message.

Serial Communications

[Communications error on '<channel name>' \[<error mask>\]](#)

[COMn does not exist](#)

[COMn is in use by another application](#)

[Error opening COMn](#)

[Unable to set comm parameters on COMn](#)

Communications error on '<channel name>' [<error mask>]

Error Type:

Serious

Error Mask Definitions:

B = Hardware break detected.

F = Framing error.

E = I/O error.

O = Character buffer overrun.

R = RX buffer overrun.

P = Received byte parity error.

T = TX buffer full.

Possible Cause:

1. The serial connection between the device and the Host PC is bad.
2. The communications parameters for the serial connection are incorrect.

Solution:

1. Verify the cabling between the PC and the PLC device.
2. Verify that the specified communications parameters match those of the device.

COMn does not exist

Error Type:

Fatal

Possible Cause:

The specified COM port is not present on the target computer.

Solution:

Verify that the proper COM port has been selected.

COMn is in use by another application

Error Type:

Fatal

Possible Cause:

The serial port assigned to a device is being used by another application.

Solution:

1. Verify that the correct port has been assigned to the channel.
2. Verify that only one copy of the current project is running.

Error opening COMn

Error Type:

Fatal

Possible Cause:

The specified COM port could not be opened due an internal hardware or software problem on the target computer.

Solution:

Verify that the COM port is functional and may be accessed by other Windows applications.

Unable to set comm parameters on COMn

Error Type:

Fatal

Possible Cause:

The serial parameters for the specified COM port are not valid.

Solution:

Verify the serial parameters and make any necessary changes.

Index

.

- '<device name>' - A starting address of '<address>' in the archive's record structure is invalid. May not receive data for address '<address>' 41
- '<device name>' - Alarm record parse for device failed 41
- '<device name>' - Archive '<archive number>' is not configured correctly for address '<address>'. Max number of records is zero 41
- '<device name>' - Archive record contains an invalid address. BOOL, 8-byte strings, and 16-byte strings are not supported 41
- '<device name>' - Archive record for address '<address>' contains an unexpected number of bytes. Expected '<number of bytes>' bytes, received '<number of bytes>' bytes 41
- '<device name>' - Config data attribute for meter tap location read from device address '<address>' is '<value>', and does not map to any valid meter tap locations. Expecting 0 for flange, or 1 for pipe. Defaulting to flange 42
- '<device name>' - Config data attribute for meter type read from device address '<address>' is '<value>', and does not map to any valid meter types. Expected values are 0, 2, or 3 for orifice, 1 for turbine, 4 or 8 for ultra sonic, and 5 for vcone. Defaulting to orifice 42
- '<device name>' - Config data attribute for static pressure tap read from device address '<address>' is '<value>', and does not map to any valid static pressure tap locations. Expecting 0 for up, or 1 for down. Defaulting to up 42
- '<device name>' - Config data attribute for static pressure unit read from device address '<address>' is '<value>', and does not map to a valid pressure unit. Expecting 0 for kPa, 1 for Bar, or 2 for kg/cm2. Defaulting to kPa 42
- '<device name>' - Config data attribute for totalizer digits read from the device address '<address>' is '<value>', and does not map to a valid number of totalizer digits. Expecting 0 for 9 digits, or 1 for 8 digits. Defaulting to 9 digits 43
- '<device name>' - Date format for address '<address>' is invalid. Device returned '<value>', valid values are 0 or 1 43
- '<device name>' - Device Firmware version '<Firmware version>' is not supported by the '<model name>' model 43
- '<device name>' - Device password write not successful. Value in response is different from the written value 43
- '<device name>' - Event record parse for device failed 43
- '<device name>' - Failed to read EFM pointer file. <Extended Error> 44
- '<device name>' - Failed to write EFM pointer file. <Extended Error> 44
- '<device name>' - Meter and shared archives are not in sync. Records will only contain flow data (no analysis) 44
- '<device name>' - Meter archive record parse failed 45
- '<device name>' - Read invalid Firmware version '<Firmware version>' from address '<address>', config upload complete 45
- '<device name>' - Shared '<archive type>' archive address is not configured, records will only contain flow data (no analysis) 45

- '<device name>' - Shared archive record parse failed 45
- '<device name>' - The <archive type> mapping contains more configured attributes than the device. Some attributes will not contain valid data 45
- '<device name>' - The max alarm archive size was changed from '<previous size>' to '<current size>' 46
- '<device name>' - The max event archive size was changed from '<previous size>' to '<current size>' 46
- '<device name>' - Time sync write not successful. Value in response is different from the written value 46
- '<device name>' - Unable to read '<number of registers>' registers in config register block at address '<address>' 46
- '<device name>' - Unable to read date format register for address '<address>'. Response is not the correct size 47
- '<device name>' - Unable to read index registers. Response is not the correct size 47
- '<device name>' - Unable to read record format registers for address '<address>'. Response is not the correct size 47
- '<device name>' - Unable to write requested record register for address '<address>'. Response is not the correct size 47
- '<device name>' - Unable to write requested record register for address '<address>'. Wrote '<value>', read back '<value>' 47

A

- Address '<address>' is out of range for the specified device or register 36
- Address Descriptions 30
- Address Validation 36
- Alarm mapping for address '<address>' is invalid and will be ignored 48
- Alarm state for address '<address>' is invalid. Setting the state to <state> 48
- Alarm type for address '<address>' is invalid. Setting the type to <type> 48
- Array size is out of range for address '<address>' 37
- Array support is not available for the specified address: '<address>' 37

B

- Bad address in block [<start address> to <end address>] on device '<device name>' 48
- Bad array spanning [<address> to <address>] on device '<device>' 49
- Block Sizes 8

C

Channel Setup 6

Communications error on '<channel name>' [<error mask>] 51

COMn does not exist 52

COMn is in use by another application 52

CSV Import/Export 26

D

Data Access 7

Data Type '<type>' is not valid for device address '<address>' 37

Data Types Descriptions 29

Device '<device name>' is not responding 38

Device address '<address>' contains a syntax error 37

Device address '<address>' is not supported by model '<model name>' 37

Device address '<address>' is Read Only 38

Device password invalid for device '<device name>' 49

Device password write for device '<device name>' was successful 49

Device Setup 7

Device Status Messages 38

E

EFM Alarm Mapping 24

EFM Cache 28

EFM Event Mapping 26

EFM History Mapping 16

EFM History Mapping - Gas Models 16

EFM History Mapping - Liquid Models 19

EFM Mapping 13

EFM Meters 10

Error Descriptions 34

Error opening COMn 52

F

Framing 52

Framing & Error Handling 9

H

Help Contents 5

History attribute '<attribute index>' is unknown and will be ignored 49

History mapping for attribute '<attribute name>' is invalid and will be ignored 50

M

Mask 51

Missing address 38

Modbus Exception Codes 35

O

OMNI Flow Computer Specific Messages 39

Overrun 52

Overview 5

P

Parity 52

R

Received 'needs password' exception from device '<device name>' with 'fail after successive timeouts' set to 1. Set the 'fail after successive timeouts' setting to a value greater than 1 and verify that the 'device password' setting is correct 50

Received block length of '<received length>' does not match expected length of '<expected length>' for address '<address>' 38

S

Serial Communications 51

Serialization of EFM data to temporary file '<file name>' failed. Reason: '<file I/O error>' 50

T

The '<archive type>' archive number for meter '<meter name>' is already being used. XML project load not successful 50

The shared '<archive type>' archive number is already in use by another meter. XML project load not successful 51

U

Unable to read '<address>' from device '<device name>'. The device is configured for broadcast writes only 51

Unable to read block address ['<start address>' to '<end address>'] on device '<device name>'. Unexpected characters in response 51

Unable to set comm parameters on COMn 52

Unable to write to '<address>' on device '<device name>' 39

Unable to write to address '<address>' on device '<device>': Device responded with exception code '<code>' 39

W

Warning loading '<mapping type>' mapping from CSV. '<warning type>' 51

Write failed for '<tag name>' on device '<device name>'. Maximum path length of '<number>' 39